

## Overview

The bella 2 Slice Slim Toaster is a compact kitchen appliance designed for toasting a variety of bread types. It features a single 10-inch long slot, a slim profile (3.58" deep), and multiple user controls for customized toasting.



## Features & Specifications


### Physical Design

- **Slim Profile:** Depth of 3.58 inches (9.1 cm) for space-saving placement.
- **Dimensions:** 14.88" W x 6.85" H x 3.58" D (37.8 x 17.4 x 9.1 cm).
- **Weight:** 2.46 lbs (1.12 kg).
- **Materials:** Exterior made from plastic and stainless steel with a matte finish.

- **Cord Wrap:** Integrated storage for the power cord to reduce countertop clutter.

## Toasting Components

- **Slot:** One extra-wide, 10-inch (25.4 cm) long slot. It can accommodate two standard slices of bread side-by-side or thicker artisan breads like bagels, sourdough, baguettes, and Texas toast.
- **High-Lift Lever:** Raises toast higher for easy retrieval, especially useful for smaller items like English muffins.
- **Auto-Centering Guides:** Help position bread for even toasting.

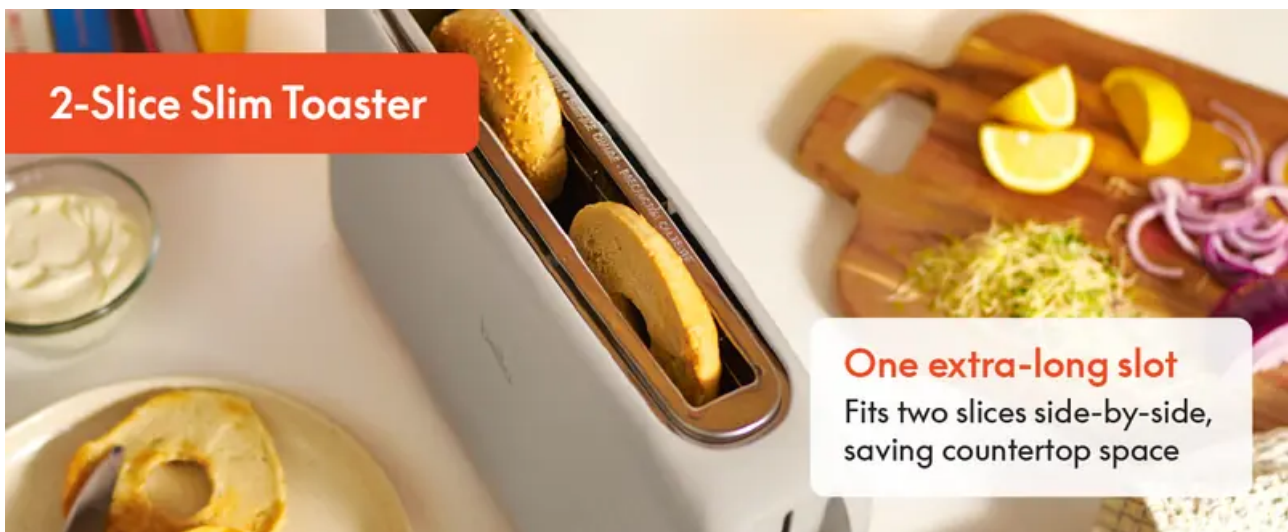

## Controls & Settings

- **Shade Control Dial:** Six browning settings (1-lightest to 6-darkest).
- **Reheat Button:** Warms toast without further browning.
- **Cancel Button:** Stops the toasting cycle immediately and raises the lever.



### Power & Safety

- **Wattage:** 900 Watts.
- **Auto Shutoff:** The toaster turns off automatically at the end of a cycle.
- **Anti-Jam Feature:** Designed to prevent bread from getting stuck.

### Maintenance

- **Removable Crumb Tray:** Slides out from the bottom for easy cleaning.



## Use Guide

### Before First Use

1. Remove all packaging materials.
2. Wipe the exterior with a damp cloth. Do not immerse the toaster in water.
3. Extend the power cord fully and plug the toaster into a standard 120V AC outlet.
4. Operate the toaster without bread on the highest setting (6) for one cycle to burn off any manufacturing residues. Ensure the area is well-ventilated.

### Basic Toasting

1. Place the toaster on a flat, stable, heat-resistant surface.
2. Insert bread slices into the slot. The auto-centering guides will help position them.
3. Turn the **Shade Control Dial** to your desired browning level (1-6).
4. Press the lever down firmly until it locks. The toasting cycle will begin.
5. When the cycle is complete, the lever will rise automatically. You may also press the **Cancel Button** at any time to stop toasting.
6. Use the high-lift function by pulling the lever up further to retrieve smaller items.

### Using the Reheat Function

To warm toast without making it darker:

1. Insert the toast into the slot.
2. Press the **Reheat Button**. The indicator may light up.
3. Press the lever down to start the cycle.

## Cleaning & Care

- **Always unplug the toaster and let it cool completely before cleaning.**
- Slide out the crumb tray at the bottom and empty it. Wash the tray with warm, soapy water if needed. Dry thoroughly before reinserting.
- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- To remove stubborn crumbs, turn the toaster upside down over a trash bin and gently shake it. Do not insert any utensils into the slot.
- Wrap the power cord around the built-in cord wraps on the underside or side of the toaster for storage.

## Safety Information

- This appliance is for household use only.
- Do not use the toaster near water or other liquids.
- Do not insert any objects, like forks or knives, into the toaster slots.
- Do not toast bread with extremely runny toppings (e.g., buttered bread before toasting) as it may cause fire or damage.
- Do not cover the toaster or operate it under cabinets, as it emits heat during use.
- Supervise children when the toaster is in use.
- The exterior surfaces may become hot during operation.
- Always unplug the toaster when not in use.

## Troubleshooting

- **Toaster doesn't turn on:** Check that it is plugged in securely. Ensure the outlet is functioning.
- **Toast is too light or too dark:** Adjust the Shade Control Dial. Lower numbers for lighter toast, higher numbers for darker.
- **Lever does not stay down:** Ensure the toaster is plugged in. The slot may be obstructed; unplug the toaster and check for foreign objects.
- **Uneven toasting:** Ensure bread is placed centrally in the slot. Try a different browning setting.
- **Smoke or unusual odor:** This may occur during first use. Ensure the crumb tray is clean. If it persists, unplug the toaster and contact support.

## Product Details

- **Brand:** BELLA
- **Model Number:** 35139-016A
- **UPC:** 829486351631
- **ASIN:** B0CZPGJ2JW
- **Included Component:** 1 Removable Crumb Tray

*Specifications are subject to change. Refer to the product label for the most accurate information.*

### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.