

Model: SZ-PS01 / SZ-PS07

1. Overview

The Seznik Portable Mini Sealing Machine is a handheld, battery-powered device designed to reseal plastic bags to maintain food freshness. It combines a heat sealer and a cutting blade in one compact unit.



Key Characteristics:

- **Design:** Handheld, portable, and lightweight (100 grams).
- **Function:** 2-in-1 heat sealer with integrated stainless steel cutter.
- **Power:** Rechargeable 400 mAh battery via USB Type-C cable.

- **Operation:** Automatic heating; no preheating required.
- **Magnetic Back:** Allows for convenient storage on metallic surfaces like refrigerators.

2. Package Contents

- 1 x Portable Rechargeable Sealer
- 1 x Type-C Charging USB Cable
- 1 x User Manual (this document)



3. Features and Specifications

3.1 Physical Specifications

Material	ABS Plastic
Dimensions (L x W x H)	9.9 x 3.3 x 4.1 cm
Weight	100 grams
Colour (as per model)	Dark Blue, Cyan Blue, Dark Green, Dark White, Pink, White

3.2 Technical Specifications

Power Source	Built-in Rechargeable Battery
Battery Capacity	400 mAh
Charging Port	USB Type-C
Charging Time	Approximately 2.5 hours for a full charge
Battery Life	Approximately 10-15 days under normal use
Operation Mode	Automatic

3.3 Functional Features

- **Dual-Function Head:** Contains the heating element for sealing and a built-in stainless steel blade for cutting open packages.
- **Fast Sealing:** Heats in approximately 1 second; creates a seal within 5 seconds.
- **Bag Compatibility:** Designed for plastic bags with a thickness of less than 0.3 mm. Works with chip bags, snack bags, vacuum food storage bags, mylar bags, and PVC bags.
- **Incompatible Materials:** Not suitable for cling wrap, cellophane bags, kraft paper bags, pure aluminium bags, or very thin food storage bags.



4. Use Guide

4.1 Charging the Device

1. Connect the provided USB Type-C cable to the charging port on the sealer.

2. Connect the other end of the cable to a standard USB power adapter (5V, 1A recommended) or a computer USB port.
3. The device does not have a charging indicator light. A full charge takes approximately 2.5 hours.
4. Once charged, disconnect the cable. The battery should last for 10-15 days with typical use.

4.2 Sealing a Bag

1. **Prepare the Bag:** Ensure the bag opening is clean, dry, and free of crumbs or grease. Flatten the opening.
2. **Position the Sealer:** Place the flattened bag opening into the sealing slot at the front of the device.
3. **Activate the Seal:** Press and hold the power button (typically an integrated switch on the body). The heating element will activate automatically.
4. **Sealing Process:** Gently pull the bag through the slot while holding the button. The process should take about 5 seconds to create a firm, airtight seal.
5. **Release and Cool:** Release the button and remove the bag. Allow the sealed area a few seconds to cool and set completely.



4.3 Using the Cutter

- The built-in stainless steel blade is located near the sealing slot.
- To open a sealed bag, gently slide the bag's edge against the blade in a controlled motion.
- Exercise caution to avoid cutting yourself or damaging the contents of the bag.

4.4 Power Saving & Storage

- Power off the device immediately after each use to conserve battery.
- Store the device in a cool, dry place.
- Utilize the magnetic back to attach it to a refrigerator or other metal surface for convenient access.

Warnings & Safety Instructions

- Do not use the sealer on bags containing liquids or excessive moisture.
- The heating element will be hot during and immediately after use. Do not touch the metal sealing strip.
- Keep the device away from water and other liquids.
- Do not use on flammable materials or near open flames.
- Keep out of reach of children. The blade is sharp.
- Use only with compatible plastic bags (thickness < 0.3mm). Using incompatible materials may damage the device or create a poor seal.
- Do not attempt to disassemble the device.

5. Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on/hear.	Battery is depleted.	Charge the device fully using the Type-C cable.
Seal is weak or does not form.	Bag material is incompatible or too thick (>0.3mm). Bag opening is dirty or wet. Insufficient heating time.	Use only compatible plastic bags. Clean and dry the bag opening thoroughly. Ensure you hold the button and pull the bag slowly for the full 5 seconds.
Device becomes very hot.	Extended continuous use.	Power off the device and allow it to cool down for a few minutes.
Blade does not cut effectively.	Blade may be dulled from use on improper materials.	Use only for cutting plastic film. The blade is not user-replaceable.

6. Warranty and Support

This product is covered by a **1-Year Limited Warranty** from the date of purchase as stated on your proof-of-purchase.

Manufacturer / Customer Care Contact:

- **Seznik Lifestyle PVT LTD, PUNE.**
- Customer Care: **+91 8237869618**
- Email: **support@seznik.in**

For warranty claims or support, please have your proof of purchase (invoice) ready.

Replacement Policy (via Amazon): A 10-day replacement period is offered for issues including physical damage, defective items, or wrong/missing items from delivery.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)