

1. Overview




The TAGRY X88 is a pair of wireless in-ear headphones designed for sports and active use. They feature an over-ear hook for stability, a built-in microphone for calls, and a portable charging case.

Key identifiers: Model X88, color Black.

2. What's in the Box

- TAGRY X88 Bluetooth Headphones (Left and Right Earbud)
- Charging Case
- Type-C Charging Cable
- Eartips (assorted sizes)
- User Manual

3. Features and Specifications

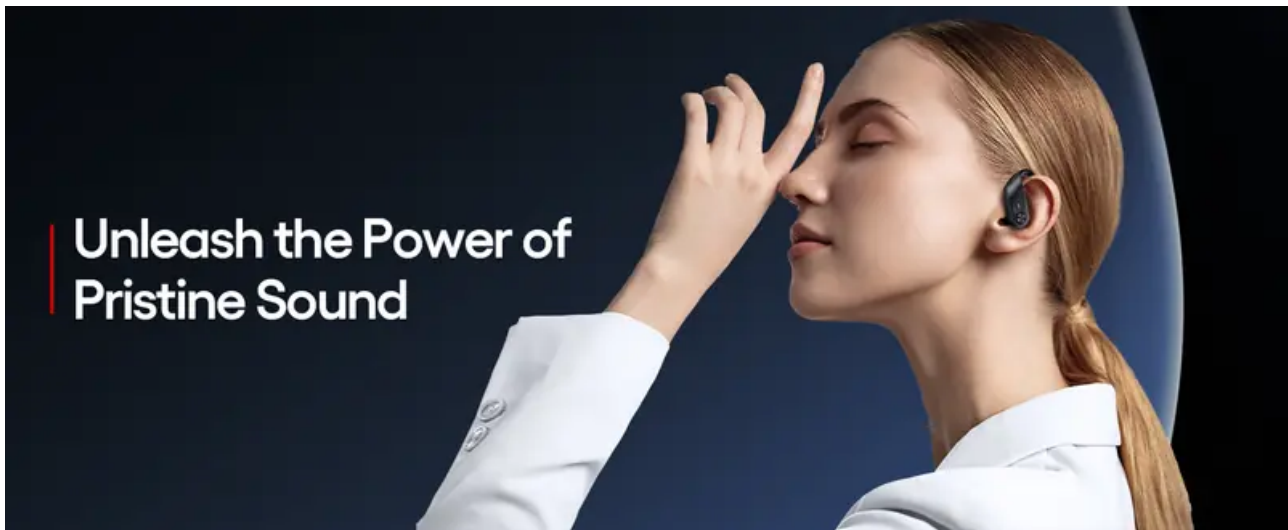

3.1 Physical Components

- **Earbuds:** Each earbud has an ergonomic earhook, an in-ear tip, a multifunction button, and LED indicator lights.
- **Charging Case:** Contains an LED power display to show remaining battery capacity. Uses a Type-C port for charging.
- **Button:** A single multifunction button is located on each earbud.

3.2 Audio & Connectivity

- **Driver:** 13mm dynamic drivers.
- **Frequency Response:** 20 Hz - 20,000 Hz.
- **Bluetooth Version:** 5.3.
- **Wireless Range:** Up to 33 feet (10 meters).
- **Microphone:** Built-in for phone calls.

3.3 Battery


- **Earbud Playtime:** Up to 10 hours on a single charge.
- **Total Playtime with Case:** Up to 80 hours.
- **Charging Time:** Approximately 1.2 hours to fully charge the earbuds in the case.
- **Case Charging:** Via the provided Type-C cable.

3.4 Durability

- **Water Resistance:** IPX7 rating (waterproof). Can withstand sweat, rain, and immersion in water up to 1 meter for 30 minutes.

- **Earhook Design:** Provides a secure fit during physical activity.

4. Use Guide

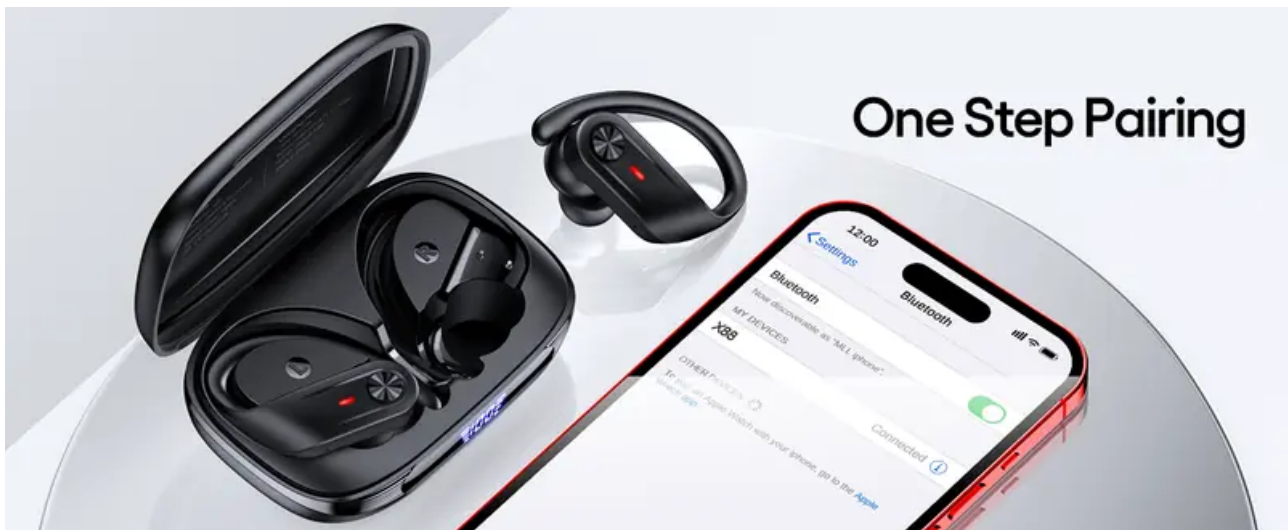

4.1 Wearing the Headphones

1. Select the eartip size that fits your ear canal comfortably.
2. Place the earbud in your ear and loop the soft earhook over the top of your ear for stability.
3. Gently twist the earbud to secure it in place. Ensure you have a proper seal for optimal sound.

4.2 Charging

1. Place the earbuds into their corresponding slots in the charging case. The LEDs on the earbuds will light up to indicate charging.
2. Charge the case by connecting the Type-C cable to the port on the back of the case and a USB power source.
3. The LED display on the front of the case shows the approximate remaining battery level.

4.3 Power On/Off & Pairing

The earbuds power on automatically when removed from the charging case and enter pairing mode if not already connected to a device.

1. With the earbuds in the case, open the case lid.
2. Remove both earbuds. They will automatically power on and connect to each other.
3. Enable Bluetooth on your smartphone, tablet, or computer.
4. Select "TAGRY X88" from the list of available Bluetooth devices.

5. For subsequent uses, the earbuds will typically reconnect automatically when taken out of the case.

4.4 Button Controls

Each earbud has one multifunction button. The following controls apply to either earbud unless specified.

- **Play/Pause:** Press the button once.
- **Answer Call/End Call:** Press the button once.
- **Reject Call:** Press and hold the button for 2 seconds.
- **Volume Up:** Press the button on the **right** earbud twice.
- **Volume Down:** Press the button on the **left** earbud twice.
- **Next Track:** Press the button on the **right** earbud three times.
- **Previous Track:** Press the button on the **left** earbud three times.
- **Voice Assistant:** Press and hold the button for 3 seconds to activate Siri or Google Assistant.
- **Power Off:** Place the earbuds back into the charging case. They will power off and charge automatically.

4.5 LED Indicators

- **Earbud LED (Flashing Blue & Red):** In pairing mode.
- **Earbud LED (Flashing Blue):** Connected and powered on.
- **Earbud LED (Solid Red):** Charging.
- **Earbud LED (Off):** Fully charged or powered off.
- **Case Display:** Shows the approximate battery level of the case via a multi-segment LED indicator.

5. Care and Maintenance

- Clean the earbuds and eartips with a soft, dry cloth. Do not use liquids or solvents.
- Ensure the earbuds and charging case are completely dry before placing them in the case for charging.
- Store the headphones in the provided case when not in use.
- Avoid exposing the headphones to extreme temperatures.
- Use only the provided Type-C cable or a certified equivalent to charge the case.

6. Troubleshooting

Problem	Possible Solution
Earbuds won't power on.	Place them in the charging case to ensure they have battery charge. Charge the case if necessary.
Can't connect to Bluetooth device.	Ensure the earbuds are in pairing mode (LED flashing blue & red). Delete "TAGRY X88" from your device's Bluetooth list and pair again.
Only one earbud has sound.	Place both earbuds back in the case, then remove them to reset the connection. Ensure both are charged.
Poor call quality or microphone not working.	Ensure the microphone on the earbud is not obstructed. Check your phone's Bluetooth settings to confirm the headphones are selected for both audio and microphone.
Short battery life.	Fully charge the earbuds and the case. Reduce volume level, as higher volume consumes more power.

7. Compliance and Safety

- This device complies with Part 15 of the FCC Rules. Operation is subject to interference.
- Keep the device and its accessories away from small children to avoid choking hazards.
- Do not disassemble, crush, puncture, or expose the battery to fire or excessive heat.
- Use the product in environments between 0°C and 40°C (32°F and 104°F).

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.