

Overview

The Xech V-Gun PRO is a 2-in-1 cordless handheld vacuum cleaner and air blower/duster. It is designed for quick cleaning tasks in homes, cars, and other small spaces.



Key characteristics of the product include:

- **2-in-1 Function:** Functions as both a vacuum cleaner and a compressed air blower/duster.
- **Cordless & Rechargeable:** Powered by a built-in battery charged via USB-C.
- **Compact and Lightweight:** Ergonomic handheld design weighing 390 grams.
- **Washable HEPA Filter:** Captures fine dust particles and can be cleaned.

Features and Specifications

Physical Specifications

- **Brand:** Xech
- **Model:** V-Gun PRO
- **Item Weight:** 390 Grams
- **Dimensions (L x W x H):** 16 x 6 x 20 cm
- **Form Factor:** Handheld
- **Color:** Black

Performance Specifications

- **Motor Power:** 130W
- **Maximum Suction Power:** 9000 Pa
- **Blower Speed:** 50,000 RPM
- **Power Source:** Battery Powered (8.4V)
- **Battery Runtime:** Approximately 15-20 minutes per charge (Vacuum mode).
- **Charging:** USB-C Fast Charging.
- **Filter Type:** Washable HEPA Filter.
- **Dust Capacity:** 150 ml/min.

Included Components

- Main V-Gun PRO Unit
- Crevice Tool
- Dusting Brush
- Side Brushes
- USB-C Charging Cable (inferred)



Parts and Controls



Main Unit

- **Body:** Houses the motor, battery, and dust collection chamber.
- **Power Button:** Push-button control to turn the device on/off. The control method is a single push button.
- **Nozzle/Outlet:** The front opening where attachments connect. It serves as the intake for vacuuming and the outlet for the blower function.
- **Dust Collection Chamber:** Removable container for collected debris.
- **HEPA Filter:** Located inside the dust chamber, it traps fine particles.
- **USB-C Charging Port:** For connecting the included charging cable.

Attachments

- **Crevice Tool:** Narrow nozzle for cleaning tight spaces like between car seats, keyboard keys, or window tracks.
- **Dusting Brush:** Soft-bristled brush for dusting delicate surfaces like lampshades, blinds, or electronic devices.
- **Side Brushes:** Assist in agitating and lifting debris from surfaces like upholstery or car carpets.

Use Guide

Initial Setup and Charging

1. Unpack all components.
2. Connect the provided USB-C cable to the charging port on the vacuum cleaner and to a standard USB power adapter or computer port.
3. Charge the device fully before first use. The charging time is not specified in the provided content.



Using the Vacuum Function

1. Ensure the dust collection chamber is empty and the HEPA filter is clean and correctly seated.
2. Select the appropriate attachment for your task (e.g., crevice tool for tight spaces, brush for surfaces). Push it onto the nozzle until it clicks into place.
3. Press and hold the power button to start suction.
4. Move the nozzle slowly over the area to be cleaned.
5. Release the power button to turn the device off.

6. Empty the dust chamber into a trash bin after use. Tap or gently clean the filter to remove excess dust.

Recommended Uses: Car interiors (dashboards, seats, footwells), sofas, upholstery, pet hair, crumbs on tables, keyboards, window sills, and other small, hard-to-reach areas.



Using the Blower/Duster Function

1. Remove any attachment from the nozzle. The blower function uses the bare nozzle.
2. Press and hold the power button. Air will be expelled from the nozzle.
3. Direct the airflow to blow dust and debris out of keyboards, PC cabinets, camera lenses, car vents, or other delicate items.



Note on Runtime: The device provides approximately 15-20 minutes of continuous use in vacuum mode per full charge. Runtime may be shorter when using the high-power blower function. Allow the device to cool down if it becomes warm during extended use.

Care and Maintenance

Emptying the Dust Chamber

1. Turn the device off.
2. Detach the dust collection chamber from the main body as per the design (typically by twisting or pressing a release button).
3. Empty the contents into a trash bin.
4. Reattach the chamber securely.

Cleaning the HEPA Filter

1. Remove the dust chamber.
2. Take out the HEPA filter.
3. Gently tap it to dislodge loose dust.
4. For a deeper clean, rinse it under lukewarm water. Do not use detergents.
5. Allow the filter to dry **completely** (for at least 24 hours) before reinstalling it. Using the device with a damp filter can damage the motor.
6. Reinstall the dry filter and dust chamber.



General Care

- Wipe the exterior of the device with a soft, dry cloth.
- Do not immerse the main unit in water or any liquid.
- Store the device and its attachments in a cool, dry place.
- Avoid using the vacuum to pick up large, sharp, or wet objects, as they may damage the filter or motor.

Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Connect the USB-C cable and charge the device fully.
Weak suction or blowing power.	Dust chamber is full; Filter is clogged; Nozzle or attachment is blocked.	Empty the dust chamber. Check and clean the HEPA filter. Clear any blockages from the nozzle or attachment.
Device turns off during use.	Battery is low; Motor overheating protection activated.	Recharge the device. Allow it to cool down for 15-20 minutes before resuming use.
Dust is being expelled during vacuuming.	HEPA filter is missing, damaged, or not installed correctly.	Ensure the HEPA filter is clean, dry, and properly seated in the dust chamber.

Warranty and Support

The Xech V-Gun PRO comes with a **1-year warranty** which covers manufacturing defects.

Manufacturer / Importer Contact Information:

XECH TECHNOLOGIES PVT LTD
32, Corporate Avenue, 6th Floor, D-Wing,
Near Paper Box, Off Mahakali Road, MIDC,
Andheri East, Mumbai: 400093, India.

Packer Contact Information:

XECH Technologies Pvt Ltd
JAI SHREE RAM COMPLEX BLDG NO-F-4/2, 2nd FLOOR GALA NO 201,
NEXT MONGINIS CAKE FACTORY, ANJUR MANKOLI ROAD,
DAPODE VILLAGE, BHIWANDI - 421302, India.

For warranty claims or support, please contact the seller from whom you purchased the product or the manufacturer at the address above.

Safety Information

WARNING:

- This appliance is for indoor use only.

- Do not use to vacuum burning or hot ashes, coals, toxic, flammable, or combustible materials.
- Do not use to vacuum liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer-recommended attachments.
- Do not charge the device with a damaged cable or charger.
- Do not disassemble the device. There are no user-serviceable parts inside.
- Keep the device and charger away from heated surfaces and open flames.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.