

## Overview

The HEAPETS Dog Hair Clippers are a cordless, rechargeable grooming kit designed for trimming hair on dogs, cats, and other pets. The kit includes a main clipper, a nail grinder, and multiple guard combs to accommodate different coat lengths. The device operates at a low noise level of approximately 55 dB to help keep pets calm during grooming.



The kit is suitable for trimming hair on the body, face, ears, paws, and rump. The included nail grinder allows for safe claw polishing, reducing the risk of cutting the quick.

## Features

### Clipper Unit

- **Blade System:** Upgraded stainless steel fixed blade and ceramic moving blade for cutting performance. Blades are detachable for easy cleaning and replacement.
- **Noise Level:** Low vibration and ultra-quiet design, operating at approximately 55 dB.
- **Power Source:** Battery powered, rechargeable via built-in battery for cordless operation.
- **Cutting Length:** Adjustable using guard combs; minimum cutting length 3 mm, maximum 18 mm.

### Guard Combs

Six guard combs are included for selecting the desired hair length:

- 3 mm
- 6 mm
- 9 mm
- 12 mm
- 15 mm
- 18 mm

An adjustable clipping comb is also provided for additional length control.

### Nail Grinder

The kit includes a nail grinder attachment for polishing pet claws. This tool helps reduce the risk of cutting claws too short or injuring the pet.



## Indicators and Controls

- **Power Switch:** Slide or button to turn the clipper on/off (located on the main body).
- **Charging Indicator:** LED light indicates when the unit is charging or fully charged.
- **Blade Release:** Mechanism to detach the blade head for cleaning or replacement.

## What's in the Box

- 1 x Dog Hair Clipper (main unit)
- 1 x Dog Nail Grinder
- 6 x Guard Combs (3 mm, 6 mm, 9 mm, 12 mm, 15 mm, 18 mm)
- 1 x Adjustable Clipping Comb
- 1 x Charging Cable (USB)
- 1 x Cleaning Brush

## Use Guide

### Charging the Clipper

1. Connect the provided USB charging cable to the charging port on the clipper.
2. Plug the other end into a USB power source (e.g., computer, wall adapter).
3. The charging indicator will light up during charging. When fully charged, the indicator may turn off or change color.
4. A full charge provides sufficient power for a complete grooming session.

### Attaching a Guard Comb

1. Ensure the clipper is turned off.
2. Select the desired guard comb length (3 mm to 18 mm).
3. Align the comb with the blade head and snap it into place until it clicks securely.
4. To remove, press the release tabs on the sides of the comb and pull it off.

### Basic Grooming Procedure

1. Brush your pet's coat to remove tangles and mats before clipping.
2. If your pet has long or thick hair, use scissors to trim it shorter first to prevent the clipper from jamming.
3. Turn on the clipper using the power switch.
4. Hold the clipper at a comfortable angle and move it slowly in the direction of hair growth.
5. Use short, gentle strokes. Do not press hard against the skin.
6. For sensitive areas (face, ears, paws), use a shorter guard comb or no comb for precision trimming.

### Using the Nail Grinder

1. Attach the nail grinder head to the main unit (if detachable) or use the separate grinder unit.
2. Turn on the grinder.
3. Gently touch the grinding wheel to the tip of your pet's nail.
4. Use short bursts to avoid overheating the nail. Grind only the tip, avoiding the quick (the pink area inside the nail).
5. Repeat for all claws.

## Changing the Blade

1. Turn off the clipper.
2. Press the blade release mechanism (usually a button or lever) to detach the old blade.
3. Align the new blade with the clipper head and push it into place until it clicks.
4. Ensure the blade is securely attached before use.



## Cleaning and Maintenance

- After each use, turn off and unplug the clipper.
- Remove the blade and guard combs. Clean hair clippings from the blades and combs using the included cleaning brush.
- Wipe the main body with a dry or slightly damp cloth. Do not immerse in water.
- Oil the blades periodically with a light machine oil to maintain performance.
- Store the clipper in a dry place.

## Important Information

### Safety Information

- Always unplug the trimmer when not in use.
- Keep it away from water sources. Do not use in wet conditions.
- Do not use on infants or children.
- Keep blades away from eyes and face.
- Always follow recommended cleaning and maintenance procedures.
- If your pet has long or thick hair, trim it shorter with scissors first to prevent the clipper from jamming.

## Specifications

<b>Brand</b>	HEAPETS
<b>Model</b>	P326
<b>Power Source</b>	Battery Powered (Rechargeable)
<b>Blade Material</b>	Stainless Steel (fixed), Ceramic (moving)
<b>Cutting Length Range</b>	3 mm – 18 mm
<b>Noise Level</b>	~55 dB
<b>Color Options</b>	White-white, Gold-white, Black-white
<b>Package Dimensions</b>	8.5 x 5.87 x 3.15 inches; 1.5 pounds
<b>Date First Available</b>	November 13, 2024
<b>ASIN</b>	B0DDC6DH8M

## Troubleshooting

- **Clipper does not start:** Ensure the battery is charged. Check the power switch position.
- **Clipper jams or pulls hair:** Clean the blades and remove any trapped hair. Ensure the blade is properly attached. For long/thick coats, pre-trim with scissors.
- **Low cutting performance:** Oil the blades. Replace the blade if it is dull or damaged.
- **Battery not charging:** Check the USB cable connection. Try a different power source.

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.