

1. Overview

The INALSA Electric Kettle Prism FS is a 1.8-litre capacity, cordless electric kettle with a 1550W heating element for rapid boiling. It features a stainless steel inner body, a cool-touch exterior, and multiple safety features including auto-shutoff and boil-dry protection.



2. Package Contents

- 1 x Electric Kettle
- 1 x Power Base (with attached power cord)
- 1 x Instruction Manual and Warranty Card

3. Product Features

3.1. Physical Design

- **Cylindrical Stainless Steel Body:** Made with a premium brush finish stainless steel inner pot and bottom.
- **Wider Mouth:** Designed for easy filling and cleaning.
- **Cool-Touch Handle:** Features a simple release button for safe operation.
- **Pop-Up Lid:** Helps protect against accidental burns when opening.
- **360° Swivel Base:** Allows the kettle to rotate freely for convenient placement and cord management.
- **Cordless Design:** The kettle lifts off the base for safe, easy pouring.

3.2. Technical Specifications

- **Capacity:** 1.8 Litres
- **Power:** 1550 Watts
- **Voltage:** 240V
- **Material:** Stainless Steel (Inner Body), Powder Coated Finish (Exterior)
- **Colour:** Silver/Black
- **Dimensions (LxWxH):** 21 x 14.5 x 23.3 cm
- **Weight:** 620 grams

3.3. Safety & Operational Features

- **Power Indicator Light:** Illuminates when the kettle is switched on and heating.
- **Auto Shut-Off:** Automatically turns off when the water reaches boiling point or if the kettle overheats.
- **Boil-Dry Protection:** Safeguards the heating element if the kettle is operated without sufficient water.
- **Concealed Heating Element:** Located beneath the stainless steel base for easier cleaning and scale management.

4. Use Guide

4.1. Before First Use

1. Remove all packaging materials.
2. Fill the kettle to its maximum capacity (1.8L) with fresh cold water.

3. Boil the water and then discard it. Repeat this process once more to remove any residual manufacturing dust or odours.
4. Wipe the exterior with a damp cloth. Do not immerse the kettle, lid, or power base in water.

4.2. Daily Operation

1. **Filling:** Open the lid by pressing the button on the handle. Fill the kettle with the desired amount of cold water, ensuring the water level is between the MIN and MAX marks. Do not overfill.
2. **Positioning:** Place the kettle securely onto the power base. Ensure the base is on a flat, stable, dry, and heat-resistant surface.
3. **Powering On:** Plug the power cord into a standard 240V wall outlet. The power indicator light on the kettle will illuminate, indicating it is heating.
4. **Boiling:** The kettle will automatically switch off once the water has boiled. You may also lift the kettle from its base at any time to interrupt boiling.
5. **Pouring:** Lift the kettle from its base by the handle. Pour the hot water carefully. The handle is designed to remain cool to the touch.

WARNING: Never operate the kettle without water. Do not open the lid during or immediately after boiling, as escaping steam can cause burns.

4.3. Cleaning and Maintenance

- **Exterior:** Wipe with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Interior:** Regular descaling is recommended to maintain performance and longevity. Use a commercially available descaler suitable for stainless steel kettles, following the product's instructions. Alternatively, you can boil a mixture of water and white vinegar (1 part vinegar to 2 parts water), then discard the solution and rinse thoroughly with fresh water.
- **Power Base:** Keep the power base and connector contacts dry and clean. Wipe with a dry cloth if necessary.
- Always unplug the kettle and allow it to cool completely before cleaning.

5. Troubleshooting

- **Kettle does not heat / Indicator light is off:** Check that the kettle is properly seated on the base. Ensure the power cord is plugged into the outlet and the outlet is functional.
- **Kettle does not switch off automatically:** This is a safety-critical fault. Unplug the kettle immediately and contact customer support. Do not continue to use it.

- **Slow boiling or scale buildup:** Descale the kettle following the instructions in section 4.3.
- **Water leaking from the kettle:** Check that the lid is properly closed. If the problem persists, a seal may be damaged. Discontinue use and contact support.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.