

Overview

This manual provides instructions for the safe and proper use of the INALSA Prism BK electric kettle. The kettle is a 1.8-litre capacity appliance with a 1500W heating element, designed for boiling water.



Safety Information

Read all instructions before using the appliance.

- **Intended Use:** This appliance is intended for household indoor use only, for heating water. Do not use it for any other purpose.

- **Power Source:** Use only with a 230V, 50Hz AC power supply. Ensure the voltage matches your local supply.
- **Water Level:** Always fill the kettle between the MIN and MAX marks indicated inside the kettle. Do not operate without sufficient water.
- **Surface Placement:** Place the kettle and its power base on a stable, flat, heat-resistant surface, away from edges.
- **Hot Surfaces:** The exterior body is designed to be cool-touch. However, steam from the spout and the lid area can be hot. Avoid contact during and immediately after operation.
- **Cord Safety:** Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- **Supervision:** Do not leave the appliance unattended while it is connected to the power supply.
- **User Group:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

WARNING: To protect against electric shock, do not immerse the kettle unit, power base, cord, or plug in water or any other liquid.

Product Features & Parts



Main Components

- **Kettle Body:** Double-wall construction with a polypropylene (PP) outer shell and a stainless steel inner body.
- **Lid:** Wide mouth opening with a stainless steel inner lid and filter.
- **Spout:** Integrated into the body for pouring.
- **Handle:** Ergonomically designed, cool-touch handle.
- **Power Base:** Detachable base with a 360-degree swivel for easy placement.
- **On/Off Switch:** Located on the handle.
- **Water Level Indicator:** Visible gauge with MIN and MAX markings.
- **Power Indicator Light:** Illuminates when the kettle is switched on and heating.

Key Features

- **Quick Boil:** 1500W power for fast water heating.
- **Double Wall Design:** Insulated outer wall helps keep the exterior cool and retains water temperature.
- **Stainless Steel Interior:** All water-contact surfaces (pot, lid, filter, spout) are made of food-grade stainless steel.
- **Boil-Dry Protection:** Automatically switches off if the kettle is operated without sufficient water.
- **Auto Shut-Off:** Turns off automatically once water has reached boiling point.

Before First Use

1. Remove all packaging materials and stickers from the kettle and power base.
2. Wash the removable lid/filter (if applicable) and the interior of the kettle with warm water and a mild detergent. Do not use abrasive cleaners.
3. Fill the kettle to the MAX mark with fresh water, boil, and then discard the water. Repeat this process twice to remove any residual manufacturing dust.
4. Wipe the exterior with a damp cloth and dry thoroughly.

Use Guide

Filling the Kettle

1. Ensure the kettle is disconnected from the power base.
2. Open the lid by pressing the button (if present) or lifting it.

3. Fill with the desired amount of fresh, cold water. The water level must be between the MIN (0.5L) and MAX (1.8L) marks visible inside the kettle.
4. **Do not overfill.** Water may spill out during boiling if filled above the MAX mark.
5. Close the lid securely.

Boiling Water

1. Place the kettle firmly onto the dry power base.
2. Plug the power cord into a wall socket.
3. Press the On/Off switch down to the 'I' position. The power indicator light will turn on, indicating the heating element is active.
4. The kettle will automatically switch off once the water has boiled. You may hear a click.
5. The power indicator light will turn off. You can now lift the kettle from the base to pour.
6. To stop boiling manually, press the switch up to the 'O' position.

Note: Wait at least 30 seconds before re-boiling to allow the auto-shutoff mechanism to reset.

Pouring

- Hold the kettle by its handle.
- Pour slowly to avoid splashing.
- Ensure the lid is closed during pouring to prevent hot water or steam from escaping from the top.

After Use

- Unplug the power base from the wall socket.
- If not using immediately, empty any remaining water from the kettle.

Cleaning and Maintenance

WARNING: Always ensure the kettle is disconnected from the power supply and has cooled down completely before cleaning.

Exterior Cleaning

Wipe the outer body and power base with a soft, damp cloth. Do not use abrasive pads, scouring powders, or chemical cleaners.

Interior Cleaning

Regularly descale the kettle to remove mineral deposits (limescale) which can affect performance and taste.

1. Fill the kettle to the MAX mark with a mixture of equal parts white vinegar and water.
2. Let the solution stand in the kettle for 1 hour (do not boil).
3. Discard the solution and rinse the kettle thoroughly with clean water.
4. Fill with clean water, boil, and discard. Repeat the boiling and discarding process 1-2 times to remove any vinegar taste.

Frequency: Descaling frequency depends on water hardness. In areas with hard water, descaling every 1-2 months is recommended.

Lid and Filter

Clean the inner lid and filter under running water to remove any residue. These parts are not dishwasher safe.

Troubleshooting

Problem	Possible Cause	Solution
Kettle does not turn on / no indicator light.	Not plugged in. Switch not pressed. Power outage.	Check power connection. Ensure switch is pressed down. Check household power.
Water takes too long to boil.	Limescale build-up. Overfilling.	Descal the kettle. Ensure water level is at or below MAX.
Kettle switches off before water boils.	Boil-dry protection activated (insufficient water).	Let kettle cool for 2 minutes. Refill with water above MIN mark and operate again.
Steam/water escapes from lid.	Lid not closed properly.	Ensure lid is securely closed before switching on.
Unusual smell during first use.	Normal for new appliances.	Perform the "Before First Use" boiling and discarding process 2-3 times.

Technical Specifications

Model Name	Prism BK
Capacity	1.8 Litres
Rated Voltage & Power	230V~50Hz, 1500W
Inner Body Material	Stainless Steel
Outer Body Material	Polypropylene (PP)
Special Features	Double Wall, Auto Shut-Off, Boil-Dry Protection
Product Dimensions (LxWxH)	23 x 15.5 x 23.5 cm
Net Weight	Approx. 730 g

In the Box

- 1 x Electric Kettle Unit
- 1 x Power Base
- 1 x Instruction Manual cum Warranty Card

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.