

Overview

This manual provides instructions for the safe and effective use of the Seesii SH300 6-in-1 Cordless Combo Kit. The kit is a multi-function outdoor power tool designed for various gardening and yard maintenance tasks.



The primary components include a mini chainsaw, a hedge trimmer, grass shears, and an extendable pole. The tool is powered by rechargeable batteries and is designed for cordless operation.

Features and Specifications

Key Features

- **6-in-1 Multifunction Design:** Functions as a mini chainsaw, hedge trimmer, grass shear, pole saw, tree pruner, and branch cutter.
- **Cordless and Battery Powered:** Operates on included rechargeable batteries, eliminating the need for a power cord.
- **Extendable Reach:** The telescopic pole adjusts from 6 to 9 feet (approximately 1.8 to 2.8 meters), providing a maximum working reach of up to 16 feet.
- **High-Capacity Batteries:** Includes two 4.0 Ah (4000mAh) lithium-ion batteries.
- **Brushless Motor (Chainsaw):** Provides power and longevity with reduced noise.
- **Automatic Lubrication System:** For the chainsaw component, to reduce chain wear.
- **Tool-Free Assembly:** Designed for quick attachment and detachment of heads and the extension pole.

Specifications

- **Model Number:** SH300
- **Power Source:** Battery Powered
- **Battery Setup:** 2 x 4000mAh Lithium-ion
- **Chainsaw Guide Bar Size:** 6 inch
- **Chainsaw Chain:** 0.043" 1/4LP 36DL
- **Motor Type (Chainsaw):** Brushless
- **Motor Type (Hedge Trimmer):** Brushed
- **Power Rating:** 800W
- **Hedge Trimmer Blade Length:** 11.8 inches (30 cm)
- **Construction:** ABS plastic and steel

Contents of the Kit

The kit includes the following components. Verify all items are present before use.

- Main power unit (motor housing)
- Mini chainsaw head with guide bar and chain
- Hedge trimmer head
- Grass shear head
- Telescopic extension pole

- Two (2) 4.0 Ah Lithium-ion batteries
- Battery charger
- Chain oil (for lubrication system)
- User manual (this document)

Note: The specific style "6" Blue Kit w/ Hedge Trimmer" is the primary model referenced. Other kit configurations may have varying contents.

Safety Information

Read and understand all instructions before operating the tool. Failure to follow warnings and instructions may result in electric shock, fire, and/or serious injury.

General Safety Warnings

- Keep the work area clean, well-lit, and free of bystanders, children, and pets.
- Do not operate the tool in explosive atmospheres or in the rain.
- Stay alert and use common sense. Do not operate the tool when you are tired or under the influence of drugs, alcohol, or medication.
- Use personal protective equipment. Always wear eye protection, sturdy gloves, long pants, and non-slip footwear.
- Keep hands and feet away from all cutting edges.
- Ensure the tool is switched off before inserting or removing the battery, or attaching/detaching accessories.
- Use only the manufacturer-specified batteries and charger.

Specific Tool Safety

- **Chainsaw/Pole Saw:** Be aware of kickback. Do not operate above shoulder height. Ensure the chain lubrication system is filled. Check chain tension before each use.
- **Hedge Trimmer:** Keep both hands on the handles. Be aware of the cutting blade location at all times. Clear the area of wires, cords, and hard objects before trimming.
- **Extension Pole:** Ensure all pole connections are secure and locked before operation. Be mindful of overhead power lines. Maintain a firm grip and stable footing.

Use Guide

Assembly and Preparation

1. **Charging the Batteries:** Before first use, fully charge both batteries using the provided charger. The charger indicator will show when charging is complete.

2. Attaching a Tool Head:

- Ensure the power unit is off and the battery is removed.
- Align the mounting interface on the desired tool head (chainsaw, hedge trimmer, grass shear) with the interface on the power unit.
- Push or twist the head until it clicks or locks securely into place, following the specific mechanism design.

3. Attaching the Extension Pole:

- For high-reach tasks, attach the extension pole between the power unit and the tool head.
- Connect one end of the pole to the power unit and the other end to the tool head, ensuring all locking collars are fully engaged.
- To adjust the length, loosen the pole lock, extend to the desired length, and re-tighten the lock firmly.

4. **Installing the Battery:** Insert a fully charged battery into the battery compartment on the power unit until it clicks and locks. You will hear a sound or see an indicator light when properly connected.



Operation

Starting and Stopping

- To start, press and hold the safety lock-off button, then squeeze the trigger switch.
- Release the trigger switch to stop the tool.

Using the Mini Chainsaw / Pole Saw

- Fill the automatic oiler reservoir with the provided chain oil before use.
- Allow the chain to reach full speed before making contact with the wood.
- Use the middle section of the guide bar for cutting. Do not let the tip of the bar contact the material to avoid kickback.
- Apply light pressure; let the chain do the work.

Using the Hedge Trimmer

- Hold the tool with both hands, keeping the cutting blades away from your body.
- Use a smooth, sweeping motion. Trim from the bottom of the hedge upward.
- For tall hedges, use the fully extended pole and work from a stable position.

Using the Grass Shear

- Ideal for detailed trimming and edging.
- Hold the tool at a comfortable angle to the ground and guide it along the desired cutting line.

Battery and Run Time

- Each 4.0 Ah battery provides approximately 30-40 minutes of continuous run time under typical use, for a total of 60-80 minutes with two batteries.
- Run time varies based on the tool head used, material density, and operating conditions.
- When the tool power noticeably decreases, stop and replace the battery with a fully charged one.

Maintenance and Storage

Cleaning

- Clean the tool with a dry or slightly damp cloth after each use. Do not use solvents or immerse any part in water.
- Keep air vents clear of debris.
- For the chainsaw, clean sawdust from the guide bar groove and oiler ports.
- For the hedge trimmer, wipe plant sap from the blades.

Chain Maintenance (Chainsaw)

- **Lubrication:** Keep the automatic oiler reservoir filled with bar and chain oil. Check the oil level frequently during extended use.
- **Tensioning:** The chain may stretch with use. Check tension regularly. Follow the tool-free tensioning procedure: loosen the bar mounting nuts, adjust the tensioning screw until the chain is snug against the bar but can still be pulled by hand, then re-tighten the nuts.
- **Sharpening:** Use a round file of the correct size for the chain when cutting performance declines. Follow standard chainsaw sharpening techniques or consult a professional.

Blade Care (Hedge Trimmer & Grass Shear)

- Keep blades clean. Apply a light coating of machine oil to the blades after cleaning to prevent rust.
- Inspect blades for damage or excessive wear before each use.

Battery Care

- Store batteries in a cool, dry place away from direct sunlight and metal objects.
- Do not fully discharge batteries. Recharge them when performance drops.
- If storing for an extended period, charge batteries to about 50-60% capacity.

Storage

- Store the tool and all components in a dry, secure location out of reach of children.
- Detach the battery for storage.
- Store the tool with the cutting heads covered or positioned safely.

Troubleshooting

Problem	Possible Cause	Solution
Tool does not start	Battery not installed, depleted, or faulty. Safety lock not engaged. Trigger switch failure.	Install a charged battery. Ensure battery clicks into place. Press and hold the safety lock button. Contact support.
Tool stops during use	Battery is depleted. Motor overload (jammed blade/chain). Overheating protection activated.	Replace with a charged battery. Switch off, remove battery, and clear the jam. Allow motor to cool down before resuming.
Chainsaw cuts poorly or smokes	Dull chain. Insufficient chain lubrication. Chain tension too tight or too loose.	Sharpen or replace the chain. Fill the oil reservoir. Adjust chain tension correctly.
Hedge trimmer blades are stuck or jammed	Cutting material too thick. Debris caught between blades. Blades are damaged.	Do not exceed recommended branch thickness. Switch off, remove battery, and clean debris from between blades. Inspect and replace blades if necessary.
Excessive vibration	Loose attachment or component. Damaged cutting blade or chain.	Switch off and check all connections, locking collars, and fasteners. Inspect the cutting attachment for damage.

Warranty and Support

For warranty information, product support, or to report an issue, please contact the manufacturer.

- **Manufacturer:** Seesii
- **Contact Information:** support@seesiius.com

Please have your model number (SH300) and place of purchase available when contacting support.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)