

## Overview

The ZIHNIC WH-930 are wireless over-ear Bluetooth headphones featuring Active Noise Cancellation (ANC), Hi-Res Audio, and a comfortable memory foam design. They are suitable for music, calls, travel, and office use.




## Key Specifications:

- **Model:** WH-930
- **Driver:** 40mm DLC composite dynamic driver
- **Impedance:** 32 Ohms
- **Frequency Range:** 20Hz – 20,000Hz
- **Bluetooth:** 5.0
- **Battery Life:** Up to 5 hours (ANC on) / Quick charge: 10 min for several hours
- **Charge Time:** 1.5 hours
- **Weight:** 0.3 kg

## Features

### Active Noise Cancellation (ANC)

Hybrid noise cancellation technology reduces ambient noise for an immersive listening experience in crowded or noisy environments.

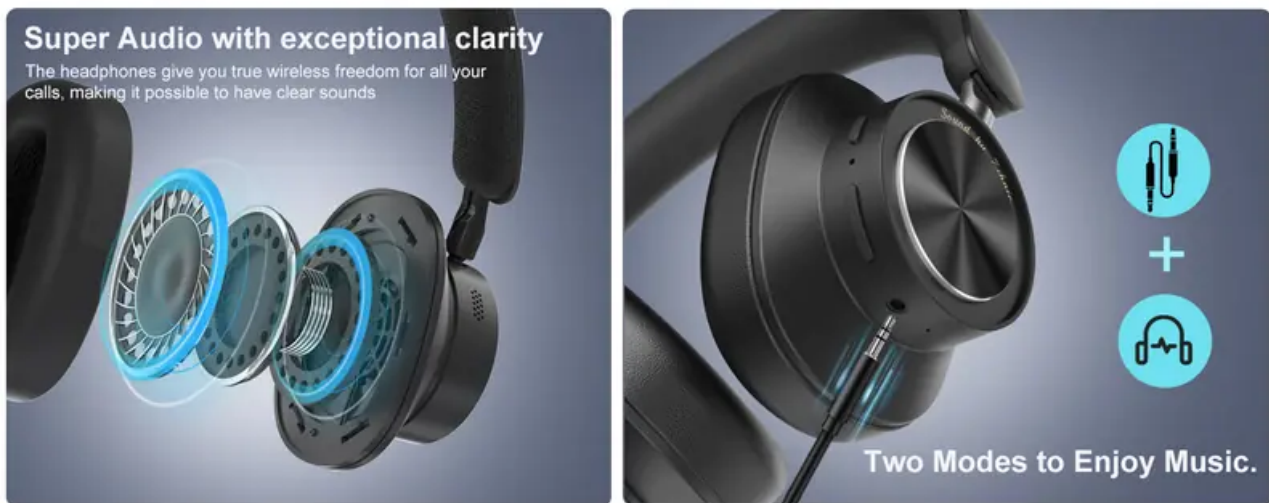

### High-Resolution Audio

40mm DLC composite dynamic drivers deliver a balanced audio profile with deep bass, clear mids, and crisp highs for music, movies, and podcasts.

### Comfort & Design

- Memory foam earpads covered with protein leather for long-lasting comfort.
- Lightweight, adjustable headband.
- Earcups swivel 90° for a customized fit.
- Enclosure materials: Foam and leather.



### Battery & Charging


- All-day battery life (up to 5 hours with ANC).
- Quick charge: 10 minutes provides several hours of playback.
- Full charge time: approximately 1.5 hours.

### Connectivity

- Bluetooth 5.0 for stable, quick pairing with smartphones, tablets, laptops, and other devices.
- Built-in microphone for hands-free calls.
- Wireless only (no headphone jack).

### Controls

Touch control method for playback, volume, calls, and ANC toggle.

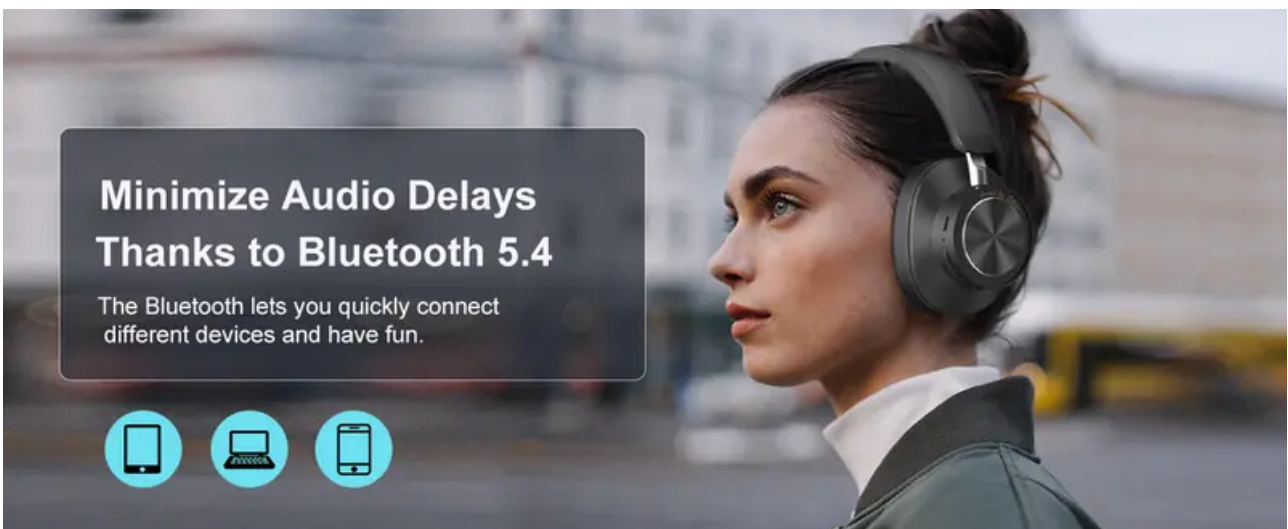

## What's in the Box

- ZIHNIC WH-930 Headphones
- Charging cable (USB)
- User manual

## Use Guide

### Charging the Headphones

1. Connect the included USB charging cable to the charging port on the headphones.
2. Plug the other end into a USB power source (e.g., computer, wall adapter).
3. The LED indicator will show charging status. Full charge takes approximately 1.5 hours.

### Power On/Off

- **Power On:** Press and hold the power button for 2-3 seconds until the LED indicator flashes.
- **Power Off:** Press and hold the power button for 2-3 seconds until the LED turns off.

### Bluetooth Pairing

1. Ensure the headphones are powered off.
2. Press and hold the power button for about 5 seconds until the LED flashes red and blue (pairing mode).
3. On your device, enable Bluetooth and select "ZIHNIC WH-930" from the list.
4. Once connected, the LED will stop flashing.

### Using Active Noise Cancellation (ANC)

- Press the ANC button on the headphones to toggle ANC on/off.
- When ANC is active, ambient noise is reduced for a clearer audio experience.

### Making Calls

- Use the built-in microphone for hands-free calls.
- Answer/end calls using the touch control or multifunction button.
- Adjust volume using the touch controls.

### Touch Controls

- **Play/Pause:** Single tap on the touch panel.

- **Volume Up/Down:** Swipe up/down on the touch panel.
- **Next/Previous Track:** Swipe forward/backward.
- **Answer/End Call:** Single tap.
- **Reject Call:** Long press.

## **Adjusting the Fit**

- Extend or retract the headband for a secure fit.
- Swivel the ear cups up to 90° for optimal positioning.
- The memory foam earpads conform to your ears for comfort during extended use.

## Specifications

Specification	Details
Brand	ZIHNIC
Model	WH-930
Color	Black (also available in Beige)
Ear Placement	On Ear
Form Factor	Over Ear
Impedance	32 Ohms
Audio Driver Type	DLC Driver
Frequency Range	20Hz - 20,000Hz
Noise Control	Hybrid Noise Cancellation
Connectivity Technology	Wireless (Bluetooth 5.0)
Control Method	Touch
Battery Charge Time	1.5 Hours
Battery Average Life	5 Hours (ANC on)
Item Weight	0.3 kg
Enclosure Material	Foam, Leather
Specific Uses	Music, Gaming, Travel, Office Work
Compatible Devices	Cellphones, Laptops, Desktops, Tablets, Smart Speaker

## Troubleshooting

### Headphones not pairing

- Ensure the headphones are in pairing mode (LED flashing red/blue).
- Make sure Bluetooth is enabled on your device.
- Move the headphones closer to the device (within 10 meters).

- Reset the headphones by turning them off and on again.

### **No sound or low volume**

- Check that the headphones are powered on and connected.
- Increase volume using the touch controls or your device.
- Ensure the audio source is playing.

### **ANC not working**

- Press the ANC button to ensure it is activated.
- Charge the headphones fully.

### **Microphone not working during calls**

- Ensure the headphones are selected as the audio device for calls.
- Check that the microphone is not blocked.

## **Safety and Care**

- Do not expose the headphones to extreme temperatures or moisture.
- Clean the ear cups and headband with a soft, dry cloth.
- Do not use abrasive cleaners or solvents.
- Store in a cool, dry place when not in use.
- Do not disassemble the headphones. Contact support for repairs.

#### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.