

1. Product Overview

The INALSA Jazz 600 is a multi-functional kitchen appliance designed for blending, grinding, mixing, and frothing. It features a 600-watt copper motor and comes with a set of five jars and three specialized blades.



The product is intended for household use to prepare a variety of foods and beverages such as smoothies, shakes, dry spices, and coffee froth.

2. Features and Components



2.1 Main Unit

- **Motor:** 600-watt, 100% copper motor with pulse technology.
- **Controls:** Push-button operation.
- **Body Material:** ABS Plastic.
- **Power Source:** Corded electric.

2.2 Jars and Blades

- **Blending Jar (500 ml):** For liquids, smoothies, and shakes. Uses a 6-leaf cross stainless steel blade.
- **Dry Grinding Jar (300 ml):** For grinding spices, coffee beans, and nuts. Uses a 4-leaf flat stainless steel blade.
- **Froth Jar (300 ml):** For frothing milk for coffee or beverages. Uses a specialized frothing blade.
- **Ready-to-Go Jars (2 x 500 ml):** BPA-free cups with flip-top sipper lids for portability.
- All blades are made of stainless steel and are detachable for cleaning.

600W Powerful Motor

22000 RPM
High Speed

Stronger ability to
crush food



BPA Free



Child
Safety Lock



100%
Copper Motor



Approved

2.3 Included Accessories

- 1 Main Unit
- 1 Blending Jar with Socket
- 1 Dry Grinding Jar with Socket
- 1 Froth Jar with Socket
- 2 Ready-to-Go Jars
- 2 Sipper Jar Lids
- 2 Jar Caps
- 1 Seasoning Cap
- 1 Recipe Book
- 1 Instruction Manual & Warranty Card

3. Safety Instructions

WARNING: To reduce the risk of injury, electric shock, or fire, read all instructions before using the appliance.

- This appliance is for household use only. Do not use outdoors or for commercial purposes.
- Ensure the power cord is plugged into a properly grounded electrical outlet.

- Do not operate the appliance with a damaged cord or plug, or if it malfunctions or is damaged in any manner.
- Do not immerse the main motor unit, cord, or plug in water or any other liquid.
- Always ensure the jar is properly locked onto the motor base before operating.
- Keep hands and utensils away from moving blades.
- Do not operate the appliance empty.
- Allow the motor to cool down between extended use cycles.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities.

4. Use Guide



4.1 Before First Use

1. Unpack all components and check against the included components list.
2. Wash all jars, lids, and blades with warm, soapy water. Rinse and dry thoroughly. Do not wash the main motor unit.
3. Wipe the exterior of the main unit with a damp cloth.

4.2 Assembly and Operation

1. **Select the Jar:** Choose the appropriate jar for your task (blending, grinding, or frothing).

2. **Assemble the Jar:** Ensure the correct blade is securely attached to the jar base. Place ingredients into the jar. Do not exceed the maximum capacity marked on the jar.
3. **Attach to Motor Base:** Place the assembled jar onto the motor base. Rotate it clockwise until it locks securely into place. You should feel a click.
4. **Power On:** Plug the cord into a power outlet.
5. **Blending/Grinding:** Press and hold the push-button on the main unit to operate. Use the Pulse Technology by pressing the button in short bursts for better control over texture.
6. **After Use:** Release the button. Wait for the blades to stop completely before unlocking and removing the jar from the motor base.

4.3 Usage Tips

- **For Smoothies/Shakes:** Add liquids first, then softer ingredients, followed by harder items like ice or frozen fruit.
- **For Dry Grinding:** Use the small dry grinding jar. Ensure ingredients are at room temperature and dry.
- **For Frothing:** Use the froth jar with cold milk for best results. Do not overfill.
- Do not run the motor continuously for more than one minute. Allow it to cool for a minute before subsequent use.
- Use the provided "Ready-to-Go" jars with sipper lids to take your beverages with you.



5. Cleaning and Maintenance

- **Main Unit:** Unplug the appliance. Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or immerse in water.
- **Jars, Lids, and Blades:** Disassemble completely. Wash in warm, soapy water. You may use a soft brush to clean the blades. Rinse and dry thoroughly before storage.
- All jars and accessories are top-rack dishwasher safe. Check markings on the components.
- Ensure all parts are completely dry before reassembling or storing.
- Store the appliance in a dry place, with the cord neatly wrapped.

6. Troubleshooting

Problem	Possible Cause	Solution
Motor does not start	Unit not plugged in. Jar not locked properly.	Check power connection. Ensure jar is correctly locked onto the base.
Unusual noise or vibration	Jar not seated correctly. Hard ingredients stuck on blades.	Stop immediately. Check jar assembly and locking. Check for obstructions.
Leakage from jar	Jar or lid not tightened properly. Gasket damaged or missing.	Ensure lid and jar are tightly closed. Inspect the rubber sealing ring.
Motor stops during use	Overheating due to prolonged use. Overloading.	Unplug and allow motor to cool for 30-60 minutes. Reduce the quantity of ingredients.
Poor grinding/ blending results	Incorrect jar or blade for the task. Ingredients too large or hard.	Use the recommended jar. Cut ingredients into smaller pieces. Use the pulse function.

7. Technical Specifications

- **Model:** Nuti Mixer Jazz 600
- **Motor Power:** 600 Watts
- **Motor Type:** 100% Copper
- **Special Feature:** Pulse Technology
- **Primary Jar Capacity:** 500 ml
- **Small Jar Capacity:** 300 ml

- **Material (Body):** ABS Plastic
- **Blade Material:** Stainless Steel
- **Product Dimensions (Main Unit):** 12D x 33.4W x 15H cm
- **Weight:** 1900 grams
- **Power Source:** Corded Electric
- **Controls Type:** Push Button
- **Color:** Black/Silver
- **Warranty:** 2 Years

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.