
Overview

The Horavie Mini Single Serve Coffee Maker is a compact, one-cup coffee machine designed for use with K-Cup pods and ground coffee. It features a simple one-button operation, a visible water window, and a descaling reminder light.



Features and Components

Main Unit

- **Water Tank with View Window:** Allows you to monitor the water level. The maximum capacity is 12 ounces.
- **Brew Button:** The primary control to start the brewing cycle.
- **Descaling Reminder Light:** An indicator that illuminates in red when the machine requires descaling.
- **K-Cup Holder:** A compartment designed to hold a standard K-Cup pod.
- **Permanent Ground Coffee Filter:** A reusable filter basket for brewing with ground coffee.
- **Drip Tray and Cup Stand:** Accommodates mugs up to 9.45 inches in height.

Technical Specifications

- **Dimensions:** 7.85"D x 4.33"W x 9.45"H
- **Weight:** 2.2 pounds
- **Voltage:** 120V (for use in the United States)
- **Brew Sizes:** Adjustable from 6 to 12 ounces
- **Special Features:** Auto Shut-Off, Portable, Lightweight
- **Materials:** BPA-free and heat-resistant construction

Use Guide

Initial Setup and First Use

1. Unpack the coffee maker and all components (coffee maker, permanent filter, K-Cup holder).
2. Place the machine on a flat, stable, and heat-resistant surface.
3. Before the first brew, fill the water tank to the maximum level with clean water and run a brewing cycle without coffee to clean the internal system. Discard this water.

Brewing with K-Cup Pods

1. Lift the lid and insert a standard K-Cup pod into the designated holder.
2. Close the lid securely.
3. Fill the water tank with the desired amount of cold water (6 to 12 oz). Do not exceed the maximum water level.

4. Place your mug on the drip tray.
5. Press the brew button. The brewing cycle will begin, and your coffee will be ready in approximately 120 seconds.
6. The machine will automatically shut off when brewing is complete.

Brewing with Ground Coffee

1. Lift the lid and remove the K-Cup holder if present.
2. Insert the permanent filter basket into the brew head.
3. Add one tablespoon of ground coffee per 6 ounces of water into the filter.
4. Close the lid securely.
5. Fill the water tank with the desired amount of cold water.
6. Place your mug on the drip tray and press the brew button.



Cleaning and Maintenance

Daily Cleaning

- Remove and rinse the K-Cup holder or permanent filter after each use.
- Wipe the exterior of the machine with a damp cloth. Do not immerse the main unit in water.
- Empty and rinse the drip tray regularly.

Descaling Procedure

The descaling reminder light will illuminate in red when maintenance is required.

1. Ensure the K-Cup holder and ground coffee filter are empty.
2. Fill the water tank with a descaling solution mixed with water as per the solution's instructions.
3. Place a large mug or container on the drip tray.
4. Press and hold the brew button for 2 seconds to initiate the self-cleaning descaling cycle.
5. Allow the entire solution to run through the machine.
6. Rinse the water tank thoroughly and run at least two cycles with clean water to flush out any remaining descaling solution.

Regular descaling prevents clogging and ensures optimal performance and longevity.

Safety Information

- This appliance is for household use only.
- Always operate on a flat, dry, and stable surface.
- Do not exceed the maximum water level indicated in the tank.
- Unplug the unit when not in use and before cleaning.
- The exterior surfaces may become hot during operation.
- Use only with a 120V AC power source.
- This product is not dishwasher safe.

Troubleshooting

- **Machine does not turn on:** Check that the power cord is securely plugged into a working 120V outlet.
- **No water flow or slow brewing:** The machine may need descaling. Initiate the descaling procedure.
- **Descaling light is on:** Perform the descaling process as outlined in the manual.
- **Coffee tastes weak or bitter:** Adjust the amount of ground coffee used or try a different coffee blend. Ensure you are using the correct brew size for the amount of coffee.
- **Water leaks:** Ensure all components (lid, K-Cup holder, filter) are correctly and securely positioned. Check that the water tank is properly seated.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.