

## Overview

The Horavie Single Serve Coffee Maker is a compact, one-cup coffee machine designed for use with K-Cup pods or ground coffee. It features a 12-ounce water reservoir with a viewing window, one-touch brewing, and a descaling reminder light.



## Features

### Dual Brewing System

The coffee maker accommodates two types of coffee inputs:

- **K-Cup Pods:** Use compatible single-serve coffee pods.

- **Ground Coffee:** Use the included permanent filter for loose ground coffee.



## Adjustable Brew Size

You can select a brew volume between 6 and 12 ounces.

## Viewing Tank and Water Level Indicator

The built-in water tank has a view window, allowing you to monitor the water level before and during brewing.



## One-Touch Operation

A single button controls the brewing process. The machine is designed to brew a cup in approximately 120 seconds.

## Descaling Reminder and Self-Cleaning

An indicator light will illuminate to signal when descaling is required. The unit has a self-cleaning function to help maintain performance.



## Compact and Portable Design

With dimensions of 7.85"D x 4.33"W x 9.45"H and a weight of 2.2 pounds, the unit is designed for small spaces, offices, or travel.



## Auto Shut-Off

The coffee maker includes an automatic shut-off feature for safety and energy efficiency.

## Use Guide

### Before First Use

1. Remove all packaging materials.
2. Wash the mug plate and the permanent filter (if using ground coffee) with warm, soapy water. Rinse thoroughly.
3. Perform a cleaning brew by running a full cycle (12 oz.) using clean water only, without any coffee. This removes any residual materials from manufacturing.

### Daily Brewing Instructions

1. **Add Water:** Lift the lid and fill the water tank with fresh, cold water. Do not exceed the maximum water level indicated on the tank.
2. **Prepare Coffee:**
  - **For K-Cups:** Place a compatible K-Cup pod into the pod holder.
  - **For Ground Coffee:** Insert the permanent filter into the holder. Add one tablespoon of ground coffee per 6 oz. of water, or to taste.
3. **Place Your Mug:** Position a mug (up to 5 inches tall) on the mug plate beneath the brew head.
4. **Brew:** Press the brew button once. The brewing process will begin. Your coffee will be ready in approximately 2 minutes.
5. **Completion:** The machine will stop automatically. You can remove your mug immediately.

### Descaling and Cleaning

**Important:** Ensure the capsule holder or ground coffee filter is empty before starting the descaling process.

1. When the descaling reminder light illuminates (red), prepare a descaling solution as recommended by the solution manufacturer.

2. Fill the water tank with the descaling solution.
3. Press and hold the brew button for 2 seconds to initiate the self-cleaning cycle.
4. Allow the cycle to complete, then run 1-2 cycles with clean water to rinse the system thoroughly.

Wipe the exterior with a soft, damp cloth. Do not immerse the unit in water or place it in a dishwasher.

## Specifications

- **Brand:** Horavie
- **Model Name:** Coffee Maker (KC201)
- **Color:** White (also available in Black and Grey)
- **Product Dimensions:** 7.85"D x 4.33"W x 9.45"H
- **Water Tank Capacity:** 12 ounces
- **Brew Sizes:** 6 to 12 ounces
- **Voltage:** 120V (for use in the United States)
- **Power Source:** AC adapter
- **Special Features:** Auto Shut-Off, Lightweight, Permanent Filter, Portable
- **Included Components:** Coffee Maker, Permanent Filter, K-Pod Holder

## Safety Information

- This appliance is for household use only.
- Always operate on a stable, flat, heat-resistant surface.
- Do not operate the appliance without water in the tank.
- Do not touch hot surfaces. Use handles or knobs.
- To prevent fire or electric shock, do not immerse the cord, plug, or main unit in water or other liquids.
- Unplug the unit when not in use and before cleaning.
- The exterior surfaces may become hot during use.
- This product is made from BPA-free and heat-resistant materials.

## Troubleshooting

- **Machine does not turn on:** Check that the power cord is securely plugged into a working 120V outlet.

- **No water flow / slow brewing:** The machine may need descaling. Follow the descaling instructions.
- **Coffee is not hot enough:** Ensure you are using cold, not pre-heated, water. Run a water-only cycle first to heat the internal components.
- **Water leaks:** Ensure all components (water tank lid, pod holder) are correctly seated and locked into place.
- **Descaling light is on:** Perform the descaling and self-cleaning procedure.

### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.