

Overview

This manual provides instructions for the safe and effective operation of the ROVSUN 2.6 Cu.Ft. Portable Clothes Dryer. This is a compact, front-loading electric dryer designed for use in apartments, dormitories, RVs, and other spaces with limited room.



Features and Specifications

Key Features

- **Portable & Compact:** Dimensions: 23.6" W x 18.1" D x 26.8" H. Weight: 49 lbs.
- **Powerful Drying:** 1400W heating element. Maximum temperature of 149°F (65°C).
- **Stainless Steel Tub:** Durable interior drum construction.
- **Simple Knob Control:** Easy-to-use interface for selecting drying modes and temperature.
- **Multiple Drying Modes:** Includes Normal, Eco, and Auto settings for different fabric types.
- **Safety Features:** Automatic stop when the door is opened during operation. Multiple filtration system to catch lint.

- **Flexible Installation:** Can be used freestanding, stacked, or wall-mounted (mounting kit included).

Technical Specifications

- **Brand:** ROVSUN
- **Model:** GYJ40-168C5
- **Style:** 2.6 CU. FT.
- **Voltage:** 110V
- **Power:** 1400W
- **Capacity:** 2.6 Cubic Feet (Recommended load for quick drying: no more than 9 lbs / 4 kg of wet clothes)
- **Color:** White
- **Access:** Front Load
- **Form Factor:** Freestanding (with stacking/wall-mount options)
- **Included Components:** Clothes Dryer, Wall Mounting Kit

Installation and Setup

Choosing a Location

Place the dryer on a firm, flat, and level surface. Ensure there is adequate space around the unit for ventilation. The exhaust must not be blocked.

- **Freestanding:** Place on a stable floor or countertop.
- **Stacking:** Can be stacked on top of a compatible washing machine using a stacking kit (not included). Ensure the base is secure.
- **Wall Mounting:** Use the included mounting kit to secure the dryer to a wall. Ensure the wall can support the weight of the unit (49 lbs).



Electrical Requirements

Plug the dryer into a dedicated 110V/15A electrical outlet. Do not use an extension cord. Ensure the outlet is properly grounded.

Use Guide

Control Panel Overview

The control panel is located on the top front of the dryer. It features a simple rotary knob to select the drying mode and temperature.

- **Knob:** Turn to select between drying modes: **Normal**, **Eco**, and **Auto**.
- The selected function and corresponding temperature setting are indicated around the knob.

Operating Instructions

1. **Load the Dryer:** Open the front door. Place damp, spun laundry into the drum. Do not overload. For best results and quick drying, load no more than 9 pounds at a time. Close the door firmly.
2. **Select a Drying Mode:** Turn the control knob to choose your desired setting.
 - **Normal:** Standard drying cycle for everyday fabrics like cotton.
 - **Eco:** Energy-saving cycle using lower temperature, suitable for durable items or light drying.
 - **Auto:** Cycle that automatically adjusts time and temperature based on moisture sensing (if equipped) or a preset program.
3. **Start the Dryer:** The dryer will begin operating once the mode is selected. The interior light may turn on.

4. **During Operation:** The drum will rotate, and heated air will circulate. You may open the door at any time to check on items or add/remove laundry; the dryer will automatically stop when the door is opened.
5. **Cycle Completion:** The dryer will stop automatically when the cycle is complete. Remove laundry promptly.

Fabric Care Tips

- Check garment care labels before drying.
- Use the Eco or lower temperature setting for delicate items.
- Do not dry items that have been in contact with flammable substances.

Maintenance and Cleaning

Cleaning the Lint Filter

Clean the lint filter after EVERY load. A clogged filter reduces efficiency, increases drying time, and is a fire hazard.

1. Locate the lint filter compartment (refer to product images, typically near the door or inside the drum opening).
2. Remove the filter.
3. Wipe off all lint by hand or with a soft brush.
4. Reinsert the filter securely.

General Care

- Wipe the exterior and door seal with a soft, damp cloth. Do not use abrasive cleaners.
- Ensure the exhaust area at the back of the dryer remains clear of dust and obstructions.
- Periodically check that the dryer remains level on its surface.

Safety Information

- **Read all instructions** before using the appliance.
- **Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances.**
- Do not use the dryer if the power cord or plug is damaged.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities.

- Supervise children to ensure they do not play with the appliance.
- The dryer will automatically stop tumbling when the door is opened. Wait for the drum to come to a complete stop before reaching inside.
- Do not install the dryer in an area where it may be exposed to water spray or weather.
- Ensure the dryer is properly grounded.

Troubleshooting

Problem	Possible Cause	Solution
Dryer does not start.	Power cord not plugged in. Door not fully closed. Circuit breaker tripped.	Ensure plug is secure. Close door firmly. Check home circuit breaker/fuse.
Clothes are not drying.	Lint filter clogged. Overloaded drum. Incorrect mode selected. Exhaust blocked.	Clean lint filter. Reduce load size. Select appropriate mode (e.g., Normal). Check rear exhaust.
Dryer is noisy.	Unit not level. Foreign object in drum. Loose installation.	Place dryer on level surface. Check drum for coins, etc. Secure mounting brackets if wall-mounted.
Dryer stops during cycle.	Door was opened. Overheating protection activated.	Close door to resume. Allow dryer to cool for one hour. Clean lint filter and ensure ventilation is clear before restarting.

Warranty and Support

This ROVSUN product is backed by a **1-year limited warranty** from the date of purchase. The warranty covers defects in materials and workmanship under normal household use.

For warranty service or product support, contact the seller through your Amazon purchase history or visit the ROVSUN Store on Amazon.

Manufacturer: ROVSUN

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

