

Overview

The BEAUTURAL 2-in-1 Steamer & Iron is a handheld garment care appliance designed to remove wrinkles from clothing and fabrics. It combines the functions of a steamer and a traditional iron, featuring a ceramic heating plate and a burst steam function.



Features and Specifications

Key Features

- **2-in-1 Functionality:** Operates as both a steamer and a dry iron.
- **1200W Power & Fast Heat-up:** Heats up in approximately 30 seconds.
- **Ceramic Heating Plate:** Thermostatic plate maintains a temperature of 310°F (approx. 154°C).
- **Burst Steam Button:** Delivers a concentrated steam shot for stubborn wrinkles.
- **Anti-Drip Technology:** Designed to prevent water leakage during use.
- **Auto Shut-off:** Built-in safety feature to prevent overheating.
- **Removable Water Tank:** 200ml (6.76oz) capacity for easy filling and cleaning.
- **Extra-Long Power Cord:** 8-foot (2.4-meter) cord provides extended reach.
- **Versatile Fabric Compatibility:** Suitable for use on silk, linen, wool, cotton, polyester, nylon, velvet, plush, and blended fibers.

Technical Specifications

- **Brand:** BEAUTURAL
- **Model Number:** 722NA-0017
- **Style:** 2-in-1 Steam & Iron
- **Color:** Purple
- **Wattage:** 1200 watts
- **Voltage:** 120 Volts (For use in 120V countries only)
- **Water Tank Capacity:** 200 Milliliters
- **Item Weight:** 0.99 Kilograms
- **Power Cord Length:** 8 ft (2.4 m)

Specification





Use Guide

Parts Identification

- **Main Body/Handle:** Contains the heating element and controls.
- **Ceramic Heating Plate:** The soleplate used for direct contact with fabric.
- **Steam Nozzles/Vents:** Located on the heating plate, they release steam.
- **Burst Steam Button:** Typically located on the handle for on-demand steam.
- **Continuous Steam Control:** Button or trigger for steady steam output.
- **Water Tank:** Detachable reservoir located at the rear or base of the unit.
- **Power Cord:** 8-foot cord with a 120V plug.

Initial Setup and Filling

1. **Unpack:** Remove all packaging materials from the appliance and cord.
2. **Fill the Water Tank:**
 - Detach the water tank from the main unit.

- Fill with clean, cool tap water up to the maximum fill line. Do not overfill.
 - Securely reattach the tank to the steamer.
3. **Prepare the Garment:** Hang the garment on a sturdy hanger or lay it flat on an ironing board.

Operating Instructions

1. **Power On:** Plug the power cord into a standard 120V electrical outlet.
2. **Heat Up:** The unit will begin heating. Wait approximately 30 seconds for it to reach operating temperature. You may see an indicator light or hear a ready signal if equipped.
3. **Vertical Steaming (On a Hanger):**
 - Hold the steamer vertically, a few inches from the fabric.
 - Use your free hand to gently pull the fabric taut.
 - Press and hold the continuous steam button. Move the steamer slowly from the top of the garment to the bottom, following the fabric's grain.
 - For tough wrinkles, point the nozzle close to the fabric and press the burst steam button.
4. **Horizontal Ironing (On a Surface):**
 - Place the garment on a flat, heat-resistant surface.
 - You can use the appliance in "dry iron" mode (without pressing the steam button) or with continuous steam.
 - Glide the ceramic heating plate over the fabric with slow, even pressure, as you would with a traditional iron.
5. **Refilling:** If the water tank becomes empty, unplug the unit, allow it to cool, detach the tank, refill, and reattach before continuing.
6. **Power Off & Storage:**
 - Release all buttons and unplug the appliance.
 - Empty any remaining water from the tank.
 - Allow the unit to cool completely before storing in a dry place.
 - Loop the power cord loosely; do not wrap it tightly around the hot unit.



Safety and Maintenance

Important Safety Instructions

- Read all instructions before use.
- **Use only with 120V AC power outlets.** Using with other voltages can cause damage or fire.
- Do not leave the appliance unattended while plugged in.
- The ceramic plate and emitted steam are very hot. Keep away from skin, eyes, and flammable materials.
- Always use the handle. Do not touch the metal heating plate during or immediately after use.
- Do not direct steam at people, animals, or electrical equipment.
- Use only clean, cool tap water. Do not add descaling agents, perfumes, or starch to the water tank.

- Unplug the appliance and allow it to cool completely before cleaning, refilling, or storing.
- This appliance has a hot surface. Persons insensitive to heat must be careful when using it.
- Keep the appliance and its cord out of reach of children.

Cleaning and Care

- **External Cleaning:** Wipe the exterior with a soft, damp cloth. Do not immerse the unit in water or other liquids.
- **Ceramic Plate:** Wipe clean with a damp cloth after it has completely cooled. Avoid abrasive cleaners or scouring pads.
- **Water Tank:** Periodically rinse the detachable tank with clean water to prevent mineral buildup. Allow to air dry.
- **Storage:** Store in a cool, dry place with the water tank empty.
- **Descaling:** If you live in a hard water area, mineral deposits (scale) may form. Follow any descaling instructions provided in separate packaging materials. Generally, using a mixture of equal parts white vinegar and water, running it through the steamer, and then flushing thoroughly with clean water can help.

Auto Shut-off Feature

The appliance is equipped with an automatic safety shut-off. If the unit is left idle and overheats, it will turn itself off. If this occurs, unplug the appliance and allow it to cool down completely before attempting to use it again.

Troubleshooting

- **No steam or weak steam:**
 - Ensure the water tank is properly attached and filled.
 - Check that the unit is fully heated (wait 30+ seconds).
 - The steam vents may be clogged with mineral deposits. Clean according to descaling instructions.
- **Water is dripping from the unit:**
 - Do not overfill the water tank.
 - Ensure the tank is correctly seated and sealed.
 - The unit may not be hot enough. Wait for it to reach full operating temperature before using the steam function.

- **Appliance does not heat up:**
 - Verify the power cord is securely plugged into a working 120V outlet.
 - Check household circuit breakers or fuses.
- **Unusual smell during first use:** A slight odor is normal during initial use as manufacturing residues burn off. Ensure the room is well-ventilated.
- **Auto shut-off activates frequently:** This is a safety feature. Ensure you are using the appliance continuously and not leaving it idle while plugged in and heated.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.