

Overview

The MOHOMO Nova V5 is a cordless stick vacuum cleaner designed for cleaning various surfaces in the home, including hardwood floors, carpets, and car interiors. It features a self-standing design, an anti-tangle brush, and an OLED touch screen for operation.



Features and Specifications

Key Specifications

- **Model:** Nova V5
- **Motor Power:** 650W brushless motor
- **Suction Power:** 55KPa
- **Battery Runtime:** Up to 70 minutes (Eco Mode), 20 minutes (Max Mode)
- **Battery Charge Time:** 4 hours
- **Dust Container Capacity:** 1.8 Liters
- **Filtration:** HEPA filter, 99.99% efficiency
- **Noise Level:** ≤ 58 dB
- **Weight:** 8 Pounds
- **Dimensions (L x W x H):** 8" x 4" x 45"

Main Features

Power and Suction

Equipped with a 650W brushless motor generating 55KPa of suction power at 210,000 rpm for effective cleaning on multiple surfaces.

Battery and Runtime

Powered by an 8x2800 mAh lithium-ion battery. Provides up to 70 minutes of runtime in minimum suction mode and 20 minutes in maximum suction mode after a full 4-hour charge.

Self-Standing Design

The vacuum can stand upright on its own for convenient temporary storage and recharging.

OLED Touch Screen

An LED smart touch screen on the handle displays the current suction mode, remaining battery life, and operational status.

Anti-Tangle Brush

The motorized floor brush has a V-shaped design and comb structure to reduce hair entanglement. It includes LED lights to illuminate dark areas.

Filtration System

Uses a cyclonic system and a HEPA filter to capture 99.99% of fine dust and particles.

Included Components

- MOHOMO Nova V5 Cordless Vacuum Cleaner main unit
- Wall Mounting Bracket
- Long Flat brush (crevice tool)
- 2-in-1 Brush (upholstery/dusting brush)
- HEPA Filter
- Sponge Filter
- Battery Charger
- Mini Cleaning Brush
- Quick Start Guide
- User Manuals



Use Guide

Assembly

1. Insert the telescopic wand into the main vacuum body until it clicks into place.
2. Attach the desired cleaning tool (e.g., floor brush, crevice tool) to the end of the wand.
3. Ensure the battery is correctly installed in the main unit.

Charging the Vacuum

1. Plug the provided MOHOMO power adapter into a standard wall outlet.
2. Connect the charger to the charging port on the vacuum cleaner.
3. A full charge takes approximately 4 hours. The battery indicator on the OLED screen will show the charging status.
4. For permanent storage, you can mount the vacuum on the included wall bracket, which also serves as a charging dock.

Operating the Vacuum

1. Press the power button located on the handle to turn on the vacuum.
2. Use the OLED touch screen to select the desired suction mode:
 - **Eco Mode:** For longer runtime and light cleaning.
 - **Max Mode:** For maximum suction power and intensive cleaning.
3. The screen will display the selected mode and the remaining battery life.
4. To pause cleaning, press the power button once. Press it again to resume.
5. The vacuum can stand upright on flat surfaces when not in use.



Cleaning Different Surfaces

- **Hard Floors & Carpets:** Use the motorized floor brush. The brush automatically adjusts between surfaces.
- **Furniture, Stairs, & Cars:** Use the 2-in-1 brush or the long flat crevice tool.
- **Corners & Edges:** The LED lights on the floor brush help illuminate debris in dark areas.

Emptying the Dust Container

1. Press the dust container release button to detach it from the main body.
2. Hold the container over a trash bin and press the bottom latch to open the lid, allowing debris to fall out.
3. Close the lid and reattach the container to the vacuum until it clicks.

Maintenance and Cleaning

Cleaning the Filters

1. Remove the dust container.

2. Take out the HEPA filter and the sponge filter.
3. Rinse both filters with water. Do not use detergents.
4. Allow them to air dry completely for at least 24 hours before reinstalling.
5. Reinstall the dry filters and the dust container.

Cleaning the Brush Roll

1. Remove the floor brush from the wand.
2. Use the included mini cleaning brush or scissors to remove any tangled hair or fibers from the V-shaped brush roll.
3. Wipe the brush housing with a dry cloth.

Troubleshooting

- **Vacuum does not turn on:**

- Check that the battery is correctly installed.
- Ensure the vacuum is charged. Connect the charger and check the OLED screen for the battery icon.
- Use only the original MOHOMO power adapter.

- **Reduced suction power:**

- Check and empty the dust container if it is full.
- Inspect and clean the filters. Ensure they are completely dry before reinstallation.
- Check the floor brush and nozzle for blockages and remove any debris.

- **Short battery life:**

- Ensure you are using the original charger.
- Battery performance may decrease over time with normal use.

- **Brush roll is tangled or not spinning:**

- Turn off the vacuum and remove the floor brush.
- Clear any hair, strings, or debris wrapped around the brush roll.

Warranty and Support

This product is covered by a 3-year manufacturer's warranty. For troubleshooting and technical support, the manufacturer provides 24/7 customer service. If you encounter problems, please

contact the seller through your Amazon purchase history or visit the MOHOMO store page for assistance.

Safety Instructions

- Use only the provided MOHOMO power adapter to charge the vacuum.
- Do not use the vacuum to pick up liquids, burning materials, or sharp objects.
- Do not use the vacuum with a damaged cord or plug.
- Unplug the charger when not in use.
- Keep the vacuum and charger away from heat sources and water.
- Ensure filters are completely dry before reinstalling them after washing.
- This appliance is for household use only.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.