

## Overview

The BEAUTURAL Fabric Shaver is a rechargeable, electric lint remover designed to remove pilling, fuzz, and lint from various fabrics. It features a digital LED display, three speed settings, and a safety lock mechanism.



## Features and Specifications

### Key Features

- **LED Display:** Shows current battery level and selected speed setting.
- **3-Speed Settings:** Adjustable speed for different fabric types and pilling severity.
- **6-Leaf Stainless Steel Blades:** For efficient lint and pilling removal.
- **Rechargeable Battery (Type-C):** Cordless and portable design.
- **Safety Lock:** Device stops automatically if the lid is open or loose.

- **Removable Lint Collection Box:** For easy disposal of collected lint.
- **Included Cleaning Brush:** For cleaning the device.

## Technical Specifications

- **Brand:** BEAUTURAL
- **Model Number:** 1-MR02NA15
- **Materials:** Metal, Plastic
- **Handle Material:** Plastic
- **Operation Mode:** Automatic
- **Color Options:** Light Gray, Black



## Use Guide

### Parts Identification

1. **Power Button:** Turns the device on/off and cycles through speed settings.
2. **LED Display:** Indicates battery level (1-3 bars) and speed setting (1, 2, or 3).
3. **Shaver Head/Mesh Foil:** The metal honeycomb mesh that covers the rotating blades. Contains holes of various sizes to catch lint.
4. **Lint Collection Box:** Compartment that collects removed lint and pilling.
5. **Type-C Charging Port:** For recharging the internal battery.
6. **Safety Lock Latch:** Secures the shaver head. The device will not operate if this is not properly closed.

### Initial Setup and Charging

1. Before first use, fully charge the device using the provided Type-C cable.

2. Connect the cable to the Type-C port on the shaver and a standard USB power adapter (not included).
3. The LED display will indicate the charging progress. A full charge is recommended.


## Operating Instructions

1. **Prepare the Fabric:** Lay the garment or item flat on a stable surface.
2. **Power On:** Press the power button. The LED display will light up, showing the battery level and default speed (likely Speed 1).
3. **Select Speed:** Press the power button repeatedly to cycle through the three speed settings (1, 2, 3). Use lower speeds for delicate fabrics and higher speeds for tougher pilling or thicker materials.
4. **Begin Shaving:** Place the shaver head flat against the fabric. Gently move the device in straight, slow, overlapping strokes. Do not press down hard; let the blades do the work.
5. **For Stubborn Pilling:** If lint is deeply embedded, make multiple passes over the same area or switch to a higher speed setting.
6. **Power Off:** Press and hold the power button to turn the device off after use.



## Cleaning and Maintenance

1. **Empty the Lint Box:** Regularly open the lint collection box and empty the contents into a trash bin.
2. **Clean the Blades and Mesh:** Use the included small brush to sweep away any lint residue from the blades and the inside of the mesh head.
3. **General Wiping:** Wipe the exterior of the device with a dry or slightly damp cloth. Do not submerge the shaver in water.

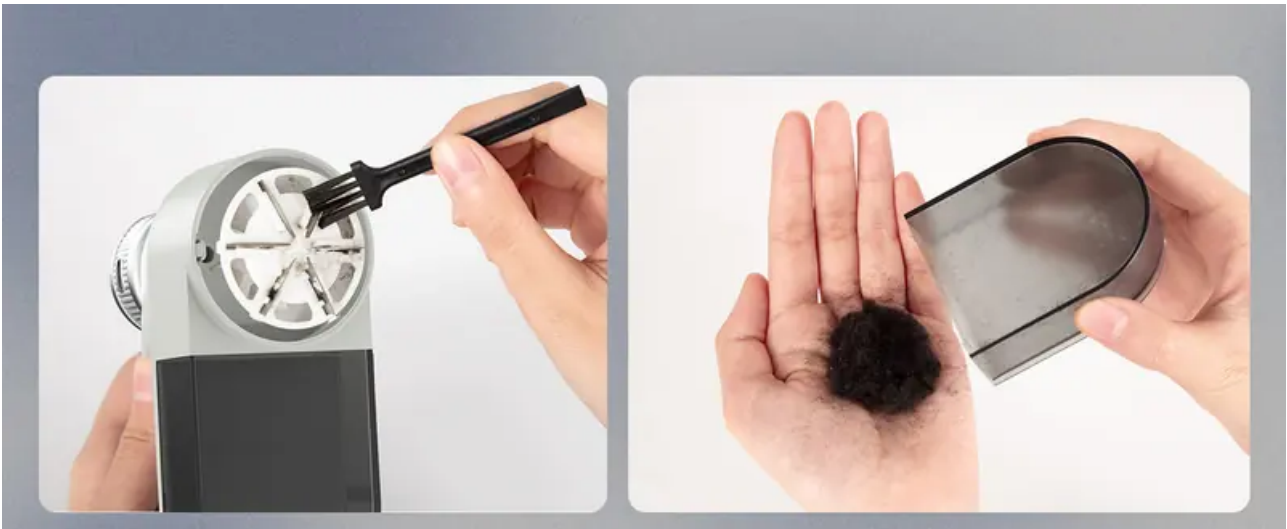

## Troubleshooting

- **Device does not power on:**
  - Ensure the shaver head is properly tightened and closed. The safety lock prevents operation if the head is loose.
  - Check the battery level. Recharge the device if necessary.
- **Poor lint removal performance:**
  - The lint collection box may be full. Empty it.
  - The blades or mesh may be clogged. Clean them with the provided brush.
  - Switch to a higher speed setting for more effective cleaning.
  - For fine, embedded fuzz, multiple passes may be required.
- **Device stops during use:**
  - The safety lock may have been triggered. Check that the shaver head is securely closed.

## Safety Information

- Always turn the device off before cleaning or when not in use.
- Keep the shaver head away from fingers, hair, and loose cords during operation.
- The safety lock is designed to prevent accidental activation. Do not attempt to disable it.
- This device is intended for fabric care only. Do not use it on human or animal skin.
- Keep the device away from water and other liquids.
- Store in a cool, dry place out of reach of children.

**Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

---

Document generated by [ManualsFile](#)