

## 1. Overview

This manual provides instructions for the safe and effective use of the AHNR Handheld Vacuum Cordless. This is a cordless, rechargeable vacuum cleaner designed for quick cleaning in homes, cars, and offices.



The vacuum features a 120W motor, a 400ml dust cup, a built-in LED light, and uses a dual HEPA and steel filtration system. It is powered by a rechargeable lithium-ion battery.

## 2. Package Contents

Before use, verify that all the following items are included in the package:

- Handheld Vacuum Cleaner (Main Unit)

- Extended Long Tube
- 2-in-1 Long Suction Nozzle (with attached brush)
- Brush Tool
- Two (2) Replaceable HEPA Filters
- One (1) Upgraded Steel Filter
- Type-C Charging Cable
- User Manual

**Note:** This product includes a charging cable only. A power adapter (charger) is not provided and must be purchased separately if one is not available.

# MULTI-USE ACCESSORIES

Meeting Every Cleaning Requirement of Yours



## Brush+Suction Nozzle

To clean dust in various gaps



## Brush

To clean dust on various surfaces



## Extended Hose

360°flexible, and used with other accessories



## 3. Product Features & Parts

### 3.1 Main Unit

- **Power Button:** Located on the body. Press to turn the vacuum on or off.

- **Dust Cup Release Button:** Press to detach the dust cup for emptying.
- **LED Light:** Located near the suction intake. Illuminates automatically when the vacuum is turned on to help see in dim areas.
- **Suction Intake:** Where accessories attach.
- **Type-C Charging Port:** For connecting the included charging cable.



## 3.2 Accessories

- **Extended Long Tube:** Connects between the main unit and other nozzles to reach under furniture and into corners.
- **2-in-1 Long Suction Nozzle:** A crevice tool with a brush attached. Use for cleaning fabric surfaces (sofas, curtains) and narrow gaps.
- **Brush Tool:** A soft brush for dusting delicate surfaces like keyboards, shelves, and blinds.

## 4. Use Guide

### 4.1 Assembly

1. Ensure the vacuum is turned off.
2. Select the desired accessory (e.g., brush nozzle, extended tube).
3. Firmly push the accessory onto the vacuum's suction intake until it clicks into place.
4. To attach the extended tube, first connect it to the main unit, then attach a nozzle to the end of the tube.

### 4.2 Basic Operation

1. Press the power button to turn the vacuum on. The LED light will also illuminate.
2. Guide the nozzle over the surface to be cleaned.
3. For best results on carpets or embedded debris, move the nozzle slowly back and forth.
4. Press the power button again to turn the vacuum off.

### 4.3 Recommended Uses

- **Home:** Hard floors, carpets, stairs, window sills.
- **Car Interior:** Seats, floor mats, cup holders, dashboard vents.
- **Office:** Desktops, keyboards, upholstered chairs.
- **Furniture:** Sofas, curtains, cushions.

Use the brush tool for delicate surfaces and the 2-in-1 nozzle for fabrics and crevices.

### 4.4 Emptying the Dust Cup

1. Turn the vacuum off and disconnect it from any power source.
2. Press the dust cup release button and pull the dust cup away from the main body.
3. Hold the dust cup over a trash bin and open the bottom lid to empty the contents.
4. Close the lid and reattach the dust cup to the main body until it clicks securely.

**Warning:** Empty the dust cup when it is half to two-thirds full to maintain optimal suction power. Do not overfill.

## 4.5 Cleaning and Replacing Filters

The dual filtration system includes two washable HEPA filters and one steel filter.

1. Remove the dust cup as described above.
2. The filters are located inside the top section of the vacuum body.
3. Gently remove the HEPA and steel filters.
4. Tap the filters to remove loose dust. Rinse the HEPA filters with water and allow them to dry **completely** (at least 24 hours) before reinstalling.
5. Wipe the steel filter with a dry cloth.
6. Reinstall the dry filters and reassemble the unit.

**Important:** Never operate the vacuum with wet filters, as this can damage the motor. Always ensure HEPA filters are fully dry before use.

## 5. Charging and Battery

- **Battery:** Built-in 7800mAh Lithium-Ion rechargeable battery.
- **Runtime:** Up to 30 minutes of continuous use on a full charge.
- **Charging Time:** Approximately 4 hours for a full charge.
- **Charging Method:** Connect the provided Type-C cable to the charging port on the vacuum and to a USB power source (e.g., wall adapter, car charger, computer USB port).

**Note:** Use only a standard 5V/2A USB power adapter (not included). Using an incompatible charger may damage the battery.

For battery longevity, avoid completely draining the battery before recharging. Store the vacuum in a cool, dry place.

## 6. Troubleshooting

- **Vacuum will not turn on:** Check that the battery is charged. Ensure the filters are clean, dry, and properly installed.
- **Weak suction power:** Empty the dust cup. Check and clean the filters. Remove any blockages from the nozzle, tube, or suction intake.
- **Vacuum turns off unexpectedly:** The battery may be depleted. Recharge the unit. The motor may also overheat if filters are clogged; turn off, clean filters, and let the unit cool.
- **LED light does not work:** The light operates only when the vacuum is on. If the vacuum is on but the light is off, contact customer service.

## 7. Specifications

- **Model:** LT-156
- **Suction Power:** 16,000 PA
- **Motor Power:** 120W (0.161 HP)
- **Dust Cup Capacity:** 400 ml
- **Battery:** 7800mAh Lithium-Ion
- **Charging Port:** Type-C
- **Noise Level:** ≤84 dB
- **Filters:** 2x HEPA Filter, 1x Steel Filter
- **Dimensions (L x W x H):** 17.4" x 5.5" x 3.9"
- **Weight:** Lightweight (specific weight not provided)

## 8. Safety Instructions

**WARNING:** To reduce the risk of fire, electric shock, or injury:

- Do not use to pick up flammable or combustible liquids, burning materials (ashes, coals), or sharp, hard objects.
- Do not immerse the vacuum, charging cable, or any electrical parts in water or other liquids.
- Do not use the vacuum with a damaged cord or plug, or if it has been dropped, damaged, or left outdoors.
- This appliance is for household use only. Not intended for commercial or industrial use.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Unplug the charger from the outlet when not in use and before cleaning or maintenance.
- Use only the manufacturer's recommended replacement parts and accessories.

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.