

Overview

This manual provides instructions for the safe and effective use of the Ultrasonic Retainer Cleaner. This device uses 45kHz ultrasonic waves and LED light technology to clean dental appliances, jewelry, and other small items.



Features and Specifications

Key Features

- **45kHz Ultrasonic Cleaning:** Provides 360-degree deep cleaning for thorough removal of stains and debris.

- **Four Cleaning Modes:** Combines ultrasonic waves and LED light in different programs for various cleaning needs.
- **Digital Timer & Display:** Shows the remaining cleaning time for the selected mode.
- **Low-Noise Operation:** Operates at approximately 40dB for quiet use.
- **Multi-Purpose Design:** Includes two top holes for cleaning long-handled items like toothbrush heads.
- **Portable Construction:** Compact size (4.33" x 4.33" x 3.82") with a lightweight, durable ABS shell.

Technical Specifications

- **Power:** 25W
- **Ultrasonic Frequency:** 45kHz
- **Tank Capacity:** 200ml (Stainless Steel)
- **Product Weight:** Approximately 1.19 lbs
- **Noise Level:** ~40dB
- **Input Power:** 100-240V AC

U-V Light Can Eliminate 99% of Residual Stains

Effectively cleans those hard-to-reach tiny particles and crevices



Remove Odors



Eliminate Harmful Substance



Extend Freshness



Stay Healthy



What's in the Box

- Ultrasonic Retainer Cleaner Unit (1)
- Stainless Steel Cleaning Basket (1)
- Tweezers (1)
- Instruction Manual (1)
- Warranty Card (1)

Use Guide

Control Panel and Indicators

The device features a single control button and a digital display. Pressing the button cycles through the four cleaning modes, each indicated by a different colored LED light on the display.

Cleaning Modes

- **Mode 1 (Green Light):** 5-minute (300-second) ultrasonic cleaning with LED light.
- **Mode 2 (Red Light):** 10-minute (600-second) pulsed ultrasonic cleaning with LED light.
- **Mode 3 (Blue Light):** 10-minute ultrasonic cleaning without LED light.
- **Mode 4 (All Lights On):** 10-minute LED cleaning without ultrasonic waves.

Step-by-Step Cleaning Instructions

1. **Prepare the Cleaner:** Place the unit on a stable, flat surface. Ensure the four anti-slip silicone pads on the bottom are clean.
2. **Fill the Tank:** Pour water or a recommended cleaning solution into the stainless steel tank. Do not exceed the 200ml maximum capacity. Do not fill above the top rim.
3. **Place Items:** Put the items to be cleaned into the provided stainless steel basket. For long items like toothbrush heads, you may insert them through the top holes. Use the tweezers to handle small items.
4. **Lower the Basket:** Submerge the basket into the tank, ensuring items are fully covered by the liquid.
5. **Select a Mode:** Press the power/control button to cycle through and select your desired cleaning mode. The digital display will show the countdown timer for the selected cycle.
6. **Complete the Cycle:** The device will stop automatically when the timer reaches zero. Remove the basket and your cleaned items.
7. **Empty and Dry:** Pour out the liquid from the tank. Wipe the tank and the exterior of the unit dry with a soft towel.

Recommended Items for Cleaning

- Dental retainers, aligners (e.g., Invisalign), night guards, and mouth guards.
- Dentures and braces (removable parts).
- Toothbrush heads and makeup brushes.
- Jewelry, rings, and waterproof watches.
- Other small, non-electronic items that are safe to submerge in water.

Care and Maintenance

- Always unplug the device before cleaning or maintenance.
- After each use, empty the tank, rinse it with clean water if necessary, and wipe it dry.
- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or submerge the main unit in water.
- Periodically, you may run a cleaning cycle with a mixture of water and a mild descaling agent (like white vinegar) to remove mineral deposits, then rinse thoroughly.
- Store the device in a cool, dry place.

Safety Information

- Read all instructions before use.
- For indoor use only. Use only with the provided power adapter.
- Do not operate the device continuously for more than 20 minutes. Allow it to cool between extended cycles.
- Do not use with flammable or corrosive liquids.
- Ensure the liquid level is correct and never operate the device without liquid in the tank.
- Do not clean the main unit or power cord with liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities.
- Keep the device and cord away from hot surfaces.
- Unplug the device when not in use.

Troubleshooting

- **Device does not turn on:** Check that the power adapter is properly plugged into both the wall outlet and the device.
- **No ultrasonic action or bubbles:** Ensure there is sufficient liquid in the tank (covering the items). The ultrasonic transducer is located at the bottom of the tank; ensure it is not obstructed.
- **LED light does not work:** The selected mode may not include the LED function (e.g., Blue Light mode). Try a different mode.
- **Unsatisfactory cleaning results:** For stubborn stains, use a recommended alkaline cleaning solution. Ensure items are fully submerged and not stacked tightly. Pre-rinse heavily soiled items.

- **Unusual noise or vibration:** Ensure the device is on a stable, level surface. Check that items in the basket are not touching the sides of the tank.

Product Information

Manufacturer: WBXWBX

Item Model Number: WBXWBX

ASIN: B0F99DQ7YS

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)