

## 1. Overview

The Reteless V115P is a portable, multi-band digital radio. It receives AM, FM, Shortwave (SW), Longwave (LW), and Weather Band (WB) broadcasts. The device includes a rechargeable battery, digital tuner, Bluetooth connectivity, a TF card slot for media playback and recording, a built-in flashlight, and alarm clock functions.



## 2. Package Contents

- Reteless V115P Radio
- USB Charging Cable
- Lithium Battery (BL-10C, 1800mAh)
- Owner's Manual

- Bracket Buckle
- Lanyard


### 3. Features & Specifications

#### 3.1 Physical Specifications

- **Dimensions:** 5.31" L x 0.98" W x 3.26" H
- **Weight:** 192 grams
- **Enclosure Material:** Plastic
- **Color:** Black

#### 3.2 Radio Tuner

- **Bands Supported:** 5-Band (AM, FM, SW, LW, WB)
- **Tuner Technology:** Digital Tuning
- **Frequency Range:**
  - FM: 87-108 MHz
  - AM: 520-1710 KHz (10k step) or 522-1710 KHz (9k step)
  - SW: 4.75-21.85 MHz
- **Station Memory:** Save up to 132 AM, 928 SW+LW, and 440 FM channels.

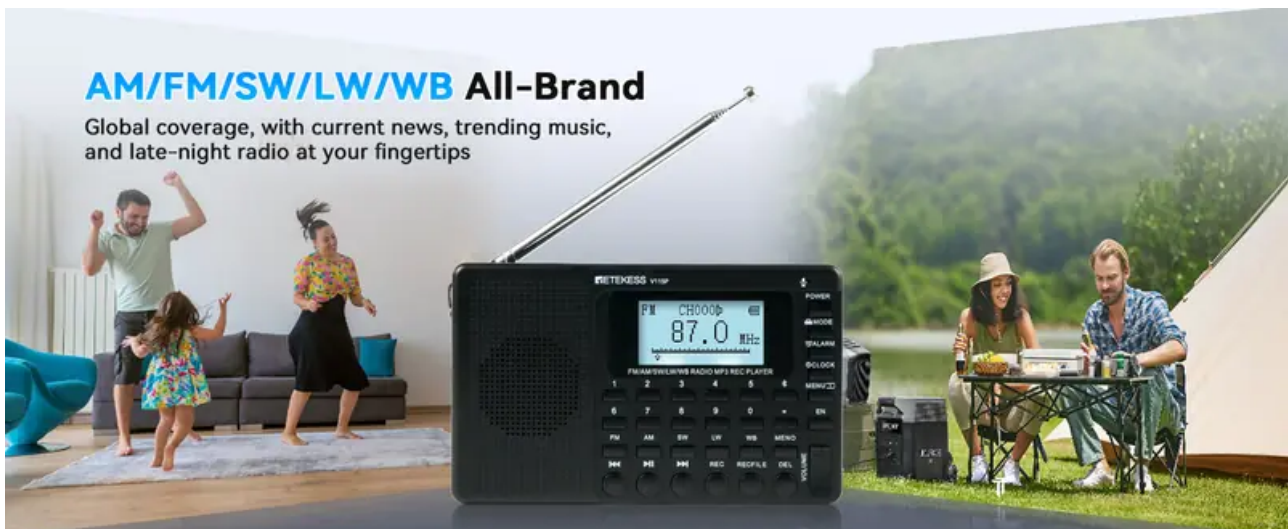

#### 3.3 Audio & Connectivity

- **Speaker:** 3W bass speaker.
- **Connectivity:** Bluetooth, 3.5mm AUX input, USB (for charging).
- **Playback:** Supports MP3, WMA, and WAV audio files from a TF (MicroSD) card.

- **Playback Modes:** Sequential, folder repeat, shuffle, single track repeat.



### 3.4 Power & Battery


- **Battery:** 1 x Rechargeable BL-10C Lithium-Ion battery (1800mAh, included).
- **Charging:** Via Micro USB cable (5V). Full charge takes approximately 3 hours with a 5V/2A adapter.
- **Battery Life:**
  - Approximately 6-8 hours at high volume.
  - Approximately 20 hours at low or medium volume.



### 3.5 Additional Features

- **Recording:** Can record via microphone, line-in, or directly from the radio. Quality options: 64 kbps, 96 kbps, 128 kbps.
- **Flashlight:** Built-in LED light.
- **Display:** LCD screen with adjustable backlight.

- **Clock & Alarm:** Built-in clock with alarm function.
- **Sleep Timer:** Can be set from 00-90 minutes.
- **Language Support:** English, Chinese, Spanish (default is English).
- **Lock Function:** Prevents accidental button presses.

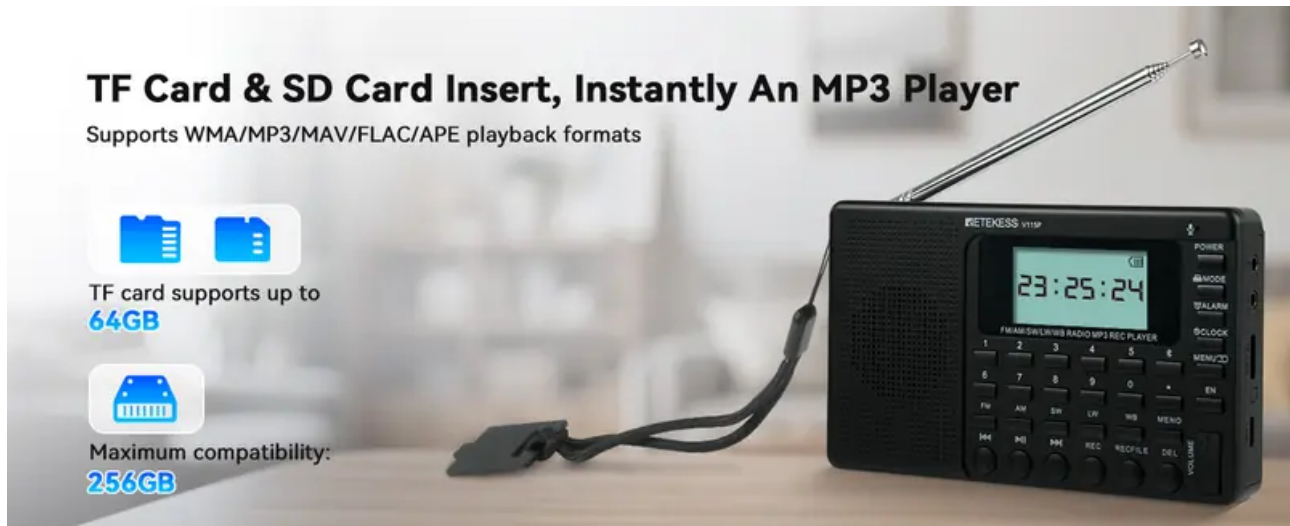

## 4. Use Guide

### 4.1 Initial Setup

1. Insert the included lithium battery into the compartment on the back of the radio.
2. Connect the radio to a power source using the provided USB cable to charge the battery fully.
3. Extend the telescopic antenna for best reception.

### 4.2 Basic Operation

#### Turning On/Off and Volume

Press and hold the Power button to turn the radio on or off. Use the Volume Up (+) and Down (-) buttons to adjust the sound level.

#### Selecting a Band

Press the **BAND** button to cycle through the available radio bands: FM -> AM -> SW -> LW -> WB.

#### Tuning a Station

Use the **Tuning Up** (>>) and **Tuning Down** (<<) buttons to manually search for stations. For fine tuning, press and hold these buttons.

## Saving a Preset Station

1. Tune to the desired station.
2. Press and hold a number key (0-9) on the keypad for a few seconds until the display confirms the save.
3. To recall a preset, press the corresponding number key.

## 4.3 Using the TF Card (MicroSD)

1. Ensure the radio is powered off.
2. Insert a TF card (MicroSD card, up to 256GB capacity, not included) into the slot.
3. Turn on the radio and press the **MODE** button until "TF CARD" appears on the display.
4. Use the Play/Pause, Next, and Previous buttons to control playback.
5. Press the **EQ** button to cycle through 5 sound effects.

## 4.4 Bluetooth Connection

1. Press the **MODE** button until "BT" appears on the display. The radio will enter pairing mode.
2. On your Bluetooth device (e.g., smartphone), enable Bluetooth and search for new devices.
3. Select "Retekess V115P" from the list to pair.
4. Once connected, audio from your device will play through the radio's speaker.

## 4.5 Recording Audio

1. Insert a TF card.
2. Press the **REC** button to start recording.
  - In Radio Mode: Records the currently playing station.
  - In TF Card or AUX Mode: Records the line-in audio.
  - In BT Mode: Records the Bluetooth audio stream.
  - Otherwise, it uses the built-in microphone.
3. Press the **REC** button again to stop recording. Files are saved to the TF card.

## 4.6 Using the Flashlight

Press the **Flashlight** button (typically marked with a bulb icon) to turn the LED light on or off.

## 4.7 Setting the Alarm and Sleep Timer

### Alarm

1. Ensure the clock is set correctly (time is usually set automatically via radio signal or manually through settings).
2. Press the **ALARM** button to enter alarm setting mode. Use the number keys or tuning buttons to set the alarm time.
3. Select the alarm source (Radio or Buzzer).
4. Press **ALARM** again to save and activate.

### Sleep Timer

1. While the radio is playing, press the **SLEEP** button.
2. Use the number keys or tuning buttons to set the duration (00 to 90 minutes).
3. The radio will automatically power off after the set time elapses.

## 4.8 Locking the Keypad

Press and hold the **Lock** button (often represented by a padlock icon) to disable all other buttons, preventing accidental operation during transport or storage. Press and hold again to unlock.

## 5. Care and Maintenance

- Keep the radio dry and avoid extreme temperatures.
- Clean the exterior with a soft, dry cloth. Do not use liquid cleaners.
- Use only the provided USB cable or a compatible 5V charger to avoid battery damage.
- For long-term storage, charge the battery to approximately 50% and store in a cool, dry place.

## 6. Troubleshooting

- **No Power:** Ensure the battery is installed correctly and fully charged. Check the USB connection.
- **Poor Reception:** Fully extend the antenna. Move to a location with fewer obstructions. For AM, try rotating the radio.
- **Bluetooth Won't Connect:** Ensure the radio is in BT mode and in pairing state. Restart both the radio and your Bluetooth device.
- **TF Card Not Recognized:** Ensure the card is properly inserted. Format the card to FAT32 on a computer if necessary. The card must be 256GB or smaller.

- **Buttons Not Responding:** Check if the keypad lock is enabled.

## 7. Warranty and Support

The product includes a 1-year warranty and a 30-day return policy. For service or support, contact the seller directly through your Amazon account. The seller states they will respond within 12 hours.

**Manufacturer:** Retekess

**Model:** V115P

**ASIN:** B0FF251J97

**Note:** This manual is based on information available from the product listing. Always refer to the included printed Owner's Manual for the most complete and accurate instructions.

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.