

Overview

The BEAUTURAL Fabric Shaver and Lint Remover is a rechargeable electric device designed to remove lint, fuzz, and pilling from fabrics. It is suitable for use on clothing, furniture, blankets, and other textiles.



Features

Performance and Blades

- **6 Ultra-Sharp Leaf Blades:** Designed for efficient and thorough pilling removal.
- **3 Adjustable Speeds:** Allows you to select the appropriate speed for different fabric types and pilling density.
- **Enhanced Suction:** Helps pull fabric taut and collect removed lint.



Display and Controls

- **Smart LED Display:** Shows real-time battery life and current speed setting.
- **Low Battery Indication:** Alerts you before the battery is depleted to prevent interruptions.
- **Power/Speed Button:** Press to turn on and cycle through the three speed settings.



Battery and Charging

- **1800mAh Lithium Battery:** Provides up to 4 hours of continuous runtime on a full charge.
- **USB-C Charging Port:** Fully charges in approximately 2 hours.

Safety and Convenience

- **Automatic Safety Stop:** The device stops automatically if the blade cover is opened or loose.

- **Travel Lock:** Activate by holding the power button for 3 seconds to prevent accidental activation during transport or storage.
- **Magnetic Lint Collector:** Detaches easily for mess-free emptying.
- **Built-in Cleaning Brush:** Used to clean the blades and maintain sharpness.



Use Guide

Before First Use

1. Fully charge the device using the provided USB-C cable.
2. Ensure the blade cover is securely closed.

Operating Instructions

1. **Prepare the Fabric:** Lay the garment or fabric flat on a stable surface. Ensure the area is free of wrinkles.

2. **Power On:** Press the power button once to turn on the device. The LED display will illuminate.
3. **Select Speed:** Press the power button again to cycle through the three speed settings (Low, Medium, High). Choose a speed appropriate for the fabric.
 - **Low:** Recommended for delicate fabrics.
 - **Medium:** For general use on sweaters, blankets, and upholstery.
 - **High:** For heavy pilling on durable fabrics like couches.
4. **Shave the Fabric:** Hold the device at a 90-degree angle to the fabric. Gently glide the shaver head over the fabric in straight, overlapping strokes. Do not press down hard; let the blades do the work.
5. **Empty the Lint Collector:** When the lint collector is full, or after each use, detach the magnetic collector and empty the contents into a trash bin.
6. **Power Off:** Press and hold the power button until the device turns off.

Cleaning and Maintenance

1. Always turn off and unplug the device before cleaning.
2. Use the built-in brush to remove any lint or fibers from the blades and the shaver head opening.
3. Wipe the exterior of the device with a dry or slightly damp cloth. Do not immerse in water.
4. Ensure the lint collector is empty and clean before reattaching.

Charging

Connect the USB-C cable to the port on the device and to a standard USB power adapter or computer port. The device does not operate while charging. A full charge takes approximately 2 hours.

Activating Travel Lock

To prevent accidental activation, press and hold the power button for 3 seconds until the display shows a lock icon or turns off. To deactivate, press and hold the button again for 3 seconds.

Specifications

- **Brand:** BEAUTURAL
- **Model Number:** 1-MR02NA17
- **Color:** Blue (also available in White & Black)
- **Material:** Metal, Plastic
- **Operation Mode:** Automatic

- **Battery:** 1800mAh Lithium-ion, rechargeable via USB-C
- **Blades:** 6 leaf blades
- **Speeds:** 3 adjustable speeds

Safety Information

- Read all instructions before use.
- For household use only.
- Keep the device away from water and other liquids.
- Do not use on leather, suede, vinyl, or other non-woven materials.
- Always ensure the blade cover is securely closed before operation.
- The automatic stop feature activates if the cover is loose. Do not attempt to override this safety feature.
- Unplug the charger when not in use.
- Keep the device out of reach of children.
- Do not use the device if it is damaged or malfunctions.

Troubleshooting

- **Device does not turn on:** Ensure the battery is charged. Activate travel lock may be on; deactivate it by holding the button for 3 seconds.
- **Poor performance or no lint collection:** The lint collector may be full. Empty it. The blades may be dull or clogged; clean them with the built-in brush.
- **Device stops during use:** Check that the blade cover is fully closed and secure. The safety feature may have been triggered.
- **Battery does not charge:** Check the USB-C cable and power source. Ensure the charging port is clean and free of debris.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.