

Model: 722NA-0019 (Only for 120V)

Overview

This manual provides instructions for the safe and effective use of the BEAUTURAL Handheld Garment Steamer. This portable steamer is designed to remove wrinkles from a variety of fabrics using steam. It features a fast heat-up time, a detachable water tank, and a leak-proof design for use at multiple angles.



Features and Components

The main components of the steamer are identified in the image below.



Key Features

- **1200W Power & Fast Heat-up:** Heats up in approximately 35 seconds.
- **One-Touch Steam Button:** A single button controls the steam output.
- **293°F Thermostatic Aluminum Plate:** Heats quickly for efficient wrinkle removal. Suitable for both dry pressing (with the plate) and steam ironing.
- **Leak-Proof Pump System:** An advanced electronic pump delivers steam evenly and is designed to prevent leakage, allowing steaming at various angles.
- **Detachable 260ml (8.8oz) Water Tank:** Easily removed for filling and cleaning.
- **8ft (2.4m) Power Cord:** Provides extended reach during use.
- **Fabric-Safe:** Designed to be safe for use on all common fabrics.



Thermostatic Aluminum Plate

Keep the plate temperature around **293°F** for better ironing

Removable Water Tank

Provides over 15 minutes of continuous steaming



Easy to refill



Transparent



Sealed



Extra-Long Power Cord

An ultra-long 8ft/2.4m cord provides maximum reach



Safety Information

WARNING: To reduce the risk of fire, electric shock, or injury:

- This appliance is for household use only. Not for commercial use.

- **Use only with 120V AC power outlets.** Using with other voltages may cause damage or fire. A voltage converter is not sufficient.
- Do not immerse the steamer, cord, or plug in water or other liquids.
- Unplug the steamer when filling with water, cleaning, or when not in use.
- Do not use the steamer if it has been dropped, damaged, or is leaking. Contact customer support.
- Keep the steamer and cord away from heated surfaces and open flames.
- Do not direct steam at people, animals, or electrical equipment.
- The steamer produces hot steam and surfaces become hot during use. Do not touch the aluminum plate or steam nozzle. Handle by the insulated body only.
- Always use and store the steamer on a stable, flat, heat-resistant surface.
- Do not leave the steamer unattended while it is plugged in.

Getting Started

Before First Use

1. Remove all packaging materials.
2. Inspect the steamer for any visible damage.
3. Wipe the exterior with a damp cloth. Do not use abrasive cleaners.

Filling the Water Tank


1. Ensure the steamer is unplugged and has cooled completely.
2. Press the tank release button (if present) and pull the water tank downward to detach it from the main body.
3. Open the tank cap. Fill the tank with clean, cool tap water up to the MAX fill line (260ml / 8.8oz). Do not overfill.
Note: Do not use distilled water, chemically softened water, or scented water, as this may affect performance.
4. Securely close the tank cap. Ensure it is tight to prevent leaks.
5. Align the tank with the body and push it upwards until it clicks securely into place.

Usage Guide

Basic Operation

1. **Prepare Garment:** Hang the garment on a sturdy hanger or lay it flat on an ironing board.

2. **Power On:** Plug the power cord into a 120V outlet. The steamer will begin heating immediately.
3. **Wait for Heat-up:** Allow approximately 35 seconds for the steamer to reach operating temperature. You may see a small amount of initial vapor.
4. **Steam:** Hold the steamer by its handle. Point the nozzle towards the fabric, keeping a distance of about 1-2 inches. Press and hold the steam button to release a continuous flow of steam. Move the steamer slowly downwards over the fabric, following the garment's weave.
5. **For Stubborn Wrinkles:** You can gently stretch the fabric taut with your other hand while steaming. For dry ironing, you can press the hot aluminum plate directly against the fabric while holding the steam button.
6. **Power Off:** Release the steam button to stop the steam flow. When finished, unplug the steamer from the outlet.

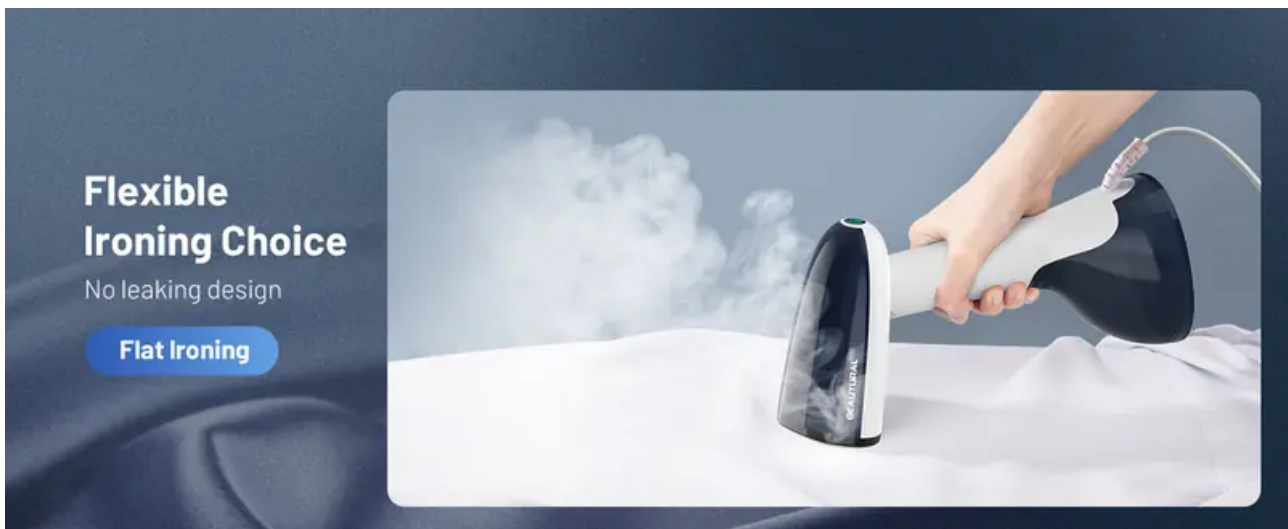

Helpful Tips

- Test the steamer on an inconspicuous area of delicate fabrics (like silk or velvet) first.

- For heavier fabrics like denim or linen, use slower, repeated passes.
- Do not hold the steamer in one spot for too long on sensitive fabrics.
- After extended use, the water tank may become hot. Allow it to cool before refilling.

Cleaning and Maintenance

1. **After Each Use:** Unplug the steamer and allow it to cool completely. Empty any remaining water from the tank to prevent mineral buildup.
2. **Cleaning the Tank:** Detach the tank, rinse it with clean water, and let it air dry with the cap open.
3. **Cleaning the Exterior:** Wipe the body with a soft, damp cloth. Do not use chemical cleaners or abrasives.
4. **Descaling (If Needed):** If steam output decreases over time, mineral deposits (scale) may have built up. Mix one part white vinegar with one part water, fill the tank halfway, and run the steamer to expel the solution into a sink. Follow with several tanks of clean water to rinse thoroughly.
5. **Storage:** Store the steamer in a cool, dry place. Loop the power cord loosely; do not wrap it tightly around the unit.

Troubleshooting

Problem	Possible Cause	Solution
No steam produced	Not plugged in. Water tank is empty. Unit not heated up.	Plug into 120V outlet. Fill tank with water. Wait 35+ seconds for heat-up.
Steam output is weak	Low water level. Mineral scale buildup. Steam button not fully pressed.	Refill water tank. Descale the unit (see Cleaning). Press and hold button firmly.
Water is leaking/dripping	Tank cap not closed tightly. Tank not properly attached. Overfilled tank.	Ensure cap is tight. Detach and reattach tank firmly. Do not fill past MAX line.
Steamer does not heat up	Power outlet issue. Faulty unit.	Try a different 120V outlet. If problem persists, discontinue use and contact support.
Unusual noise or smell	Possible malfunction.	Immediately unplug the steamer and contact customer support.

Specifications

Brand	BEAUTURAL
Model Number	722NA-0019
Voltage	120 Volts
Wattage	1200 Watts
Heat-up Time	Approx. 35 Seconds
Water Tank Capacity	260 Milliliters (8.8 oz)
Plate Temperature	293°F Thermostatic Aluminum Plate
Cord Length	8 Feet (2.4 Meters)
Product Weight	1.7 Pounds
Style	Handheld, Portable
Included Components	Garment Steamer Unit

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.