

This manual provides instructions for the safe and effective use of the DREO Whole Room Heater 714.

Overview

The DREO Whole Room Heater 714 is a 1500W electric space heater designed for indoor use in rooms such as bedrooms, offices, and living rooms. It features 3D oscillation, multiple heat and fan settings, and various safety protections.



Model: DR-HSH034

Power: 1500W

Heating Element: PTC Ceramic

Power Source: Corded Electric

Features and Specifications

Heating and Airflow

- **3D Whole-Room Heating:** Provides 60° vertical and 90° horizontal oscillation.
- **Airflow:** 12 ft/s long-range air circulation with 120 CFM airflow.
- **Fast Heating:** 1500W PTC ceramic element delivers warmth quickly.
- **Heating Coverage:** Recommended for areas between 161-269 square feet.

Settings and Controls

- **Heat Settings:** Three heat levels.
- **Fan Settings:** Three fan-only speeds.
- **ECO Mode:** Adjustable thermostat maintains a set temperature between 41°F and 95°F in 1°F increments to save energy.
- **Timer:** Programmable 1-12 hour timer.
- **Remote Control:** Included for convenient operation.

Safety Features

- **Overheat Protection:** Automatically shuts off if internal components overheat.
- **Tip-Over Protection:** Automatically shuts off if the unit is knocked over.
- **Flame-Retardant Housing:** Constructed with materials to resist fire.
- **ETL Listed:** Certified for safety standards.
- **Child Lock:** Prevents unintended changes to settings.

Physical Specifications

- **Dimensions:** 11.02"D x 7.09"W x 12.4"H
 - **Weight:** 6.45 Pounds
 - **Form Factor:** Pedestal (Tabletop Mount)
 - **Noise Level:** Approximately 34 dB (Quiet operation)
 - **Color Options:** Black, Grey, White
-

Use Guide

Package Contents

- DREO PTC Space Heater (DR-HSH034)

- Remote Control (includes 2x AAA batteries)
- Quick Start Guide
- User Manual

Initial Setup and Placement

1. Remove all packaging materials from the heater and remote.
2. Place the heater on a stable, flat, level surface. Ensure it is in an upright position.
3. Ensure there is at least 3 feet of clearance in front of the heater and away from furniture, curtains, bedding, or other obstructions.
4. Plug the power cord directly into a standard 120V electrical wall outlet. Do not use an extension cord.



Operating the Heater

Using the Control Panel

The control panel is located on the top of the unit. Typical buttons include Power, Mode/Heat Setting, Temperature Up/Down, Timer, Oscillation, and Child Lock.

1. **Power On/Off:** Press the Power button.
2. **Select Mode:** Press the Mode button to cycle through Heat settings (High, Low, ECO) and Fan-only settings.
3. **Set Temperature (ECO Mode):** In ECO mode, use the Temperature Up (+) and Down (-) buttons to set your desired comfort level between 41°F and 95°F.
4. **Set Oscillation:** Press the Oscillation button to turn the 3D (vertical and horizontal) oscillation on or off.
5. **Set Timer:** Press the Timer button to set a shut-off delay from 1 to 12 hours.
6. **Child Lock:** Press and hold the Child Lock button (often depicted with a padlock icon) for 3 seconds to enable or disable. When enabled, other buttons are locked.

Using the Remote Control

The remote control mirrors the functions on the main control panel. Point the remote at the front of the heater to operate.



Recommended Use

- **For Bedrooms:** Use the timer function to turn off automatically after you fall asleep.
- **For Offices:** The quiet operation (34dB) minimizes distraction.
- **Energy Saving:** Use the ECO mode to maintain a constant temperature and reduce energy consumption.
- **Whole Room Warming:** Engage the oscillation feature to distribute heat evenly throughout the room.

Safety Information and Maintenance

Important Safety Instructions

- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet from the front of the heater and keep them away from the sides and rear.

- Extreme caution is necessary when any heater is used by or near children or individuals with reduced physical, sensory, or mental capabilities, and whenever the heater is left operating unattended.
- Always turn the heater off and unplug it when not in use.
- Do not operate the heater if it has a damaged cord or plug, is not working properly, has been dropped or damaged, or dropped into water. Contact customer support.
- Do not run the power cord under carpeting, rugs, or furniture. Do not cover the cord.
- This heater is for indoor use only. Do not use outdoors or in wet areas like bathrooms.
- The heater must be placed on a stable, horizontal surface. Do not use on soft surfaces like a bed.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage to the heater.

Cleaning and Maintenance

1. **Always unplug the heater** and allow it to cool completely before cleaning.
2. Wipe the exterior with a soft, dry cloth. If necessary, use a slightly damp cloth. Do not use abrasive cleaners.
3. Do not immerse the heater in water or any other liquid.
4. Ensure the air inlets and outlets are free from dust and lint. Use a vacuum cleaner with a brush attachment to gently remove debris.
5. Store the heater in a cool, dry place when not in use for extended periods.

3D Oscillating Heat. Zero Cold Spots.



Troubleshooting

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in. Power outlet issue. Unit has tipped over.	Ensure plug is firmly in outlet. Check outlet with another device. Place heater upright on a level surface.
Heater shuts off unexpectedly.	Overheat protection activated. Tip-over protection activated. Reached set temperature in ECO mode.	Turn off, unplug, and let cool. Check for blocked air vents. Ensure unit is upright. This is normal operation in ECO mode.
Remote control does not work.	Batteries are dead or installed incorrectly. Heater is too far away.	Replace the two AAA batteries. Ensure you are pointing the remote at the heater's front within a reasonable distance (approx. 16 feet).
Little or no heat.	Set to fan-only mode. Thermostat set too low.	Press the Mode button to select a heat setting. In ECO mode, increase the temperature setting.
Unusual noise or smell.	Dust on heating element or fan. New unit may have a slight smell initially.	Unplug, cool, and clean air inlets/outlets. A slight smell during first use is normal and should dissipate.

Product Information and Compliance

Brand: DREO

Model Number: DR-HSH034 Black

UPC: 810142857765

ASIN: B0FN4B5KB7

Heating Method: Forced Air

Fuel Type: Electric

This appliance complies with relevant safety standards and is ETL listed.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

