

## 1. Overview

The X Rocker Shadow RGB 2.0 is an audio floor rocker gaming chair designed for kids and teens. It features a low-to-the-ground rocking base, a built-in 2.0 speaker system, and customizable RGB lighting controlled via a mobile app. The chair is constructed with foam padding and wipe-clean faux leather and folds for storage.



## 2. Features

### 2.1 Neo Motion Sync RGB Lighting

The chair includes integrated RGB lighting that can be customized.

- Control lighting via the dedicated mobile app.
- Choose from over 200 color modes, patterns, and light effects.
- Includes a sound-reactive lighting mode.

### 2.2 Immersive 2.0 Speaker System

Two speakers are mounted within the headrest.

- Provides audio directly to the user.
- Connect to games consoles, TVs, or mobile devices via the audio input.

### 2.3 Design and Comfort

- Foam-padded interior with faux leather upholstery.
- Designed to support a correct seating posture.
- Armless, curved shape with a low-to-the-ground rocking base.

### 2.4 Portability and Storage

- Folding design for compact storage.
- No assembly required; unfolds for immediate use.

## 3. Use Guide

### 3.1 Initial Setup

1. Unfold the chair by pulling the seat and backrest into their open positions.
2. Ensure the chair is on a stable, flat surface.
3. Connect the included power adapter to the chair's power input and a wall outlet.
4. Connect your audio source (e.g., game console, TV, mobile device) to the chair's audio input using a 3.5mm audio cable (not included).



### 3.2 Using the RGB Lighting

1. Download the "Neo Motion Sync" app from your device's app store.
2. Ensure the chair is powered on.
3. Open the app and follow the in-app instructions to pair with the chair's lighting system.
4. Use the app to select colors, patterns, and effects. The sound-reactive mode will sync with audio from the connected source.

### 3.3 Using the Audio System

1. Ensure the audio cable is securely connected from your source device to the chair's audio input.
2. Adjust the volume on your source device. The chair does not have a separate volume control.
3. Audio will play through the headrest speakers.

### 3.4 Folding for Storage

1. Disconnect all cables.
2. Fold the chair by pushing the backrest forward until it locks flat against the seat base.
3. Store in a dry location.



## 4. Specifications

<b>Brand</b>	X Rocker
<b>Model Name</b>	Shadow RGB Audio Floor Rocker with LED App
<b>Color</b>	Black/RGB
<b>Material</b>	Faux Leather, Foam Fill
<b>Product Dimensions</b>	29.53"D x 14.96"W x 25.59"H (75 cm x 38 cm x 65 cm)
<b>Item Weight</b>	14.96 pounds
<b>Maximum Weight Recommendation</b>	80 Kilograms (176 lbs)
<b>Included Components</b>	Chair
<b>Form Factor</b>	Foldable
<b>Assembly Required</b>	No

## 5. Care and Maintenance

- **Cleaning:** Wipe the faux leather surface with a damp, soft cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store in a cool, dry place away from direct sunlight and heat sources.
- **Inspection:** Periodically check the chair's structure, rocking mechanism, and cables for any signs of wear or damage.



## 6. Safety Information

### WARNING:

- Maximum user weight: 80 kg (176 lbs). Do not exceed this limit.
- Use only on a stable, flat, indoor surface.
- Keep away from heat sources, open flames, and liquids.

- This product contains electrical components. Do not immerse in water or use in damp conditions.
- Do not leave children unattended with the product.
- Check all connections and the chair's condition before each use.

**Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.