

Model: DF-288

This manual provides instructions for the safe and effective use of the Sundu Steam Station Iron. Read all instructions before using the appliance.

1. Overview & Components



The Sundu Steam Station Iron is a 1600W appliance designed for removing wrinkles from a variety of fabrics using high-pressure steam and dry heat.

Main Components:

- **Main Base Unit:** Houses the 44 oz (1.3L) water tank, pump, and heating system.
- **Iron:** Handheld unit with a ceramic soleplate containing over 400 steam holes.
- **Power Cord:** Connects the base unit to a power outlet.

- **Water Tank:** Large, removable, transparent tank for easy filling.
- **Iron Lock:** A mechanism on the base to secure the iron for safe carrying and storage.



40g/min Continuous Steam
High pressure continuous steam wrinkle removal

1600W
Continuous Steam

2. Key Features & Specifications

Feature	Specification / Description
Power	1600 Watts
Water Tank Capacity	44 oz (1.3 Liters) - Removable
Steam Output	Up to 40 grams per minute (continuous steam)
Soleplate	Ceramic-coated with over 400 micro-steam holes
Temperature Control	Adjustable dial for various fabric types (e.g., Silk, Wool, Cotton, Linen)
Safety Features	Iron Lock for carrying, Anti-drip system, Anti-calc system
Dimensions (Base Unit)	Approximately 12" L x 7" W

Feature Details:

Powerful Heating & Steam

The 1600W heating element provides rapid heat-up. The built-in pump generates high-pressure, continuous steam to penetrate fabric fibers.

Large Removable Water Tank

The transparent 44 oz tank is detachable for easy filling at any faucet, reducing interruptions during large ironing sessions.

Ceramic Soleplate

The smooth ceramic surface glides over fabrics and resists sticking and scratching. The numerous steam holes distribute steam evenly.

Fabric Care System

Use the temperature dial to select the appropriate heat setting for the fabric you are ironing (e.g., lower heat for synthetics and silk, higher heat for cotton and linen).

3. Safety Instructions

WARNING: To reduce the risk of fire, electric shock, or injury:

- Use the iron only for its intended purpose as described in this manual.
- Always plug the cord into a 120V AC electrical outlet.
- Do not leave the iron unattended while it is connected to the power supply.
- Always use the Iron Lock to secure the iron to the base unit when carrying or not in immediate use.
- Place the base unit on a stable, flat, heat-resistant surface.
- Keep the iron and its cord away from hot surfaces. Do not place the cord under the iron.
- Do not use the iron if it has been dropped, shows visible damage, or is leaking.
- Never direct steam towards people, animals, or electrical equipment.
- Unplug the unit from the outlet before filling with water, emptying, cleaning, or when not in use.
- Allow the iron to cool completely before storing.
- The iron is hot during and after use. Avoid contact with heated surfaces.

4. Initial Setup & Use Guide

Before First Use:

1. Remove all packaging materials.
2. Inspect the appliance for any transit damage.
3. Wipe the soleplate with a soft, damp cloth to remove any residual manufacturing oils.

Filling the Water Tank:

1. Ensure the unit is unplugged from the electrical outlet.
2. Press the release button (if present) and lift the water tank away from the base unit.
3. Fill the tank with clean, cool tap water up to the MAX fill line. Do not overfill.
Note: Do not use distilled water, chemically descaled water, perfumed water, or water from clothes dryers, refrigerators, or air conditioners unless specified by the manufacturer.
4. Securely reattach the filled tank to the base unit.



Operating the Steam Iron:

1. **Connect Power:** Place the base unit on a stable surface. Plug the power cord into a 120V outlet.
2. **Power On:** The unit will begin heating. An indicator light may illuminate.
3. **Select Temperature:** Turn the temperature dial on the iron to the setting appropriate for your fabric.
 - **Low (•):** Synthetics, Silk
 - **Medium (••):** Wool
 - **High (•••):** Cotton, Linen
4. **Wait to Heat:** Allow the iron to reach the selected temperature (approximately 1 minute).
5. **Begin Ironing:**
 - For **Dry Ironing**, simply glide the hot soleplate over the fabric.
 - For **Steam Ironing**, press and hold the steam trigger/button on the iron handle to release a burst of steam as you iron.

- For continuous steam, ensure the temperature is set high enough for steam production and hold the steam trigger.

6. **Vertical Steaming:** You can use the iron to steam garments hanging on a hanger. Hold the iron close to, but not touching, the fabric and press the steam trigger.


After Use:

1. Release the steam trigger and place the iron back on its base.
2. Engage the **Iron Lock** to secure it to the base.
3. Turn the temperature dial to the minimum or "OFF" position.
4. Unplug the power cord from the wall outlet.
5. Allow the unit to cool completely.
6. Empty any remaining water from the tank if you do not plan to use the iron again soon.



**44 oz Removable
Water Tank**

Continuous Ironing, Easy to Refill

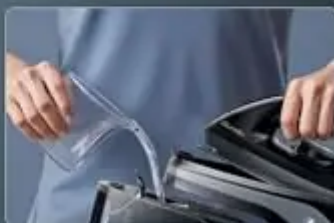

5. Care, Cleaning & Maintenance

Regular Cleaning:

- Wipe the exterior of the base unit and iron with a soft, damp cloth. Do not use abrasive cleaners.
- Clean the ceramic soleplate with a non-abrasive damp cloth or a recommended soleplate cleaner while it is cool.

Descaling (Anti-Calc System):

The built-in anti-calc system helps reduce limescale buildup. However, regular descaling is recommended if you live in a hard water area or notice reduced steam performance.

1. Unplug the unit and allow it to cool.
2. Fill the water tank with a mixture of 50% white vinegar and 50% water.
3. Plug in the unit, turn it on, and allow it to heat fully.
4. Hold the iron over a sink or basin and press the steam trigger repeatedly to expel the vinegar solution and loosened scale through the soleplate.
5. Repeat the process with clean water only to rinse the system thoroughly.
6. Empty any remaining liquid from the tank.

Anti-Drip System:

This feature helps prevent water from leaking from the soleplate when the iron is too cool for steam. Ensure you are using the correct high-temperature setting when using steam to activate this protection.

Storage:

Always store the unit with the water tank empty. Ensure the iron is locked onto the base, the cord is loosely coiled, and the unit is stored in a cool, dry place.

6. Troubleshooting

Problem	Possible Cause	Solution
No steam or weak steam	Temperature set too low. Water tank is empty. Steam vents clogged with scale.	Increase temperature setting to "Steam" range. Fill the water tank. Descale the unit as per instructions.
Water drips from soleplate	Iron is not hot enough for steam. Using incorrect water type.	Wait for the iron to reach the correct temperature. Use clean tap water only.
Iron does not heat up	Unit is not plugged in. Power outlet is faulty.	Check power connection. Try a different outlet.
Brown stains on fabric or soleplate	Mineral deposits or burnt starch.	Clean the soleplate. Use the self-clean function if available, or descale the unit.
Iron sticks to fabric	Soleplate is dirty or damaged. Temperature too high for fabric.	Clean the soleplate. Use a lower temperature setting.

7. Included Components

- Sundu 1600W Steam Station (Base Unit & Iron) x1
- User Manual x1

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.