

1. Overview

The ECOSELF Cold Press Juicer is a multi-functional masticating juicer designed for home use. It features a 6.0-inch wide feed chute, three interchangeable filters, and a self-feeding design to process whole fruits, vegetables, leafy greens, nuts, and frozen ingredients.



2. Product Specifications

- **Brand:** ECOSELF
- **Color:** Black
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Blade Material:** PMMA
- **Product Dimensions:** 7.09"D x 12.99"W x 16.93"H
- **Wattage:** 350 watts
- **Voltage:** 120 Volts (for use in the United States)
- **Recommended Uses:** Fruits, Vegetables, Leafy Greens, Nuts

3. Included Components

- Main juicer unit with motor base
- 6.0-inch wide mouth hopper (feed chute)
- Three interchangeable filters:
 - Fine filter (for smooth juice)
 - Coarse filter (for pulp juice)
 - Blank filter (for sorbet and nut milk)
- Auger (masticating mechanism)
- Juice container
- Pulp collector
- Cleaning brush
- User manual

4. Key Features

4.1 3-in-1 Multi-Functionality

The juicer operates with three different filters to produce various textures and products:

- **Fine Filter:** Use for smooth, pulp-free juice from fruits and vegetables.
- **Coarse Filter:** Use for juice with pulp for a thicker texture.
- **Blank Filter:** Use for making sorbets, frozen desserts, and nut milk (e.g., almond, oat).



Squeezing Screw

Slow Masticating to Improve Juice Purity



Pulp Separation

Pure Juice with No Residue



4.2 Extra-Large 6.0-Inch Feed Chute

The wide chute accommodates whole fruits and vegetables (like apples, oranges, carrots) and leafy greens, reducing pre-cutting time.

6.0 INCH

Large Feed Chute

Fits Whole Fruits and Vegetables, no prep needed



4.3 Self-Feeding & Hands-Free Design

The large-capacity feeding chamber allows you to load multiple ingredients. The auger automatically draws produce through the juicer, minimizing the need to push food down.



4.4 Upgraded Motor

The 350-watt motor operates quietly for minimal disturbance. It is designed for durability and efficient cold-press juicing.

350W Powerful Motor

-  **Longer Service Life**
High-Quality Motor
-  **High Efficiency**
Strong Overload Capacity
-  **Low Noise**
Quieter Operation



5. Assembly & Installation

1. Place the main unit on a stable, dry, and level countertop.
2. Insert the auger into the juicing chamber.
3. Select the desired filter (fine, coarse, or blank) and place it over the auger shaft, ensuring it is seated properly.
4. Align the juicing chamber cover with the main unit and lock it into place by turning it clockwise until secure.
5. Place the 6.0-inch wide mouth hopper on top of the cover.
6. Position the juice container under the juice spout.
7. Place the pulp collector under the pulp ejection chute.



6. Operating Instructions

6.1 Making Juice

1. Ensure the fine or coarse filter is installed.
2. Plug the juicer into a standard 120V outlet.
3. Wash and prepare produce. Large items like apples or carrots can be fed whole.
4. Turn on the juicer using the power switch.
5. Feed ingredients into the hopper. The self-feeding auger will draw them down.
6. Juice will flow into the juice container; pulp will collect in the pulp collector.
7. After juicing, turn off the unit and unplug it.

6.2 Making Sorbet or Frozen Desserts

1. Install the blank filter.
2. Use pre-frozen fruits (e.g., bananas, berries, mango). Ensure they are cut into chunks small enough to fit the feed chute if necessary.
3. Turn on the juicer and feed frozen fruit chunks through the hopper.
4. The sorbet will extrude from the main spout. Place a bowl underneath to collect it.

6.3 Making Nut Milk

1. Install the blank filter.
2. Soak nuts (e.g., almonds, cashews) in water for several hours or overnight.
3. Drain the nuts and feed them through the hopper with the juicer running.
4. For a creamier texture, you can add fresh water through the hopper while processing.

5. The nut pulp will be collected in the pulp collector, and the milk will flow from the juice spout.

7. Cleaning & Maintenance

1. Unplug the juicer before cleaning.
2. Disassemble the unit by reversing the assembly steps.
3. Rinse the hopper, juicing chamber, auger, and used filter under warm running water. Most food residue will rinse off easily.
4. Use the provided cleaning brush to scrub the filter mesh and any hard-to-reach areas.
5. Wipe the motor base with a damp cloth. Do not immerse the motor base in water.
6. Dry all parts thoroughly before reassembly or storage.



Important: Never use abrasive cleaners or scouring pads on the plastic parts or filters, as this may cause damage.

8. Troubleshooting

- **Juicer does not start:** Check that the unit is plugged in and the lid is locked securely in place. The safety lock may prevent operation if not assembled correctly.
- **Low juice yield or dry pulp:** Ensure you are using the correct filter for the ingredient. Hard vegetables like carrots may require the coarse filter. Feed produce at a steady pace.
- **Motor slows or strains:** Do not force large quantities of hard or fibrous produce too quickly. Feed smaller amounts intermittently.
- **Leaking:** Ensure all components (especially the juicing chamber cover and filter) are correctly aligned and locked. Check that seals are clean and free of debris.

- **Unusual noise:** Stop the juicer immediately, unplug it, and check for foreign objects or improper assembly.

9. Safety Information

- This appliance is for household use only.
- Always unplug the juicer before assembling, disassembling, or cleaning.
- Keep hands, utensils, and other objects away from the feed chute while the juicer is operating. Use the provided food pusher if necessary.
- Do not immerse the motor base, power cord, or plug in water or any other liquid.
- Do not operate the juicer continuously for extended periods. Allow the motor to cool between large batches.
- This product is designed for 120V outlets. Using it with other voltages may cause damage and void the warranty.

10. Warranty and Support

ECOSELF provides a 24-month Repair and Replacement Service after product activation. For support, contact ECOSELF customer service. The brand commits to replying within 24 hours.

Note: Specific contact details (phone number, email, website) are not provided in the source material. Please refer to the documentation included with your product or the seller's store page for direct contact information.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.