

Overview

The Tikom V750 is a cordless stick vacuum cleaner designed for home use. It is a battery-powered unit featuring a 500W motor, a 1.5L dust cup, and a 7-stage HEPA filtration system. The vacuum is lightweight and includes a motorized cleaner head, a soft dusting brush, and a crevice tool for versatile cleaning.



Package Contents

- 1 x Vacuum cleaner main body
- 1 x Length adjustable extension wand
- 1 x Motorized cleaner head
- 1 x Soft dusting brush
- 1 x Crevice tool
- 1 x HEPA filter (pre-installed)
- 1 x Rechargeable, detachable battery (7*2600 mAh)
- 1 x Charger
- 1 x Wall dock (with 4 screws and plastic expansion anchors)
- 1 x User manual



Product Features

Power and Suction

- **Motor:** 500W.
- **Suction Power:** 45,000 Pa.
- **Suction Levels:** Two settings: High and Low.

Battery and Runtime

- **Battery Type:** Detachable Lithium-Ion, 7*2600 mAh.
- **Charging Time:** 4-5 hours for a full charge.
- **Runtime:** Up to 50 minutes on Low suction. Up to 25 minutes on High suction.
- **Charging Methods:** The battery can be charged independently or while attached to the vacuum.

Filtration System

- **Filter Type:** 7-stage advanced HEPA filtration system.
- **Filtration Efficiency:** Captures 99.9% of fine dust.
- **Dust Cup Capacity:** 1.5 Liters.
- **Dust Cup Feature:** One-click pop-up lid for hands-free emptying. The entire cup is detachable and washable.

Display and Controls

- **LED Smart Display:** Shows working status, selected suction level, remaining battery charge, and malfunction warnings.



Cleaner Head and Accessories

- **Motorized Cleaner Head:** Rotates 180° for maneuverability. Features a V-shaped roller brush designed to resist hair tangling and includes 6 LED lights for visibility in dark areas.
- **6-in-1 Versatility:** The main unit, extension wand, cleaner head, soft dusting brush, and crevice tool can be configured in six different ways for various cleaning tasks.



Ergonomics and Operation

- **Weight:** Lightweight design (5.5 lbs).
- **Handle:** Ergonomic design for one-handed operation.
- **Noise Level:** Features noise-reduction technology for quieter operation.

Storage

- **Wall Dock:** Included for wall-mounted storage and charging. Installation hardware (screws and anchors) is provided.



Use Guide

Initial Setup

1. Unpack all components and ensure everything from the Package Contents list is present.
2. Insert the battery into the vacuum cleaner body if it is not already installed.
3. Fully charge the battery before first use. Connect the charger to the battery port on the vacuum or to the detached battery. A full charge takes 4-5 hours.
4. (Optional) Install the wall dock in a convenient location using the provided screws and anchors.

Assembling for Use

1. To assemble the main stick vacuum, attach the extension wand to the main body.
2. Attach the motorized cleaner head to the end of the extension wand.
3. Ensure all connections click securely into place.

Operating the Vacuum

1. Press the power button to turn on the vacuum.

2. Use the mode button (if present) to switch between **Low** and **High** suction levels. The current mode and battery level are shown on the LED display.
3. Clean floors using the motorized head. The head rotates to navigate around furniture.
4. For above-floor cleaning (e.g., upholstery, shelves), detach the wand from the cleaner head to use the main body as a handheld unit.
5. Attach the soft dusting brush or crevice tool directly to the handheld unit or the wand for specialized cleaning.



Emptying the Dust Cup

1. Detach the dust cup from the main body by pressing the release button.
2. Hold the dust cup over a trash bin.
3. Press the one-click pop-up lid release. The lid will open, allowing debris to fall out.
4. Close the lid securely before reattaching the dust cup to the vacuum.

Cleaning and Maintenance

- **Dust Cup and Filter:** Regularly empty the dust cup. The entire dust cup and the HEPA filter are washable. Rinse with water and allow to air dry completely before reassembling and reusing.
- **Roller Brush:** Periodically check the roller brush on the cleaner head for tangled hair or fibers and remove them to maintain performance.
- **Battery:** For storage, it is recommended to partially charge the battery. Avoid leaving the battery fully discharged for extended periods.
- **General Care:** Wipe the exterior of the vacuum with a dry or slightly damp cloth. Do not immerse the main body, motor, or battery in water.



Troubleshooting

- **Vacuum won't turn on:** Check that the battery is properly installed and charged. Place the vacuum on the charger.

- **Reduced suction:** Empty the dust cup. Check and clean the HEPA filter and the roller brush for blockages.
- **Battery not charging:** Ensure the charger is properly connected to both the power outlet and the vacuum/battery. Try charging the battery separately from the vacuum.
- **LED display shows a warning icon:** Refer to the display indicators. Common warnings may indicate a full dust cup, a blocked airway, or a filter that needs cleaning.

Warning:

- Do not use the vacuum to pick up liquids, burning materials (ashes, cigarettes), or sharp, hard objects.
- Do not use the vacuum without the filter installed.
- Only use the provided charger to charge the battery.
- Allow all washed components to dry completely before reassembly and use.

Specifications

- **Model:** V750
- **Color:** White
- **Power Source:** Battery Powered (25.2V)
- **Weight:** 5.5 lbs (2.5 kg)
- **Dimensions (L x W x H):** 10.3" x 7.6" x 17.1" (262 x 193 x 434 mm)
- **Form Factor:** Stick / Handheld
- **Recommended Surfaces:** All floors (Hard Floor, Carpet)
- **Indoor Use Only.**

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.