

Overview

The Taylor Swoden 12-Cup Programmable Coffee Maker is a drip coffee machine designed for home and office use. It features an LCD screen, programmable timer, and the ability to brew regular or strong coffee. The machine includes a glass carafe, a reusable filter, and a pause & serve function.



Features

Programmable Timer

The coffee maker includes an LCD screen that allows you to program the brew time up to 24 hours in advance. This enables you to set the machine to start brewing at a specific time.

Brewing Strength Selection

You can choose between Regular and Bold brewing strength. The showerhead design evenly saturates coffee grounds to extract maximum flavor.

12-Cup Capacity

The machine can brew up to 12 cups (1.8 liters) of coffee at a time. The glass carafe has clear markings for water level measurement.

Pause & Serve (Anti-Drip System)

The anti-drip system allows you to pause the brewing cycle and pour a cup mid-brew without mess. The flow stops automatically when the carafe is removed.

Two-Hour Auto Shutoff & Keep Warm

The nonstick warming plate keeps coffee warm for up to 2 hours after brewing. The machine automatically shuts off after 2 hours.

Auto Clean Function

The coffee maker features an automatic cleaning cycle. A flashing green light indicates when it is time to clean the machine.

Reusable Filter

A permanent, dishwasher-safe filter is included. It can be used with ground coffee or loose tea (e.g., Oolong, black tea, white tea).

Water Window

A large water window on the side of the machine allows you to easily see the water level.

What's in the Box

- Coffee maker base
- Glass carafe
- Permanent filter

- Instruction manual

Product Specifications

Brand	Taylor Swoden
Model Number	B30203A0U
Capacity	1.8 Liters (12 cups)
Product Dimensions	6.6"D x 12"W x 9.4"H
Wattage	950 watts
Power Source	AC adapter
Material	Glass, Non-stick
Filter Size	#4
Color	White
Special Feature	Auto Clean Function

Control Panel & Indicators

The control panel includes an LCD screen and buttons for programming. The LCD displays the current time and programmed brew time. A green light flashes to indicate when the cleaning cycle is needed.



Use Guide

Before First Use

1. Remove all packaging materials and stickers.
2. Wash the glass carafe, filter basket, and permanent filter with warm soapy water. Rinse and dry thoroughly.

3. Run a brewing cycle with water only (no coffee) to clean the internal system. Discard the water.

How to Brew Coffee

1. Open the water reservoir lid and fill with cold water using the water level markings on the carafe or the water window. Do not exceed the 12-cup max line.
2. Place a #4 paper filter or the included permanent filter into the filter basket.
3. Add ground coffee. Use approximately 1 tablespoon of coffee per cup, adjusting to taste.
4. Close the filter basket lid.
5. Place the glass carafe on the warming plate, ensuring the lid is closed.
6. Plug in the coffee maker. The LCD screen will light up.
7. Press the **Brew Strength** button to select Regular or Bold.
8. To brew immediately, press the **Start** button.
9. To program a delayed brew, press the **Program** button, set the desired time using the hour and minute buttons, then press the **Program** button again to confirm. The machine will start brewing at the set time.

Using the Pause & Serve Function

During the brewing cycle, you can remove the carafe to pour a cup. The anti-drip valve will stop the flow of coffee. Replace the carafe within 30 seconds to prevent overflow.

Cleaning and Maintenance

Daily Cleaning

- Discard used grounds and filter.
- Wash the carafe and filter basket with warm soapy water or place them in the dishwasher (top rack).
- Wipe the exterior with a damp cloth.

Descaling (Auto Clean Cycle)

When the green light flashes, it is time to descale the machine.

1. Fill the water reservoir with a mixture of equal parts water and white vinegar (or a descaling solution).
2. Place an empty carafe on the warming plate.
3. Press and hold the **Clean** button (if available) or run a full brew cycle without coffee.

4. After the cycle, discard the vinegar solution.
5. Run two more cycles with fresh water to rinse.

Warranty and Support

This product comes with a 1-year warranty. If you have any questions or issues, contact Taylor Swoden customer support. (Specific contact details are not provided in the source material; please refer to the product packaging or the seller's page for contact information.)

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)