

Overview



This manual provides instructions for the safe and effective use of the NEWBULIG Dog Hair Dryer. This is a 1550W high-velocity pet blow dryer designed for grooming dogs and other pets after bathing. It features adjustable speed and temperature settings, a flexible hose, and includes four interchangeable nozzles.

Safety Information

Read all instructions before use.

- This appliance is for household use only. It is designed for drying animal fur.
- Do not use this dryer on humans.
- Always plug the dryer directly into a wall outlet. Do not use an extension cord.
- Ensure the power cord and hose are not kinked, pinched, or damaged.
- Do not immerse the dryer, cord, or plug in water or other liquids.
- Do not operate the dryer with a damaged cord or plug, or if it has been dropped or damaged.
- Unplug the dryer when not in use and before attaching or changing nozzles.
- Keep the air intake and outlet vents clear of obstructions.
- Do not cover the dryer during operation.
- The dryer has a built-in temperature control protection system. It will automatically shut off if it overheats. If this occurs, unplug the dryer and allow it to cool completely before attempting to use it again.
- Keep the dryer out of reach of children and pets when not in use.

Package Contents

- Main dryer unit with motor and controls
- Flexible hose (extends up to 6.56 ft / 2m)
- 4 Interchangeable Nozzles
- Power cord

Inspect all parts for damage before use.

Product Features & Parts

Main Unit

- **Power:** 1550W
- **Body Material:** Durable one-piece ABS plastic shell.
- **Air Intake Vents:** Located on the rear/sides of the unit. Keep these vents clean and unobstructed.
- **Hose Connection Port:** Where the flexible hose attaches to the main unit.
- **Control Panel:** Contains buttons or switches for operation (see Controls section).

- **Power Cord:** Corded electric. Ensure it is fully unwound before use.

Controls and Settings

Based on product specifications, your dryer offers the following adjustable settings:

- **Power Switch:** Turns the dryer on and off.
- **Mode Selection:**
 - **Cool-Warm-Hot Cycling Mode:** Provides a gentle, alternating temperature flow for a comfortable drying experience.
 - **Manual Temperature Mode:** Allows you to select a constant temperature setting.
- **Temperature Settings (Manual Mode):** Three adjustable levels.
 - Cool: Approximately 95°F (40°C)
 - Warm: Approximately 113°F (45°C)
 - Hot: Approximately 149°F (65°C)
- **Speed Settings:** Adjustable airflow speed. Maximum airflow speed is 100 m/s.

Note: The dryer includes a built-in temperature control protection system that will stop the unit immediately if it detects an unsafe temperature.

Nozzles

Four interchangeable nozzles are included to customize airflow for different grooming tasks and coat types.

- **Concentrator Nozzle:** Focuses airflow into a narrow stream for precise drying and detangling.
- **Wide Nozzle:** Provides a broader, gentler airflow for general drying over larger areas.
- **Curved/Undercoat Nozzle:** Designed to lift and separate hair to effectively dry the undercoat and remove loose hair.
- **Standard Round Nozzle:** For general-purpose drying.

To Attach/Change a Nozzle: Ensure the dryer is off and unplugged. Align the nozzle with the end of the hose and push or twist until it is securely in place.

Use Guide

Before First Use

1. Unpack all components and inspect for any shipping damage.
2. Ensure the power cord and hose are fully unwound.

3. Wipe the exterior of the dryer with a dry cloth. Do not use liquids or cleaners.
4. Choose a suitable, stable, and dry location for the main unit, close to a power outlet.

Drying Your Pet - Step by Step

1. **Prepare Your Pet:** Thoroughly towel-dry your pet after their bath to remove excess water. This significantly reduces drying time.
2. **Prepare the Area:** Place your pet on a non-slip surface in a warm, draft-free room. Have treats nearby to reward calm behavior.
3. **Connect and Set Up:**
 - Attach the flexible hose to the main unit.
 - Select and attach the desired nozzle. For thick coats or undercoat removal, the curved nozzle may be most effective. For general drying, start with the wide nozzle.
 - Plug the power cord directly into a wall outlet.
4. **Power On and Adjust Settings:**
 - Turn the power switch to the "On" position.
 - For anxious or heat-sensitive pets, start with the **Cool-Warm-Hot Cycling Mode** and the **lowest speed setting**.
 - For faster drying on tolerant pets, you can select a constant **Warm temperature** and a **medium or high speed**.
 - **Always test the airflow temperature on the inside of your wrist before directing it at your pet.**
5. **Drying Technique:**
 - Hold the hose nozzle several inches away from your pet's coat.
 - Use a brushing motion with your free hand or a grooming brush to lift the hair as you dry, allowing air to reach the undercoat.
 - Move the nozzle continuously. Do not hold it in one spot for an extended period.
 - Dry the body first, then the legs and tail. Be extra gentle and use lower settings around the face, ears, and genital areas.
 - If your pet becomes stressed, turn the dryer off, offer reassurance and a treat, and resume when they are calm.
6. **Power Off and Disconnect:**
 - Once your pet is completely dry, turn the power switch to "Off."
 - Unplug the dryer from the wall outlet.

- Allow the dryer to cool down completely before storing.

7. **Clean Up:** The powerful airflow will blow loose hair and dander into the air. It is recommended to use the dryer in an easy-to-clean area like a bathroom or grooming station.

Cleaning and Maintenance

- **After Each Use:** Unplug the dryer and wipe the exterior with a soft, dry cloth.
- **Air Intake Vents:** Regularly check the rear air intake vents for dust or hair buildup. Use a soft brush or a vacuum cleaner attachment to gently remove any debris. **Do not use sharp objects.**
- **Nozzles and Hose:** Wipe clean with a dry cloth. Ensure they are completely dry before attaching them to the main unit for storage.
- **Storage:** Store the dryer, hose, and nozzles in a cool, dry place. Loosely coil the power cord; do not wrap it tightly around the unit.
- **Do Not:** Immerse any part of the dryer in water. Do not use abrasive cleaners or solvents.

Troubleshooting

Problem	Possible Cause	Solution
Dryer does not turn on.	Not plugged in. Power outlet issue. Overheat protection activated.	Check plug and outlet. Try a different outlet. If overheated, unplug and let cool for 30+ minutes.
Airflow is weak or no airflow.	Air intake vents are blocked. Hose is kinked or detached.	Clean air intake vents. Check hose connection and ensure it is not bent.
Dryer stops during use.	Built-in temperature control protection activated due to overheating.	Unplug the dryer immediately. Allow it to cool completely in a well-ventilated area. Check for blocked vents before next use.
Unusual noise or smell.	Foreign object in intake or fan. Mechanical issue.	Unplug immediately. Check for and remove any obstructions from vents. If problem persists, discontinue use.
Pet is anxious or scared.	New experience, noise, or airflow sensation.	Introduce the dryer gradually. Use the lowest, quietest settings first. Offer treats and praise. Never force your pet.

Specifications

- **Power:** 1550W
- **Power Source:** Corded Electric
- **Max Airflow Speed:** 100 m/s
- **Temperature Settings:** Cool (~95°F/40°C), Warm (~113°F/45°C), Hot (~149°F/65°C) & Cycling Mode
- **Noise Level:** 48-72 dB
- **Hose Length:** Extends up to 6.56 ft (2m)
- **Material:** ABS Plastic Shell, Metal Blades
- **Included Nozzles:** 4
- **Item Weight:** 8.4 lbs (8.38 Pounds)
- **Dimensions (Main Unit):** Approximately 12.64 x 6.69 x 8.82 inches
- **Model Name:** Dog Hair Dryer
- **Model Number:** CW-CSJ

Disposal

This product contains electronic components. At the end of its service life, do not dispose of it with household waste. Please dispose of it according to your local regulations for electronic waste (e-waste). Contact your local waste management authority for guidance.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.