

Model: CM1429TE | Color: Beige

1. Overview

The SHARDOR 10-Cup Programmable Coffee Maker is a drip coffee machine designed for home and office use. It features a programmable timer, LCD touch screen, and a permanent filter. The machine allows you to choose between Regular and Strong brew strengths and includes an auto shut-off function for safety.



1.1 Key Components

- **Carafe:** Glass carafe with a capacity of 10 cups (approx. 1.25 liters).
- **Permanent Filter:** Reusable mesh filter – no paper filters required.
- **Water Reservoir:** Removable tank for easy filling.
- **Filter Basket:** Holds the permanent filter or a paper filter.
- **Warming Plate:** Keeps coffee warm for up to 2 hours after brewing.
- **LCD Touch Screen:** Central control panel for programming and operation.
- **Pause & Serve Mechanism:** Allows you to pour a cup mid-brew without stopping the cycle.

2. Specifications

Feature	Specification
Brand	SHARDOR
Model	CM1429TE
Capacity	10 Cups
Product Dimensions (D x W x H)	8" x 6.7" x 12.7"
Wattage	900 Watts
Color	Beige (also available in Gray, Pink, Red, Silver)
Human Interface	Touchscreen
Operation Mode	Fully Automatic
Brew Strength Options	Regular, Strong
Programmable Timer	24-hour
Auto Shut-Off	Yes
Keep Warm Duration	2 hours
Included Components	Carafe, Permanent Filter

3. Features

3.1 Programmable Brewing (24-Hour Timer)

Set the machine up to 24 hours in advance. The coffee maker will automatically start brewing at the programmed time.

3.2 LCD Touch Screen

The control panel uses a touch screen interface. Use it to set the clock, program the timer, select brew strength, and start or stop brewing.



3.3 Two Brew Strength Options

- **Regular:** Standard brewing cycle for a balanced flavor.
- **Strong:** Extended brewing cycle for a bolder, more robust taste.

3.4 Keep Warm Function

After brewing completes, the warming plate will keep your coffee hot for up to 2 hours. The machine will then automatically shut off.

3.5 Auto Shut-Off

For safety and energy conservation, the coffee maker automatically turns off after the keep-warm cycle ends (2 hours after brewing).

3.6 Pause & Serve

During the brewing cycle, you can remove the carafe to pour a cup. The flow from the filter basket will pause automatically. Replace the carafe within 30 seconds to resume brewing without overflow.

3.7 Permanent Filter

The included reusable mesh filter eliminates the need for disposable paper filters. Rinse it under running water after each use.

4. Use Guide

4.1 Before First Use

1. Remove all packaging materials and stickers from the coffee maker.
2. Wash the carafe, filter basket, and permanent filter in warm, soapy water. Rinse and dry thoroughly.
3. Run one full brewing cycle with water only (no coffee grounds) to clean the internal system. Discard the water.

4.2 Setting the Clock

1. Plug in the coffee maker. The display will flash "12:00".
2. Press the **PROG** button once. The hour digits will flash.
3. Use the **HOUR** and **MIN** buttons (or touch screen arrows) to set the current time.
4. Press **PROG** again to confirm.

4.3 Programming a Delayed Brew Start

1. Press the **PROG** button twice. The display will show "12:00" (or the last set time) and the **PROG** indicator will flash.
2. Use the **HOURL** and **MIN** buttons to set the desired start time.
3. Press **PROG** again to confirm. The **PROG** indicator will remain lit.
4. The machine will automatically start brewing at the set time.

4.4 Brewing Coffee

1. Open the top lid and lift out the filter basket.
2. Place the permanent filter (or a #4 paper filter) into the basket.
3. Add the desired amount of ground coffee. Use approximately 1 tablespoon per cup for regular strength, or 1.5 tablespoons for strong brew.
4. Place the filter basket back into the machine and close the lid.
5. Fill the water reservoir with fresh, cold water up to the desired cup level (do not exceed the MAX line).
6. Place the carafe on the warming plate, ensuring the lid is closed.
7. Press the **ON/OFF** button to start brewing immediately, or set the timer as described above.
8. To select brew strength, press the **STRENGTH** button before starting. The display will show "REG" or "STRONG".

4.5 Using Pause & Serve

1. During brewing, carefully remove the carafe from the warming plate.
2. Pour your coffee. The flow from the filter basket will stop.
3. Return the carafe to the warming plate within 30 seconds. Brewing will resume.

4.6 After Brewing

- The machine will keep the coffee warm for 2 hours, then shut off automatically.
- To turn off the warming plate manually, press the **ON/OFF** button.
- Unplug the machine when not in use for extended periods.

5. Cleaning & Maintenance

5.1 Daily Cleaning

- Discard used coffee grounds and rinse the permanent filter under running water.

- Wash the carafe and filter basket with warm, soapy water. Rinse and dry.
- Wipe the exterior of the machine with a damp cloth. Do not immerse the base in water.

5.2 Descaling (Every 2-3 Months)

Mineral deposits from water can affect performance. Descale regularly:

1. Fill the water reservoir with a mixture of equal parts white vinegar and water (or use a commercial descaling solution).
2. Place a paper filter in the basket (to catch any residue).
3. Run a full brewing cycle without coffee grounds.
4. Discard the vinegar solution.
5. Run 2-3 cycles with fresh water only to rinse thoroughly.

6. Troubleshooting

Issue	Possible Cause	Solution
Machine does not turn on	Not plugged in / Power outage	Check power cord and outlet.
Brewing is slow or stops	Mineral buildup / Clogged filter	Descal the machine. Clean the permanent filter thoroughly.
Coffee tastes weak	Incorrect coffee-to-water ratio / Regular strength selected	Use more coffee grounds or select "Strong" brew.
Coffee tastes bitter	Over-extraction / Dirty machine	Use less coffee or clean the machine. Descale if needed.
Carafe overflows	Too much water / Filter basket not seated properly	Do not exceed MAX line. Ensure filter basket is correctly inserted.
Display shows error code	Internal malfunction	Unplug for 1 minute, then plug back in. If persists, contact support.

7. Warranty & Support

This product is covered by a limited manufacturer's warranty. For warranty claims, support, or service inquiries, please contact SHARDOR directly.

Contact Information:

- **Brand:** SHARDOR

- **Model:** CM1429TE
- **ASIN:** B0GRXVYGJL
- **Customer Service:** Visit the SHARDOR store on Amazon or refer to the product packaging for contact details.

Note: Warranty terms may vary by region. Keep your purchase receipt for proof of purchase.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)