

Model: Karosie Single Serve Coffee Maker (White, 9.45 Inches)

Brand: Karosie

Overview

The Karosie Small Single Serve Coffee Maker is a compact drip coffee machine designed for brewing one cup at a time. It is compatible with both K-Cup pods and ground coffee, offering flexibility for different preferences. The machine features a one-button operation, a water tank with a view window, and a descaling reminder indicator.



Key Specifications:

- **Capacity:** 12 Fluid ounces (max brew size)

- **Brew Sizes:** 6 to 12 oz
- **Product Dimensions:** 7.85"D x 4.33"W x 9.45"H
- **Weight:** Lightweight (portable design)
- **Material:** BPA-free plastic, glass, stainless steel
- **Voltage:** 120 volts
- **Filter Type:** Reusable permanent filter (included)
- **Special Features:** Auto Shut-Off, Lightweight, Permanent Filter, Portable

Features

1. Dual Brewing: K-Cup Pods & Ground Coffee

This coffee maker works with standard K-Cup pods and also includes a reusable filter basket for ground coffee. This allows you to use your preferred coffee type.



2. One-Button Operation & Fast Brew

The machine is controlled by a single button. After filling the water tank and adding your coffee, press the button to start brewing. The machine brews a cup of hot coffee in as fast as 120 seconds.



3. Water Tank with View Window

The built-in water tank has a clear view window with measurement markings. This allows you to add the exact amount of water for your desired brew size (6-12 oz), giving you control over coffee strength.



4. Descaling Reminder & Self-Cleaning

The machine has a built-in descaling reminder. When the indicator turns red, it is time to descale. To clean, add descaling solution, hold the brew button for 2 seconds, and the machine will run a self-cleaning cycle.



5. Compact & Portable Design

With a slim profile (4.33 inches wide, 9.45 inches tall), the coffee maker is designed to fit in small spaces such as dorm rooms, RVs, offices, and small kitchens. It is also lightweight for portability.

ENJOYING COFFEE ALONE
IN THE DORMITORY



BREWING ON THE GO



FUEL YOUR FOCUS AT THE OFFICE



6. Safety Features

- **Auto Shut-Off:** The machine automatically turns off after brewing to save energy and prevent accidents.
- **BPA-Free Materials:** All parts that come into contact with water or coffee are made from BPA-free, heat-resistant materials.

Use Guide

Before First Use

1. Unpack the coffee maker and remove all packaging materials.
2. Wash the water tank, filter basket, and drip tray with warm soapy water. Rinse and dry thoroughly.
3. Place the machine on a flat, stable surface.
4. Run a cleaning cycle with water only (no coffee) before first use. Follow the "Brewing Instructions" below using only water.

Brewing Instructions

1. **Fill the Water Tank:** Open the water tank lid and fill with fresh, cold water. Use the view window markings to measure the desired amount (6, 8, 10, or 12 oz).
2. **Prepare the Coffee:**
 - **For K-Cup Pods:** Lift the handle, insert a K-Cup pod into the pod holder, then close the handle.
 - **For Ground Coffee:** Lift the handle, place the reusable filter basket into the pod holder, add ground coffee (use the included scoop), then close the handle.
3. **Place a Mug:** Place a mug (up to 5.5 inches tall) on the drip tray.
4. **Brew:** Press the brew button once. The indicator light will turn on, and brewing will begin. The machine will automatically stop when finished.
5. **Enjoy:** Carefully remove the mug. The machine will automatically shut off after a short period.

Note: Brewing time is approximately 120 seconds for a full cup.

Descaling & Cleaning

When the descaling indicator turns red, follow these steps:

1. Prepare a descaling solution according to the manufacturer's instructions (or use a mixture of equal parts water and white vinegar).
2. Pour the solution into the water tank.
3. Place a large mug or container on the drip tray.
4. Hold the brew button for 2 seconds. The machine will enter self-cleaning mode and run the solution through the system.
5. After the cycle is complete, discard the solution.
6. Run 2-3 cycles with fresh water only to rinse the system.

7. The red indicator will turn off after successful descaling.

Daily Cleaning

- Remove and rinse the filter basket and drip tray after each use.
- Wipe the exterior with a damp cloth.
- Do not immerse the machine in water.

Troubleshooting

Problem	Possible Cause	Solution
Machine does not turn on	No power	Check that the power cord is plugged into a working outlet.
Brewing is slow or stops	Mineral buildup (scale)	Run the descaling cycle as described above.
Descaling indicator is red	Machine needs descaling	Follow the descaling instructions.
Water leaks	Pod holder not closed properly	Ensure the handle is fully closed and locked.
Coffee is weak or cold	Not enough coffee grounds or water temperature	Use more ground coffee or ensure water tank is filled. Run a cleaning cycle if needed.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.