

**Model:** 5430525 | **Brand:** Shop-Vac | **Color:** Green and Gray

## Overview

The Shop-Vac Wet/Dry Handheld Vacuum is a cordless, rechargeable vacuum designed for quick cleanups around the home and car. It features a wall-mounted design for convenient storage and is capable of handling both wet and dry messes.



The vacuum is lightweight and compact, making it easy to carry and use in various locations. It comes with a crevice tool for tight spaces and an accessory kit.

# Features

## Power and Performance

- **Suction Power:** 5.5 kPa suction for effective cleaning of common debris from carpets, sofas, countertops, and car seats.
- **Wet/Dry Capability:** Can handle both dry debris (crumbs, pet hair) and light liquid spills. A wet/dry deflector prevents liquid damage to the motor.
- **Power Source:** Battery powered (7.2V lithium-ion).
- **Runtime:** 14 minutes of continuous use per charge.
- **Charge Time:** 2.5 hours for a full charge.

## Design and Usability

- **Form Factor:** Handheld, lightweight at 1.43 lbs (0.65 kg).
- **Dimensions:** 14.65" L x 3.74" W x 4.09" H.
- **Dustbin Capacity:** 0.5 liters.
- **Filter Type:** Reusable cartridge filter.
- **Dustbin Release:** One-click release for easy emptying.
- **Wall-Mounted:** Includes a wall mount for space-saving storage.
- **Number of Speeds:** 1 (single speed operation).

## Included Components

- Shop-Vac Wet/Dry Handheld Vacuum
- Crevice Tool
- Accessory Kit
- Wall Mounting Bracket
- Charging Cable
- User Manual

## Indicators and Controls

- **Power Switch:** A single button to turn the vacuum on and off. Located on the main body for easy access.
- **Charging Indicator:** An LED light on the vacuum indicates when the battery is charging (typically red) and when fully charged (typically green or off).
- **Dustbin Release Button:** A button on the dustbin allows for one-click removal and emptying.



## Use Guide

### Charging the Vacuum

1. Ensure the vacuum is turned off.
2. Connect the charging cable to the charging port on the vacuum.
3. Plug the other end into a standard wall outlet.
4. The charging indicator will light up. Allow 2.5 hours for a full charge.
5. Once fully charged, unplug the charger. The vacuum is ready for use.

### Using the Vacuum

1. Press the power switch to turn the vacuum on.
2. For dry debris: Move the nozzle over the area to be cleaned.
3. For wet spills: Ensure the wet/dry deflector is in place to protect the motor. Vacuum up the liquid.
4. For tight spaces: Attach the crevice tool to the nozzle for precise cleaning.

5. Press the power switch again to turn the vacuum off after use.

## **Emptying the Dustbin**

1. Turn off the vacuum and disconnect it from the charger.
2. Press the dustbin release button to detach the dustbin from the main body.
3. Hold the dustbin over a trash container and empty its contents.
4. Reattach the dustbin by aligning it with the main body and clicking it back into place.

## **Cleaning the Filter**

1. Remove the dustbin as described above.
2. Take out the cartridge filter from the dustbin compartment.
3. Tap the filter gently to remove loose dust, or rinse it under running water if needed.
4. Allow the filter to air dry completely before reinserting it.
5. Reinsert the filter and reattach the dustbin.

## **Wall Mounting**

1. Select a suitable location near a power outlet for charging.
2. Use the provided wall mount bracket as a template to mark screw holes on the wall.
3. Drill holes and insert wall anchors if necessary.
4. Secure the bracket to the wall with screws.
5. Place the vacuum onto the bracket for storage and charging.

## **Video Guide**

The following video demonstrates the setup and use of the Shop-Vac Wet/Dry Handheld Vacuum.

Your browser does not support the video tag.

*Video description: The video showcases the product in use, guides you through product setup, compares multiple products, and shows the product being unpacked.*

## Specifications

<b>Brand</b>	Shop-Vac
<b>Model</b>	5430525
<b>Color</b>	Green and Gray
<b>Power Source</b>	Battery Powered (7.2V DC)
<b>Battery Type</b>	Lithium-Ion
<b>Charge Time</b>	2.5 hours
<b>Runtime</b>	14 minutes
<b>Suction Power</b>	5.5 kPa
<b>Capacity</b>	0.5 liters
<b>Filter Type</b>	Cartridge (Reusable)
<b>Weight</b>	1.43 lbs (0.65 kg)
<b>Dimensions (L x W x H)</b>	14.65" x 3.74" x 4.09"
<b>Surface Recommendation</b>	All floors
<b>Indoor/Outdoor Use</b>	Indoor, Outdoor
<b>Number of Speeds</b>	1
<b>Included Components</b>	Accessory Kit, Crevice Tool, User Manual

## Safety and Maintenance

### Important Safety Instructions

- Read all instructions before using the vacuum.
- Do not use the vacuum outdoors in wet conditions.
- Do not vacuum flammable or combustible materials.
- Keep the vacuum away from heat sources and open flames.
- Do not immerse the vacuum in water or any liquid.
- Use only the provided charger and accessories.

- Keep the vacuum out of reach of children.

## Maintenance

- Empty the dustbin after each use to maintain optimal suction.
- Clean the filter regularly (every 2-4 weeks depending on use).
- Check the nozzle and crevice tool for blockages.
- Store the vacuum in a cool, dry place when not in use.
- Do not attempt to repair the vacuum yourself. Contact Shop-Vac customer service for assistance.

## Troubleshooting

### Vacuum does not start

- Ensure the battery is charged.
- Check that the dustbin is properly attached.
- Press the power switch firmly.

### Reduced suction power

- Empty the dustbin.
- Clean or replace the filter.
- Check for blockages in the nozzle or crevice tool.

### Battery does not charge

- Ensure the charger is properly connected to the vacuum and the wall outlet.
- Try a different wall outlet.
- If the issue persists, contact Shop-Vac customer service.

#### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.