 


USER MANUAL Stand Mixer

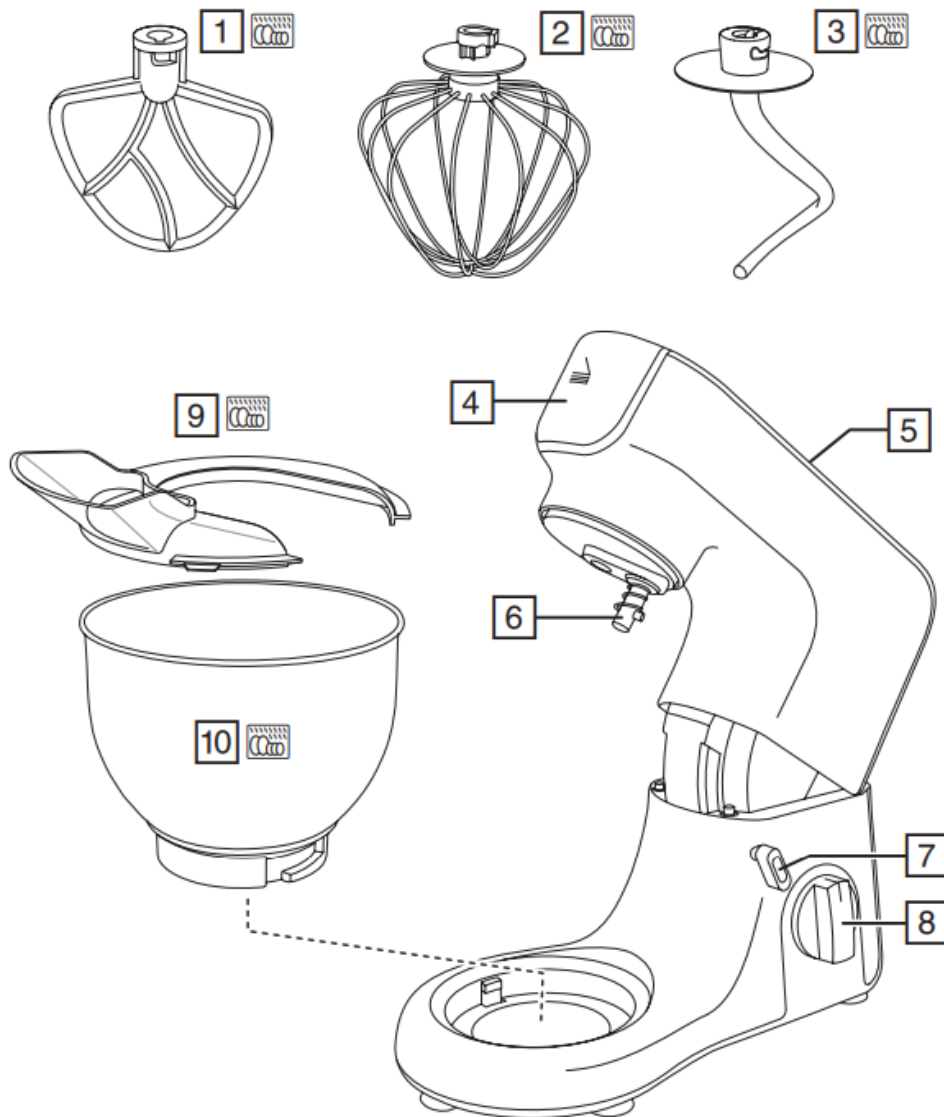

PARTS

1. Beater
2. Whisk
3. Dough hook
4. Accessory drive (for optional accessories)
5. Arm
6. Drive shaft and pin
7. Arm lock lever
8. Speed control
9. Splash guard

10. Bowl




Dishwasher safe

POSITIONING

1. Sit the appliance on a water-resistant, dry, stable, level surface.
2. Route the cable so it doesn't overhang, and can't be tripped over or caught.
3. Don't plug it in until you have finished assembling it.

ASSEMBLY

Raising the arm:

1. The springs in the arm are powerful so place your hand on top of the arm to control its movement.
2. Turn the arm lock lever to the  position and hold it there. The arm will rise.

Lowering the arm:

1. Turn the arm lock lever to the  position and hold it there.
2. Press the arm down and, while holding it there, release the arm lock lever.

Fitting the bowl

 
Raise the arm before fitting or removing the bowl. Use only the bowl supplied.

1. Fit the bowl into the recess in the base and turn it clockwise until it locks.
2. To remove, turn it anti-clockwise then lift it off the base.


Fitting/removing attachments

Switch off, unplug and raise the arm before fitting or removing attachments.

1. Align the slot in the attachment with the pin on the drive shaft (Fig A).

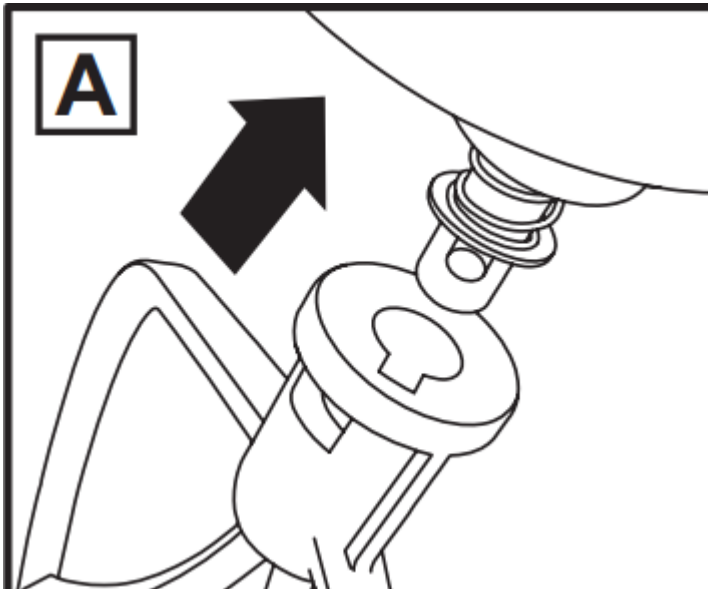

 2. Push the attachment onto the drive shaft then turn it anti-clockwise to lock it (Fig B).

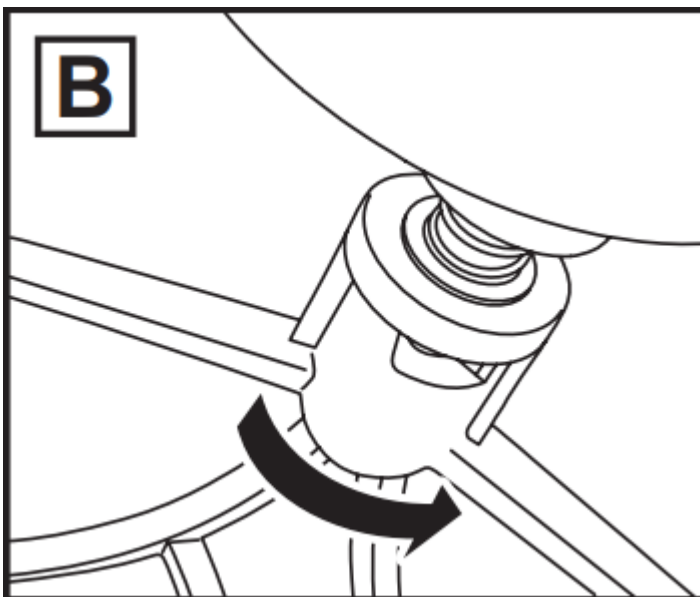


To remove an attachment, push it upwards slightly then turn it clockwise and pull it off the shaft.

Splash guard

The splash guard protects you from spills or splashes during mixing while still allowing you to add ingredients. Switch off and unplug your mixer before fitting/removing the splash guard. With the bowl in position and the arm in the lowered position:


1. Slide the splash guard between the arm and the bowl.

 2. Align it so that the opening is on the right hand side (Fig C).

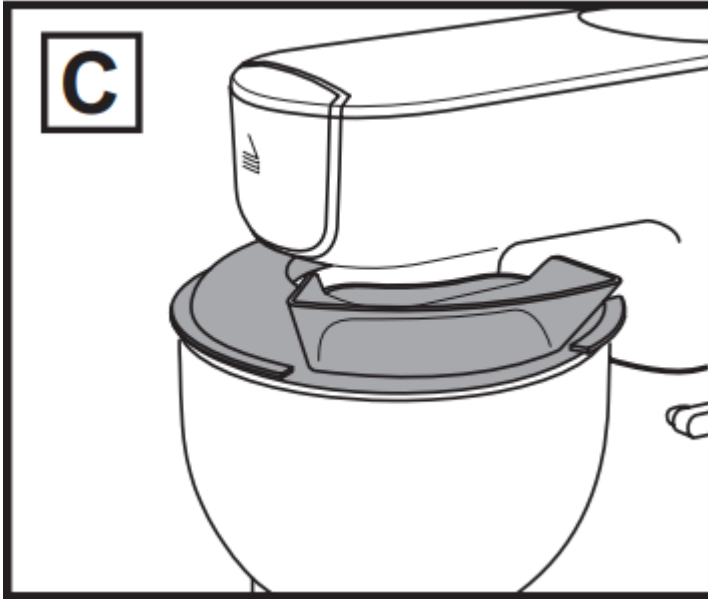

- Always remove the splash guard before raising the arm.

USING YOUR MIXER

1. Check that the speed control is set to **O**.
2. Put the plug into the power socket (switch the socket on, if its switchable).
3. Turn the speed control clockwise to the speed you want.
4. The range is from **1** (low) to **10** (high). Turn the speed control back to **O** to turn the motor off.
5. To operate the motor in short bursts, turn the speed control to the  position. Release the control to stop the motor.

Recommended Speeds

Attachment	Speed	Use for
Whisk	7-10	beating/aerating cream, egg whites, batter, light mixes
Beater	4-7	creaming butter and sugar, medium cake mixes
Dough hook	1-4	heavy mixtures, bread, pastry

CARE AND MAINTENANCE

Switch off (**O**) and unplug before cleaning.

1. Clean as soon after use as possible to prevent residues setting inside the bowl.

2. Wash the bowl, splash guard and attachments in warm soapy water, rinse, and dry.
3. You may put the bowl and attachments in a dishwasher, but note: the harsh environment inside the dishwasher will affect the surface finishes. The damage should be cosmetic only, and should not affect the operation of the appliance.
4. Wipe the outside surfaces of the appliance with a clean damp cloth.

RECIPES

PIZZA DOUGH	dough hook
• 400g plain flour	• 25ml olive oil
• 1 sachet active dried yeast (about 2½ tsp)	• 2.5g sugar
• 250ml warm water	• 5g salt

Put the flour in the bowl. Mix the other ingredients in a jug. Select speed 1, and slowly add the liquid. As the dough ball forms, increase speed to 2, and knead for a couple of minutes, till the dough ball is smooth. Remove, split into 2-4 pieces, and roll into pizza bases (circles or rectangles) on a floured surface. Lay them on a baking sheet or pizza tray, spread with tomato purée and add your desired toppings. Top with dried herbs, torn mozzarella and a drizzle of olive oil. Bake in a preheated oven at 200°C/400°F/gas 6 for 15-20 minutes, till the toppings are bubbling and golden brown.

CURRANT LOAF (1kg/2lb loaf)	dough hook
<ul style="list-style-type: none"> • 500g wholemeal flour • 150g butter (softened) • 15g baking powder • 2.5g salt • 150g sugar 	<ul style="list-style-type: none"> • 150g currants • 50g mixed peel • 2 eggs (medium) • 30ml milk

Put the flour in the bowl, add the softened butter, and mix on speed 1. When the butter and flour start to blend, add the sugar, salt, currants, peel and baking powder. Leave it mixing while you beat the eggs and milk together, then add the egg/milk mixture to the bowl. Select speed 2 and mix till combined. Put into a greased loaf tin and bake in a preheated oven at 180°C/350°F/ gas 4 for 35 minutes. Cool on a wire rack before slicing. Serve toasted with butter.

BASIC WHITE BREAD (1kg/2lb loaf)	dough hook
<ul style="list-style-type: none"> • 600g strong white bread flour • 1 sachet active dried yeast (about 2½ tsp) • 345ml warm water 	<ul style="list-style-type: none"> • 15ml sunflower oil or butter • 5g sugar • 10g salt

Mix as for pizza dough, then cover and leave in a warm place till doubled in size (30-40 minutes). Punch down to remove air, knead lightly on a floured board, shape it into a loaf, or put it in a tin, cover, and leave in a warm place to rise for another 30 minutes. Bake in a preheated oven at 200°C/400°F/gas 6 for 25-30 minutes, till golden brown and hollow sounding on the bottom.

BASIC WHOLEMEAL BREAD (1kg/2lb loaf)	dough hook
<ul style="list-style-type: none"> • 575g strong wholemeal bread flour • 1 sachet active dried yeast (about 2½ tsp) • 375ml warm water 	<ul style="list-style-type: none"> • 30ml sunflower oil or butter • 15g light brown sugar • 10g salt

Follow the method for basic white bread.

SOFT POPPY SEED ROLLS (8-10 rolls)	dough hook
<ul style="list-style-type: none"> • 570g strong white bread flour • 1 sachet active dried yeast (about 2½ tsp) • 300ml milk (warmed slightly) • 2 eggs (room temperature) 	<ul style="list-style-type: none"> • 15ml sunflower oil • 8g sugar • 10g salt • 75g poppy seeds

Mix the milk, eggs, oil, sugar, salt and yeast in a jug. Leave for 5 minutes. Put the flour and poppy seeds in the bowl. Mix at speed 1, gradually adding the liquid, increase speed to 2, and mix for five minutes. Cut into 8-10 pieces, then roll into shape, on a floured surface. Leave on a baking sheet, in a warm place, till doubled in size. Brush with egg or milk, and bake in a preheated oven at 220°C/425°F/gas 7 for 20-25 minutes, till golden brown and hollow sounding on the base.

ITALIAN HERB BREAD (1kg/2lb loaf)	dough hook
<ul style="list-style-type: none"> • 575g strong white bread flour • 1 sachet active dried yeast (about 7g) • 290ml lukewarm water (30°-35°C) • 30ml olive oil 	<ul style="list-style-type: none"> • 10g sugar • 10g salt • 60g mixed dried herbs

Mix the water, oil, sugar, salt and yeast in a jug, and leave for 5 minutes. Put the flour and dried herbs in the bowl. Select speed 1. Gradually add the liquid, increase speed to 2, and mix for five minutes. Cover the dough, and leave in a warm place till doubled in size (20-30 minutes). Knead gently on a floured surface, to knock out the air, then shape, put on a baking sheet, and leave in the warm till doubled in size. Bake in a preheated oven at 200°C/400°F/gas 6 for 25 minutes, till golden brown and hollow sounding on the bottom.

APRICOT, LEMON AND RUM PANCAKES	whisk
<ul style="list-style-type: none"> • 100g plain flour • 25g ground almonds • 50g dried apricots • 300ml milk • 1 egg 	<ul style="list-style-type: none"> • 25g butter (melted) • grated rind of ½ lemon • 30-45ml rum • pinch salt • oil for frying

Soak the dried apricots overnight in the rum. Mix the egg, milk, lemon rind and melted butter in a jug. Sift the flour into the bowl, add the ground almonds and salt, and whisk at speed 3, gradually adding the liquid. Increase speed to 5 or 6, as everything is incorporated, then whisk till smooth. Heat the oil in a frying pan and drop in tablespoons of batter. Cook for a minute or so on each side till golden. Put in a stack and keep warm. Purée the rum and apricots in a blender, put a little purée on each pancake and roll up. Serve warm with cream or ice cream.

HOT CHOCOLATE SOUFFLÉ	whisk
<ul style="list-style-type: none"> • 75g butter • 50g plain flour • 10g cocoa powder 	<ul style="list-style-type: none"> • 450ml milk • 4 eggs, separated • 50g caster sugar

Melt the butter in a pan over a low heat. Stir in the flour and cocoa, then the milk and stir till thickened slightly. Remove from the heat, let it cool, then beat in the egg yolks. Put the whites in the bowl, mix at speed 6 for a few seconds, add the sugar and whisk till soft peaks form. Fold in the sauce. Pour the mixture into a greased 1.2 litre (2 pint) dish. Bake, in the oven, in a roasting tin half filled with boiling water, at 190°C/375°F/gas 5 for 40-45 minutes, till well risen.

CHICKEN AND PESTO PANCAKE WRAPS	whisk
Pancake wraps:	
<ul style="list-style-type: none"> • 100g plain flour • 1 large egg • 300ml milk 	<ul style="list-style-type: none"> • 2.5g salt • oil for frying
Filling	
<ul style="list-style-type: none"> • 90g pesto (green or red) • 2 cooked chicken fillets, shredded 	<ul style="list-style-type: none"> • 75g Gruyere cheese, grated • 50g Parmesan cheese, grated
handful of baby plum tomatoes	large handful of fresh basil leaves

Mix the egg and milk in a jug. Sift the flour and salt into the bowl. Select speed 3. Gradually add the liquid, increase speed to 5 or 6, and whisk till smooth and light. Cook small amounts of batter in a hot saucepan coated with oil for a minute each side, till golden brown. Set aside and keep warm. Chop the tomatoes, tear the basil into shreds, spread each pancake wraps with a little pesto, add cooked chicken, chopped tomatoes, and basil. Season, roll up, and put in an ovenproof dish. Sprinkle with the two cheeses. Brown under a hot grill till golden and bubbling.

COFFEE AND BRANDY ICE CREAM	whisk
<ul style="list-style-type: none"> • 3 eggs • 75g caster sugar • 300ml single cream 	<ul style="list-style-type: none"> • 30g instant coffee powder • 300ml double cream • 40ml brandy

Whisk the sugar and eggs at speed 6 till smooth. Put the single cream and coffee in a pan, bring just to the boil, then stir in the egg and sugar mixture. Put in a heatproof bowl over a simmering pan of water and cook gently, stirring well, till thick enough to coat the back of a spoon. Strain into

a bowl and leave to cool. Whip the double cream at speed 6 till soft peaks form, then fold into the cold egg and sugar mixture, with the brandy. Pour into a container, cover, and freeze for 2½-3 hours, till partially frozen. Remove, stir well, then freeze again, till the texture suits you.

BASIC BISCUITS	whisk
<ul style="list-style-type: none"> • 100g butter • 150g caster sugar • 5ml vanilla essence 	<ul style="list-style-type: none"> • 1 medium egg • 100g plain flour • 100g self raising flour

Cream the butter, sugar and vanilla at speed 5 for 1-2 minutes till light, pale and fluffy, add the egg, and whisk till combined. Sift the flours together then gradually add them to the mixture. Remove the bowl, form the mixture into balls, and flatten them. Bake on a greased tray, in a preheated oven at 180°C/350°F/gas 4 for 12-15 minutes. Cool on the tray, then on a wire rack.

BASIC MERINGUES	whisk
<ul style="list-style-type: none"> • 4 egg whites • 100g caster sugar 	<ul style="list-style-type: none"> • 100g icing sugar

:Combine the sugars and set aside. Whisk the egg whites at speed 6 till fairly stiff. Add half the sugar and whisk till stiff peaks form. Remove the bowl, and fold in the remaining sugar with a metal spoon. Line a baking sheet, spoon the meringue into ovals, sprinkle with the remaining sugar, and cook on the bottom oven shelf at 120°C/250°F/ gas ½ for 1½ hours. Cool on a rack.

CLASSIC VICTORIA SPONGE CAKE	whisk
<ul style="list-style-type: none"> • 100g butter/margarine • 100g caster sugar • 2 large eggs 	<ul style="list-style-type: none"> • 100g self raising flour • 1 drop vanilla essence

Grease two 18cm (7") straight sided sandwich tins. Line the bases with greased greaseproof paper. Cream the butter and sugar at speed 3 till light and fluffy, gradually add the eggs, then the vanilla, then the flour. Increase speed to 4 once the ingredients start to incorporate. Divide the mixture between the tins and level the surfaces. Bake in the centre of a preheated oven at 180°C/ 350°F/gas 4 for about 25 minutes. Cool on a wire rack.



STEAMED TREACLE PUDDING	beater
<ul style="list-style-type: none"> • 100g caster sugar • 2 eggs • 100g self raising flour 	<ul style="list-style-type: none"> • 75g golden syrup • 100g butter • extra butter for greasing

Grease a 900ml pudding basin. Whisk the butter and sugar at 2-3 till light and fluffy. Add an egg, then a little flour, then the other egg, then the remaining flour. Put the syrup in the pudding basin, and pour the mixture on top. Cover with greaseproof paper or foil, secure with string and steam for 1½-2 hours. Serve hot with custard or cream.

VERY MOIST CHOCOLATE CAKE	beater
<ul style="list-style-type: none"> • 50g butter, softened • 30g golden syrup • 50ml milk • 2 eggs, beaten • 125g caster sugar • 100g cooking chocolate, melted 	<ul style="list-style-type: none"> • 10ml vanilla extract • 100ml boiling water • 35g cocoa powder • 125g self raising flour • 30ml light vegetable oil (sunflower, etc.)

Dissolve the cocoa in the boiling water and leave to cool. Cream the butter and sugar for a few seconds at 1, add half the egg, then half the flour, gradually increasing the speed to 3, add the remaining egg and flour, mix till smooth, add the other ingredients and mix till smooth. Put in a dish, cover with foil and steam for 1 hour, or till a skewer pushed into the cake comes out clean.

FARMHOUSE FRUIT CAKE	beater
<ul style="list-style-type: none"> • 150g butter • 150g caster sugar • 75g glacé cherries, chopped • 75g each of sultanas and raisins • 25g mixed peel 	<ul style="list-style-type: none"> • 300g self raising flour • Pinch salt • 5g mixed spice • 45ml milk • 3 eggs

Grease a 20cm (8") cake tin. Line with greaseproof paper. Preheat the oven to 180°C/350°F/gas 4. Put the butter, sugar, dried fruits and spices in the bowl, and beat at speed 3 till combined. Add the eggs and milk and beat for a few seconds. Gradually add the flour, beating till well mixed. Bake in the cake tin for about 1½ hours. Cool in the tin for 15 minutes then turn on to a wire rack.

SPONGE MIXTURE (BASIC RECIPE)	beater
<ul style="list-style-type: none"> • 500g plain flour • 250g soft butter or margarine • 250g sugar • 2 drops vanilla essence 	<ul style="list-style-type: none"> • 4 eggs • 15g baking powder • 125ml milk • pinch of salt

Grease and line a deep 23cm (9") round cake tin. Preheat the oven to 190°C/375°F/gas 5. Put everything into the bowl, mix at speed 1 for 30 seconds, then at speed 3 for 3 minutes, till combined. Pour the mixture into the cake tin, and bake in the centre of the oven for 50-60 minutes, till a skewer pushed into the cake comes out clean. Cool on a wire tray. Vary the basic recipe by adding 100g raisins, chopped nuts, or grated chocolate.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

