 


Powering the Unit

 
AC Power

Plug the detachable AC cord into a standard AC outlet (100-240V~ 50/60Hz)

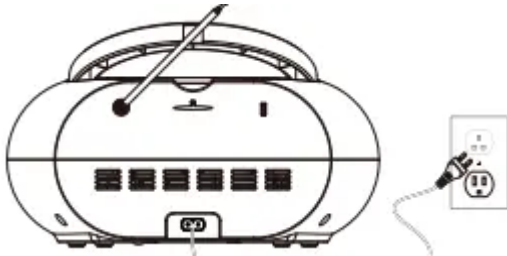

Battery Power

 
Requires 4 C batteries, not included.

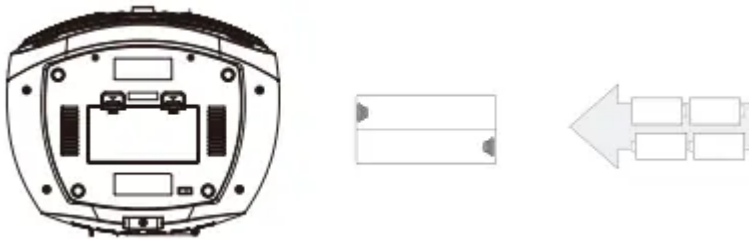

Tuning the FM Radio

Step 1: Adjust the EQ/ MODE button to FM mode.

- Extend the FM antenna to improve FM radio reception.

Step 2: Short press  to jump to the previous or next available station.

Playing a CD

Step 1: Open the CD door, and place a CD or CD-R/RW INTO THE PLAYER.

Step 2: Adjust the EQ/ MODE button to CD mode.

Step 3: Press the Play/Pause Button to begin playing the loaded CD.

Using the Auxiliary Input

Audio Source	Required Connector
MP3 Player	mini-phone 3,5mm Cable (not included)

Step 1: Connect a mini-phone 3.5mm Cable (not included) to the Auxiliary Input on the unit and the audio output on an MP3 player.

Step 2: Adjust the EQ/ MODE button to AUX IN mode.

- Audio played through the connected MP3 player will now be heard through the unit.

Connecting your Bluetooth device

Step 1: Press the EQ/MODE button on the unit repeatedly until Bluetooth (BT) mode is selected.

Step 2: Activate Bluetooth feature on your phone, tablet or other Bluetooth enabled device.

Step 3: On your phone/tablet, find the option to 'Search for nearby devices'(or similar). When "RD-N327A" is detected, select it to connect wirelessly via Bluetooth

Step 4: You can now play audio from your phone/tablet; you will hear it through the RD-N327A unit's speakers.

Note: The above procedure is for first use; for subsequent Bluetooth playback, RD-N327A should already be in your phone/tablet's Bluetooth connection history.

 
Playback from USB device

Step 1: Connect a USB memory device to the USB port.

Step 2: Press the EQ/MODE button on the unit repeatedly until USB mode is selected.

Step 3: Press the Play/ Pause button to play mp3 format files from the USB device.

Locations of Controls

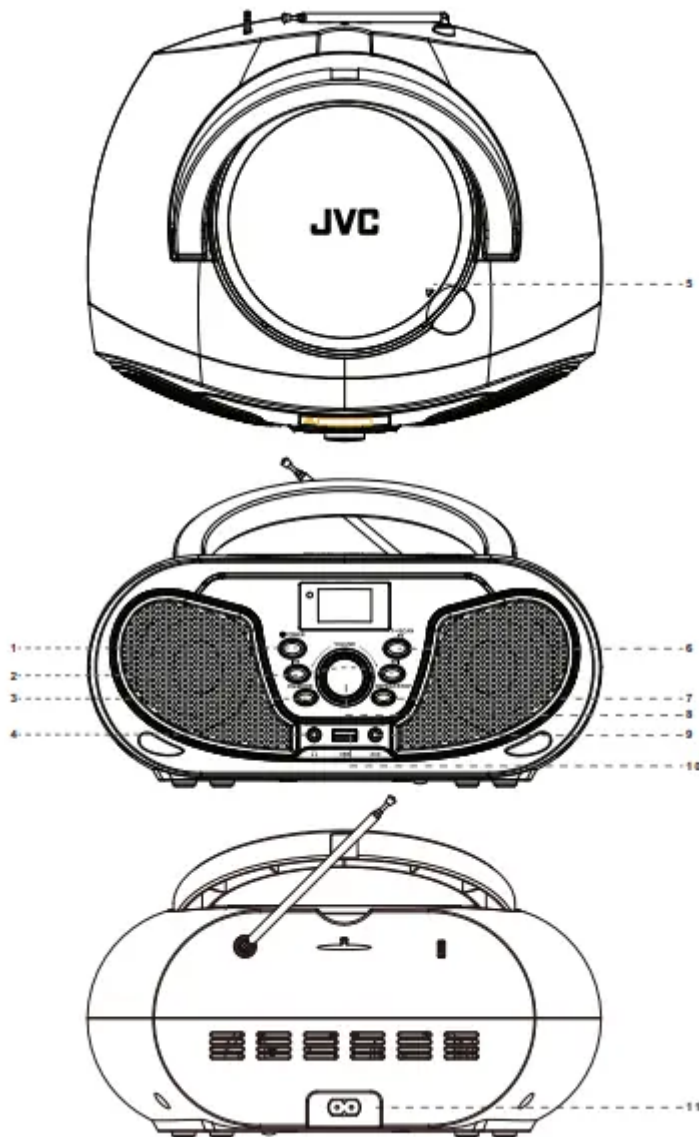

Control Definitions

1 POWER

 
Press to turn on the unit or switch to Standby mode. The default mode is FM.

2 and PREV/TUN- and NEXT/TUN+

Press  or  briefly to play the previous or next song in CD/ USB/ BT modes.

Note: Previous and Next functions do not work in AUX mode.

In FM mode, short press  to jump to the previous or next available station.

Press and hold  for semi-automatic search through lower or higher frequencies.

3 EQ/MODE

Press shortly to switch between the sound sources:Radio/CD/USB/AUX/BT.

Press and hold to switch between the EQ functions:ROCK/POP/FLAT/CLASS/JAZZ.

4 Earphone Out

Connect headphones/ earphones here.

Note: Connecting earphones will mute the sound from the unit's own speakers.

5 Open/Close

CD Compartment

6 P+ / SCAN / ►||

In CD mode, press to play or pause the CD.

In FM mode, press shortly to select a stored FM station; press and hold for automatic scanning of available frequencies.

7 REPEAT / STOP

In CD/ USB mode, press this button shortly to repeat a particular song; press and hold to stop playing.

Note: REPEAT/ STOP button doesn't work in AUX/ BT modes.

In FM mode, press this button to store a particular station into the memory.

Note: Up to 20 stations can be stored.

8 VOLUME +/-

Turn dial clockwise or anticlockwise to increase or decrease volume.

9 AUX

Use a 3.5mm auxiliary cable to connect to an external audio source. (eg. MP3 player)

10 USB

Connect a USB memory device to play audio files from it.

Note: Only mp3 format files can be played

11 AC Power Input

Connect one end of the detachable Power cord here and connect the other end to a suitable mains socket.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

