

# Getting to Know Your TV

## FRONT PANEL




### Remote Sensor and Power Indicator

When using the remote, aim it directly at this sensor.

The power indicator flashes on when the TV turns on, then goes out after several seconds.

To keep the power indicator on, see Turning the Power Indicator On or Off on page 33

## REAR PANEL

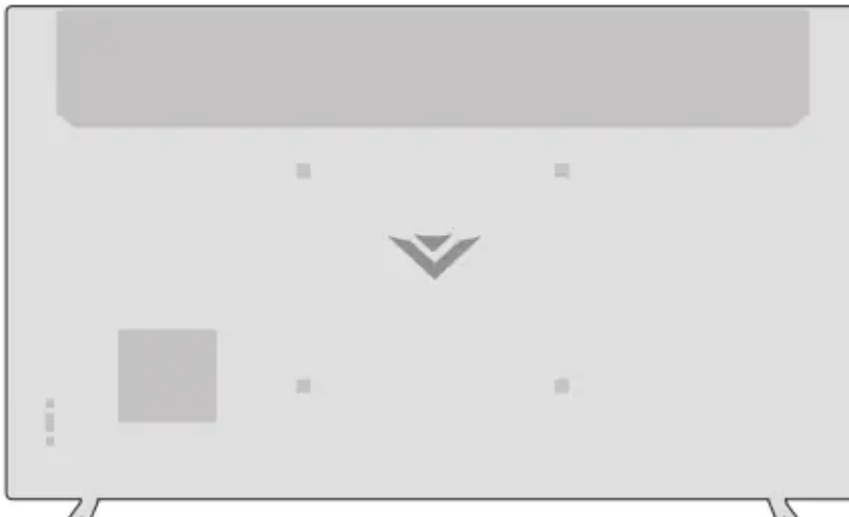

**Note:** The image shown here is for illustrative purposes only and may be subject to change. The actual number of ports and their locations may vary, depending on the model.

### Power

Press to turn on the TV.

Press and hold to turn the TV off.



### Volume

Press to increase or decrease the TV volume level



### Input

Press to access the input menu.



### HDMI

Connect an HDMI device



### Component/Composite

Connect a component or composite



### Audio Out

Connect to an RCA device, such as sound bar



### Coaxial

Connect to a coaxial cable from cable, satellite, or antenna



### USB

Connect a USB thumb drive to play photo, music, or video



### Optical Audio Out

Connect to an optical/SPDIF audio device, such as home audio receiver



### Ethernet

Connect an Ethernet cable to modem/ router

## Connecting a device — AUDIO & VIDEO CABLE TYPES

Your TV can be used to display output from most devices.

1. Verify that your device has a video port that matches an available port on the TV (HDMI, Composite, etc.).
2. Connect the appropriate cable (not included) to the TV and the device.
3. Turn the TV and your device on.
4. Set the TV's input to match the connection you used (HDMI-1, HDMI-2, etc.)


## HDMI CABLE



### COMPONENT CABLE



### COMPOSITE (AV) CABLE (Shared with Component input)

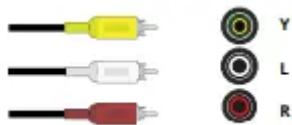

### COAXIAL CABLE



### Connecting a device — AUDIO CABLE TYPES

Your TV can be output sound to an audio device, such as a receiver or sound bar.

1. Verify that your device has an audio port that matches an available port on the TV (optical, RCA, etc).
2. Connect the appropriate cable (not included) to the TV and the device.
3. Turn the TV and your device on.

### HDMI CABLE



### COMPONENT AND/OR COMPOSITE CABLE



### OPTICAL/SPDIF CABLE



**Note:** The actual ports and their locations may vary, depending on the TV model

## WALL-MOUNTING THE TV

First you will need a wall mount. Consult the provided table below to find the appropriate mount for your TV.


Be sure the mount you choose is capable of supporting the weight of the TV.

### To install your TV on a wall:

1. Disconnect any cables connected to your TV.
2. Place the TV face-down on a clean, flat, stable surface. Be sure the surface is clear of debris that can scratch or damage the TV.
3. If attached, remove the stands by loosening and removing the screws.
4. Attach your TV and wall mount to the wall by carefully following the instructions that came with your mount. Use only with a UL-listed wall mount bracket rated for the weight/load of your TV.

Installing a TV on a wall requires lifting. To prevent injury or damage to the TV, ask someone to help you.


**WARNING:** Do not use the screws that are included inside the wall mount holes to mount TV.

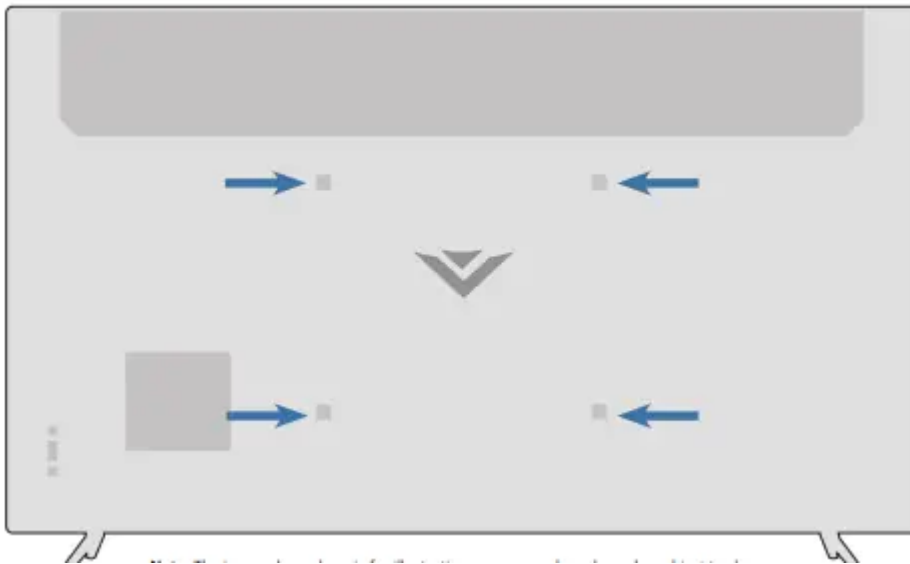

**Note:** The image shown here is for illustrative purposes only and may be subject to change. The actual number of ports and their locations may vary, depending on the model.

	P659-G1	P759-G1
<b>Screw Size:</b>	M6	M8
<b>Hole Depth:</b>	14 mm	14 mm
<b>Hole Pattern:</b>	400 mm x 400 mm	400 mm x 400 mm
<b>Weight w/o Stand:</b>	54.28 lb (24.62 kg)	74.37 lb (33.73 kg)


## USING THE REMOTE — XRT136 (BLACK)

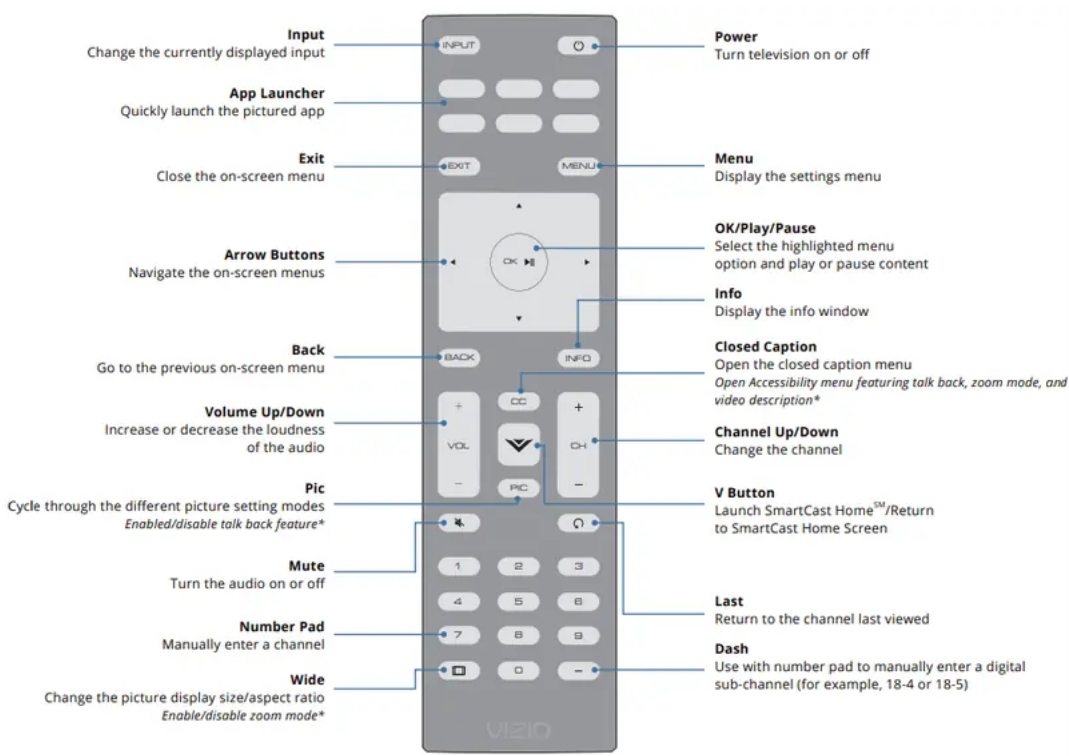

\*Enabled/disabled different accessibility features by holding down each of these buttons for 5 seconds.


## Replacing the Batteries

1. Find the notch on the back of the remote. Insert a coin and pry open the back cover.

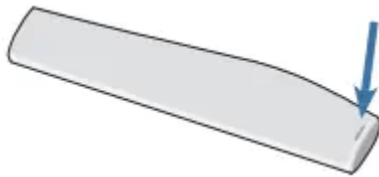

2. Insert two batteries into the remote control. Make sure that the (+) and (-) symbols on the batteries match the (+) and (-) symbols inside the battery compartment.

### 3. Replace the battery cover.

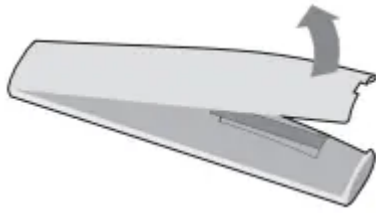


In many places batteries cannot be thrown away or discarded with household waste. Please ensure you properly dispose of your batteries consistent with the laws and/or regulations where you live. For more information please visit: [www.vizio.com/environment](http://www.vizio.com/environment)

**WARNING:** Keep the remote control batteries away from children. It may cause choking and/or lead to a fire or chemical burn if mishandled. Do not dispose of batteries in fire. Replace only with batteries of the correct type.

**TIP:** When needed, VIZIO recommends replacing the batteries that came with this remote with two, new Duracell 'AAA' alkaline batteries.




## USING THE REMOTE — XRT150 (SILVER)

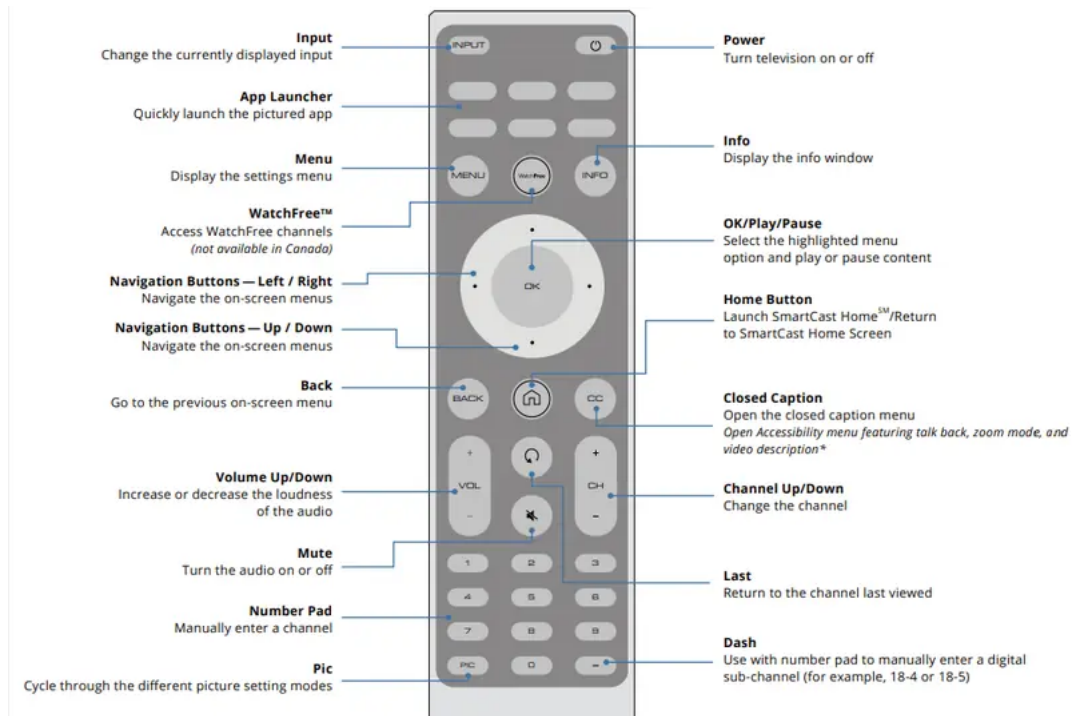

\*Enabled/disabled different accessibility features by holding down each of these buttons for 5 seconds.

## Replacing the Batteries

1. Push the bottom of the remote to open the battery compartment.
2. Insert two batteries into the remote control. Make sure that the (+) and (-) symbols on the batteries match the (+) and (-) symbols inside the battery compartment.
3. Push the bottom of the remote to close.

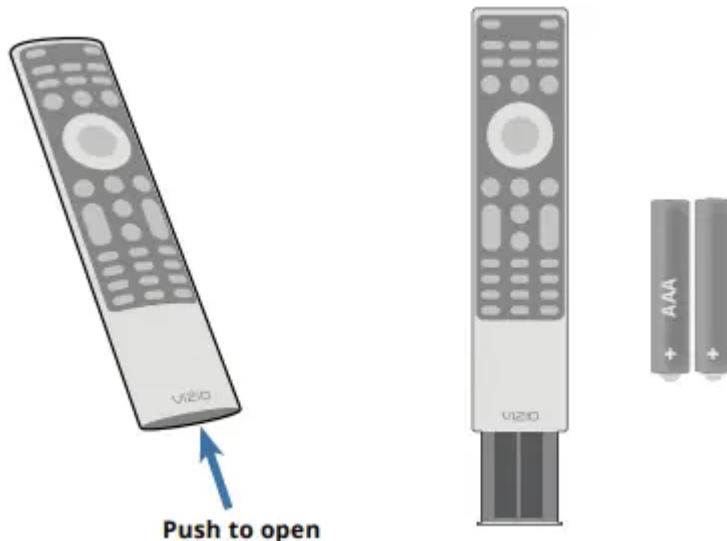

In many places batteries cannot be thrown away or discarded with household waste. Please ensure you properly dispose of your batteries consistent with the laws and/or regulations where you live. For more information please visit: [www.vizio.com/environment](http://www.vizio.com/environment)

**WARNING:** Keep the remote control batteries away from children. It may cause choking and/or lead to a fire or chemical burn if mishandled. Do not dispose of batteries in fire. Replace only with batteries of the correct type.

**TIP:** When needed, VIZIO recommends replacing the batteries that came with this remote with two, new Duracell 'AAA' alkaline batteries.



## Completing the First-Time Setup


### Before you begin the first-time setup:

- Your TV should be installed and the power cord should be connected to an electrical outlet.
- If you have a wireless network, have the network password ready.
- If you are connecting to your network with an Ethernet cable, connect it to the Ethernet port on the TV.

The first time you turn on the TV, the on-screen instructions will guide you through each of the steps necessary to get your TV ready for use:



1. Choose your language.

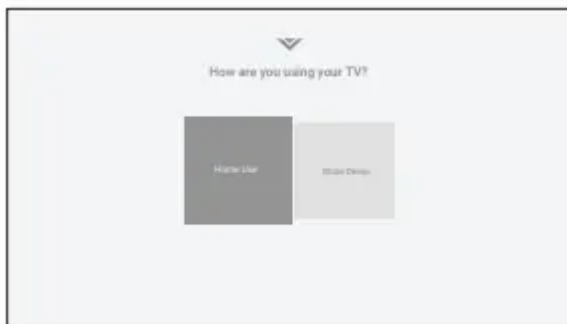


2. Choose home use



3. Choose your country.




4. Choose your WI-Fi network and enter the password.

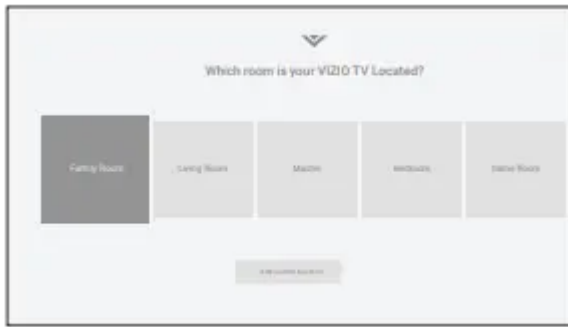

## 5. Name your TV



## 6. Scan for channels

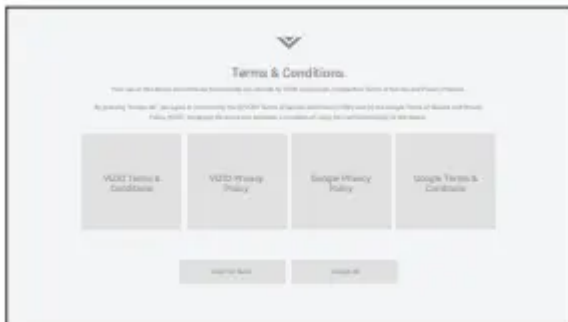

## 7. Accept the Terms & Conditions and register your device.



## Using the On-Screen Menu


 







Your TV features an easy-to-use on-screen menu.

To open the on-screen menu, press the **MENU** button on the remote.

From this menu, you can:

- Adjust the picture settings
- Adjust the audio settings
- Adjust the network settings
- Set up timers
- Adjust the channel settings
- Set up closed captioning
- Name and adjust Inputs
- Adjust TV settings
- View the user manual

### TV Settings

-  Picture
-  Audio
-  Network
-  Timers
-  Channels
-  Closed Captions
-  Input Settings
-  System
-  User Manual

### NAVIGATING THE ON-SCREEN MENU

To open the on-screen menu:

1. Press the **MENU** button on the remote.
2. Use the **Navigation** buttons to highlight a menu option, and press the **OK** button to select that option.


**TIP:** While navigating the on-screen menu, you can press the **BACK** button at any time to return to the previous menu screen.

## CHANGING THE INPUT SOURCE

External devices, such as DVD players, Blu-ray Players, and video game consoles, can be connected to your TV. To use one of these devices with your TV, you must first change the input source using the Input menu.

To change the input sources:

1. Press the **INPUT** button on the remote. The input menu is displayed.
2. Use the **Navigation** buttons or the **INPUT** button on the remote to highlight the input you wish to view. The corresponding inputs are named on the back of your TV.
3. Press **OK** or release the **INPUT** button. The selected input is displayed.

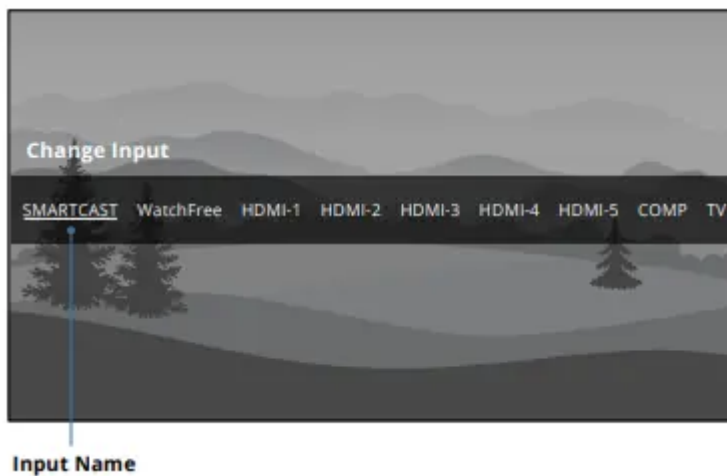

The underlined input on the left is the current input selected. Inputs may vary by TV.

**TIP:** You can change the input names that appear on the Input menu to make your devices easy to recognize. See *Renaming Devices on the Input Menu* on page 31.

## CHANGING THE SCREEN ASPECT RATIO

To change the screen aspect ratio:

### Menu > System > Aspect Ratio

Use the **Arrow** buttons to highlight the aspect ratio you wish to view.


Your TV can display images in different modes: Normal, Stretch, Wide, Zoom, and Panoramic.

- **Normal (default)**—No change to aspect ratio.
- **Stretch\***—When the 16:9 signal is a 4:3 image with black bars left and right, stretches to fill the screen.
- **Wide** – Stretches a 4:3 aspect ratio to fill 16:9 screen. If a 16:9 image, adds black bars to top and bottom
- **Zoom** – Expands image both horizontally and vertically by 14%.

- **Panoramic\***—Stretches a 4:3 image to fill 16:9 screen with an algorithm so the center doesn't look stretched.

\*Available aspect ratio settings may vary by input source. Panoramic mode is only available for standard definition TV (480i/480p) and Stretch mode is only available for high definition TV (720p/1080i/1080p).

Some programs have black bars on the top or sides of the screen so that the picture keeps its original shape. Examples include widescreen movies and older TV programs.

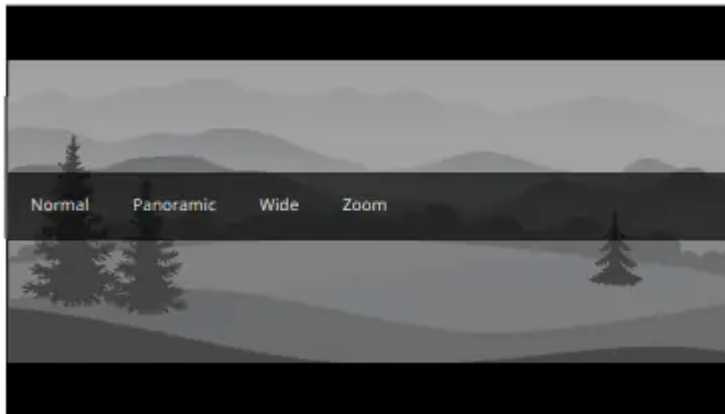

**TIP:** The aspect ratio cannot be changed for Ultra HD content or HDR content.

## ADJUSTING THE PICTURE SETTINGS

Your TV can be adjusted to suit your preferences and viewing conditions.

### To adjust the picture settings:

**Menu > Picture > Picture Mode**

**1.** Use the **Navigation** buttons on the remote to highlight **Picture Mode**, then use the **Left/Right Navigation** buttons to change the picture mode:


- **Standard**— Sets the picture settings to the default settings.
- **Calibrated**— Sets the picture settings to values ideal for watching TV in a brightly-lit room.
- **Calibrated Dark**— Sets the picture settings to values ideal for watching TV in a dark room.
- **Vivid**— Sets the picture settings to values that produce a brighter, more vivid picture.
- **Game**— Reduces throughput delays and optimizes the picture settings for displaying game console output.
- **Computer**— Optimizes the picture settings for displaying computer output.

**TIP:** If you save changes to the settings for a picture mode, an asterisk will appear after its name.

See *Saving a Custom Picture Mode on page 17*

2. To manually change each of the picture settings, use the **Up/Down Navigation** buttons on the remote to highlight that picture setting, then use the **Left/Right Navigation** buttons to adjust the setting:

- **Backlight**—Adjusts the LED brightness to affect the overall brilliance of the picture. Backlight cannot be adjusted when starting from some picture modes.
- **Brightness**—Adjusts the black level of the picture. When this setting is too low, the picture may be too dark to distinguish details. When this setting is too high, the picture may appear faded or washed out.
- **Contrast**—Adjusts the white level of the picture. When this setting is too low, the picture may appear dark. When this setting is too high, the picture may appear faded or washed out. If the setting is too high or too low, detail may be difficult to distinguish in dark or bright areas of the picture.
- **Color**—Adjusts the intensity of the picture colors.
- **Tint**—Adjusts the hue of the picture. This setting is useful in adjusting the flesh tones in the picture. If flesh appears too orange, reduce the level of color before adjusting tint.
- **Sharpness**—Adjusts the edge sharpness of picture elements. It can be used to sharpen non-HD (high definition) content; however, it will not produce detail that does not otherwise exist.

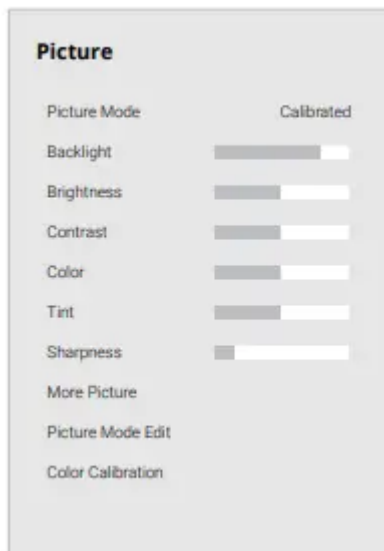

## Adjusting More Picture Settings

To adjust more picture settings:

**Menu > Picture > More Picture**

Use the **Navigation** buttons to highlight the setting you wish to adjust, then press the **Left/Right Navigation** buttons to change the setting:

- **Color Temperature** — Change the white balance of the picture. Refer to the section on *Adjusting the Color Temperature on page 17*.
- **Black Detail** — Adjusts the average brightness of the picture to compensate for large areas of brightness.
- **Active Full Array®** — Based on the content, dynamically adjusts and balances the brightness and the contrast ratio of the picture by locally adjusting backlight zones.
- **Motion Control** — Reduce the motion blur of the content with fast action.
- **Reduce Noise:**
  - **Reduce Signal Noise:** Lessens artifacts in the image caused by the digitizing of image motion content.
  - **Reduce Block Noise:** Reduces pixelation and distortion for mpeg files.
  - **Game Low Latency** — Reduces video delay (lag) when gaming.
  - **Film Mode** — Optimizes the picture for watching films.
  - **Color Space** — Select Color Space for the source. Video sources use YCbCr, but PC uses RGB.
  - **Gamma** — Set the shape of the Gamma curve. Use lower Gamma values for bright room conditions, and higher values when it's dark.

## Adjusting the Color Temperature


Adjusting the color temperature changes the white balance of the picture.

**To adjust the color temperature:**

**Menu > Picture > More Picture > Color Temperature**

Use the **Navigation** buttons on the remote to highlight a color temperature preset and then press **OK**.

- **Normal** — Optimized for television viewing.
- **Cool** — Produces a blue-hued picture.
- **Computer** — Optimizes the picture for use as a PC monitor

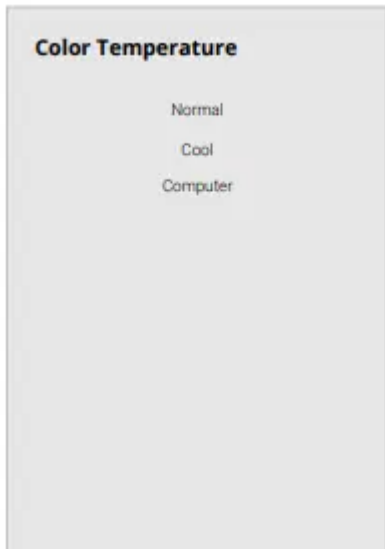

## Adjusting the Picture Mode Edit Settings


Picture Mode Edit Settings allow you to make precise adjustments to the picture.

### To adjust the Picture Mode Edit settings:

#### Menu > Picture > Picture Mode Edit

Use the **Navigation** buttons to highlight the setting you wish to adjust, then press **OK** to change the setting:

- **Save Picture Mode**— Save a custom picture mode.
- **Lock Picture Mode**— Prevent changes to custom picture modes.
- **Reset Picture Mode**— Reset the picture mode settings to factory default values. Only available on customized preset modes.

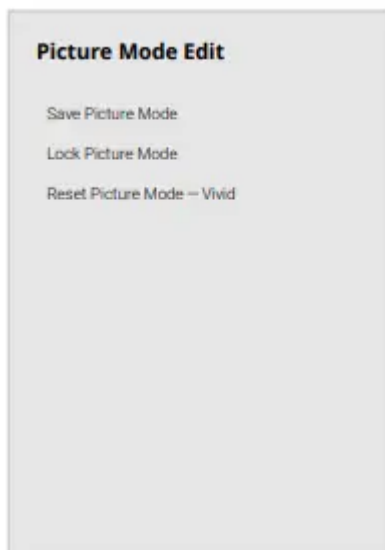

## Saving a Custom Picture Mode

Custom picture modes allow you to save a group of custom settings for various viewing conditions and video sources.

### To save a custom picture mode:

**Menu > Picture > Picture Mode Edit > Save Picture Mode > Enter a Name > Save**

- Changes made while on any preset picture mode will add an asterisk on the top right corner of the preset mode.
- The custom picture mode is not automatically saved.



## Locking/Unlocking a Custom Picture Mode


Custom picture modes can be locked/unlocked with a unique PIN to prevent accidental changes to their settings. If not previously set, you can set up your system PIN code here.

### To lock all custom picture modes:

**Menu > Picture > Picture Mode Edit > Lock Picture Mode > Enter Your PIN > Save**

### To unlock all custom picture modes:

**Menu > Picture > Picture Mode Edit > Lock Picture Mode > Off > Enter Your PIN**

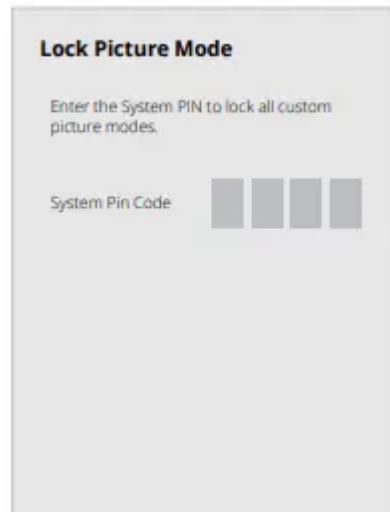

**TIP:** To set a custom PIN passcode, see **Setting a System PIN on page 34.**


### Deleting a Custom Picture Mode

*Custom picture modes that are no longer needed can be deleted.*

**TIP:** Inputs assigned to a deleted custom picture mode become assigned to the Calibrated picture mode.

**To delete a custom picture mode:**

**Menu > Picture > Picture Mode Edit > Delete Picture Mode > Delete**

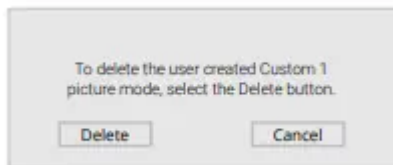


### Resetting a Picture Mode

A preset picture mode that has been edited can be restored to the factory default settings.

**To reset a customized preset picture mode:**

**Menu > Picture > Picture Mode Edit > Reset Picture Mode > Reset**

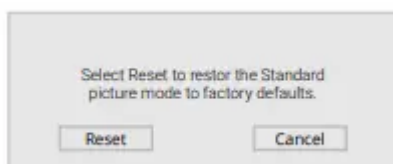

## Adjusting the Color Tuner Settings

The Color Tuner settings allow you to adjust the color management system, 2 point white balance, 11 point white balance, turn color channels off for testing, and display SMPTE, flat, ramp, and uniformity analyzer test patterns.

**WARNING:** The Color Tuner, 11 Point White Balance, and test patterns allow technicians to manually calibrate the TV. Calibration requires specialized training, an input with precisely set colors, and a specialized light meter.

**To access the color tuner table:**

**Menu > Picture > Color Calibration > Color Tuner**


**To turn color channels off and on:**

1. Use the **Navigation** buttons on the remote to highlight **Red, Green, or Blue**.
2. Press the **OK** button to turn the color channel off or on. An **X** appears over a color channel that has been turned off.
3. Only two color channels can be turned off at the same time.

**TIP:** Any changes made affect the color temperature setting. Select the preferred color temperature setting first. See **Adjusting the Color Temperature on page 17**.

**To adjust the color management system/2 point white balance settings:**


1. Use the **Navigation** buttons on the remote to highlight the Hue, Saturation, Brightness, Offset, or Gain of the color you wish to adjust. Press the **OK** button.
2. Use the **Left/Right Navigation** buttons to adjust the value. When you are finished press the **OK** button to save the setting.

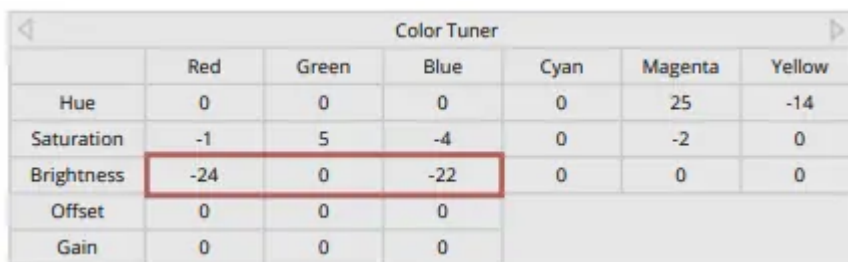

	Red	Green	Blue	Cyan	Magenta	Yellow
Hue	0	0	0	0	25	-14
Saturation	-1	5	-4	0	-2	0
Brightness	-24	0	-22	0	0	0
Offset	0	0	0			
Gain	0	0	0			

**To adjust the 11 Point White Balance settings:**


1. From the Color Tuner table, use the **Navigation** buttons to highlight the top bar and then press the **Left/Right Navigation** buttons until the 11 POINT WHITE BALANCE menu is displayed.

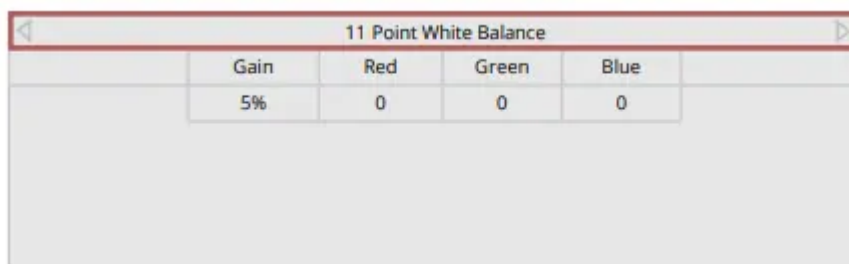

2. Use the **Navigation** buttons on the remote to highlight the **Gain** and **Color values** you wish to adjust. Press the **OK** button and use the **Left/Right Navigation** buttons to adjust the value. When you are finished, press the **OK** button to save the setting.

**To show or hide the SMPTE Test Pattern:**

**Menu > Picture > Color Calibration > Calibration Tests > SMPTE Test Pattern**

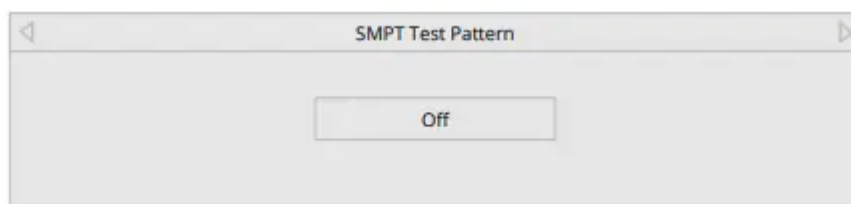


1. Use the **Navigation** buttons on the remote to highlight **Off**. Use the **Left/ Right Navigation** buttons to select **On** to show the SMPTE Pattern.

—or—

2. To hide the SMPTE Test Pattern, use the **Left/Right Navigation** buttons to select **Off**.

**To show or hide the Flat Test Pattern:**

**Menu > Picture > Color Calibration > Calibration Tests > Flat Test Pattern**

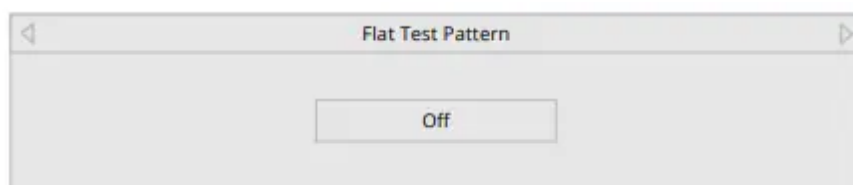


1. Use the **Navigation** buttons on the remote to highlight **Off**. Use the **Left/Right Navigation** buttons to select the percentage brightness for the flat test pattern. Selecting a percentage immediately shows the flat pattern at that brightness.

—or—

2. To disable the Flat Test Pattern, use the **Left/Right Navigation** buttons to select **Off**.

**To show or hide the Ramp Test Pattern:**

**Menu > Picture > Color Calibration > Calibration Tests > Ramp Test Pattern**

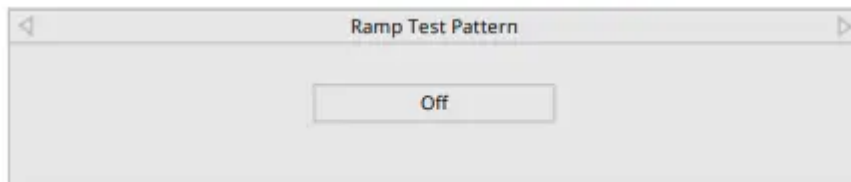


1. Use the **Navigation** buttons on the remote to highlight **Off**. Use the **Left/Right Navigation** buttons to select the color for the ramp test pattern. Selecting a color immediately shows that color ramp.

—or—

2. To hide the Ramp Test Pattern, use the **Left/Right Navigation** buttons to select **Off**

**To show or hide the Uniformity Analyzer Test Pattern:**

**Menu > Picture > Color Calibration > Calibration Tests > Uniformity Analyzer Test Pattern**

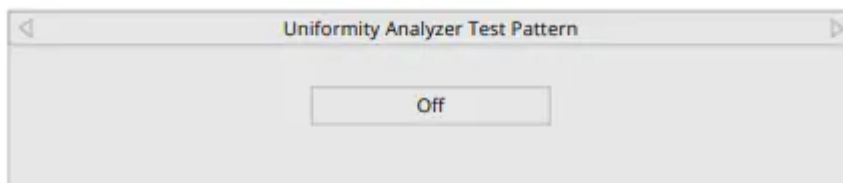

1. Use the **Navigation** buttons on the remote to highlight **Off**. Use the **Left/Right Navigation** buttons to select **On** to show the Uniformity Analyzer Test Pattern.

—or—

2. To hide the Uniformity Analyzer Test Pattern, use the **Left/Right Navigation** buttons to select **Off**.

## ADJUSTING THE AUDIO SETTINGS


**To adjust the audio settings:**

**Menu > Audio > OK**

Use the Navigation buttons to highlight the setting you wish to adjust, then press **Left/Right Navigation** buttons to change the setting:

- **Speakers** — Turn the built-in speakers On or Off.
- **Volume Control Display** — Turn the on-screen volume display slider On or Off.
- **Surround Sound** — Surround sound uses DTS TruSurround™ to deliver an immersive surround sound experience from the TV's internal speakers. TruSurround completes the entertainment experience by providing deep, rich bass, crisp details, and clear, intelligible dialog. Select On or Off.

- **Volume Leveling**—Volume leveling uses DTS TruVolume™ to maintain consistent volume levels during transitions between program content, AV formats, and input sources. Select On or Off. In a few cases, volume leveling may artificially suppress volume increases, making it difficult to hear dialog or flattening sudden noises. If this occurs, turn volume leveling off.
- **Balance**—Adjusts the loudness of the audio output from the left and right speakers.

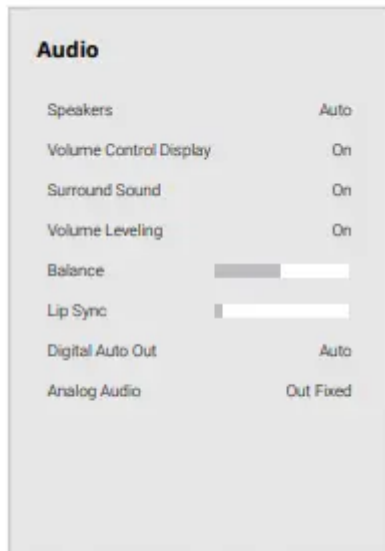

**TIP:** When the TV speakers are set to On, DTS signals cannot be passed through digital audio outputs.

- **Lip Sync**—Adjusts the synchronization between the display image and the accompanying audio track.
- **Digital Audio Out**—Changes the type of processing for digital audio out and HDMI ARC output when connected to a home theater audio system. Select Auto, PCM, Dolby D or Bitstream.

- To hear talk back when **Talk Back** function is enabled, digital audio out must be set to PCM.

- **Analog Audio Out**—Sets the volume control properties for the RCA connector when connected to a home theater audio system. Select Variable if you are controlling the volume with the TV's volume controls, or select Fixed if an external audio device (sound bar or AV receiver) will control the volume.

**TIP:** You must select **Bitstream** for audio with more than two channels (e.g., 3.0, 5.0, or 5.1).

## ADJUSTING THE NETWORK SETTINGS


Your TV is Internet-ready, featuring both an Ethernet port and built-in high-speed wireless internet.

**TIP:** If your TV is connected to a network with an Ethernet cable, you will not see the wireless network connection menu. You must unplug the Ethernet cable to set a wireless network connection.

## Connecting to a Wireless Network

To connect to a wireless network whose network name (SSID) is being broadcast:

**Menu > Network > Choose your network > Enter in the password > Connect**

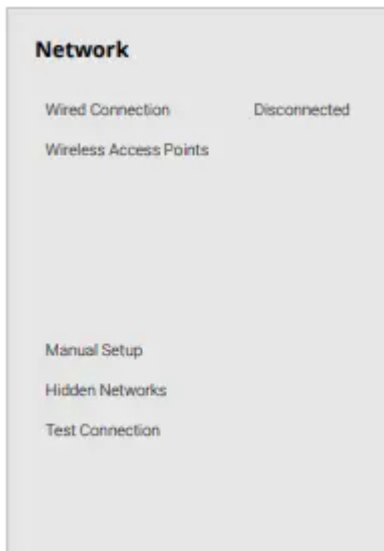

If you do not see your wireless network displayed, click on:

**More Access Points > Highlight your wireless network > Enter in the password > Connect**

**TIP:** You can display your photos in Fullscreen. Select the photo, press **OK**, then highlight **Fullscreen** and press **OK**.

## Changing the Manual Setup Settings


Advanced users can fine-tune the network settings using the Manual Setup feature. The security settings on your router may require you to enter the TV's MAC address.

To change advanced network settings:

**Menu > Network > Manual Setup > DHCP > Off**

1. Use the **Navigation** and **OK** buttons to adjust each setting:

- **IP Address** — The IP address assigned to the TV.
- **Subnet Mask** — The subnet Exit 2D.
- **Default Gateway** — Your network's default gateway address.
- **Pref. DNS Server** — Your preferred domain name server address.
- **Alt. DNS Server** — Your alternate domain name server address.

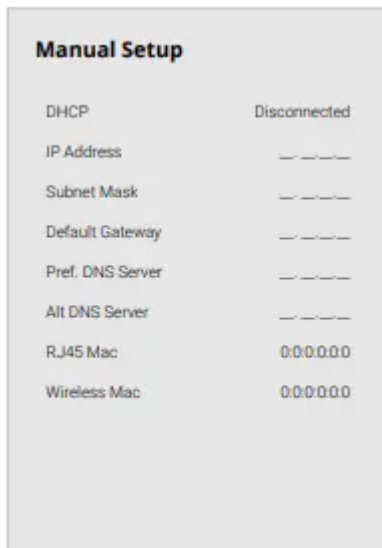

2. Use the **Navigation** buttons on the remote to highlight **Save** and press **OK**.

**To find the TV's MAC address:**

**Menu > Network > Manual Setup**

You can find your TV's MAC address at the bottom of the list. The MAC addresses for the connections in use are displayed:

- **RJ45 MAC** — The Ethernet or RJ45 MAC address may be needed to set up your network when you have connected the TV to your network when you have connected the TV to your network with an Ethernet (Cat 5) cable.
- **Wireless MAC** — The Wireless (Wi-Fi) MAC address may be needed to connect your TV to your network with Wi-Fi.

### **Connecting to a Hidden Network**

To connect to a wireless network whose network name (SSID) is not being broadcast:

**Menu > Network > Hidden Network > Enter the Access Point Name > Connect > Enter in the password**

### **Testing Your Network Connection**

To test your network connection:

**Network Menu > Test Connection**




## SETTING TIMERS

When activated, the TV's timer will turn the TV off after a set period of time.

### To setup a sleep timer:

#### Menu > Timers

Use the **Left/Right Navigation** buttons on the remote to highlight the period of time after which you want the TV to go to sleep: 30, 60, 90, 120, or 180 minutes. If you don't want the sleep timer to activate, change the setting to Off

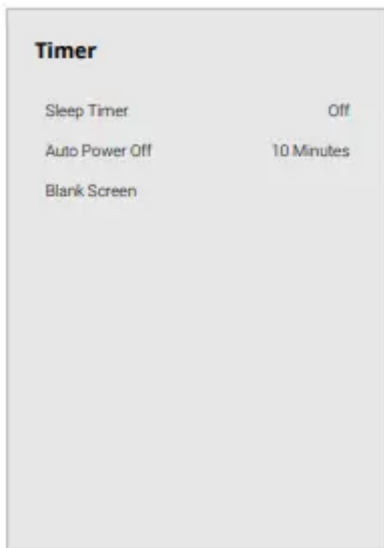

### Setting the Auto Power Off Feature

To help save energy, your TV is set by default to turn off after 10 minutes without a video or audio signal. This feature can be deactivated.

### To set the Auto Power Off feature:

**Menu > Timers > Auto Power Off > Off**

## **Using the Blank Screen Feature**

To help save LED life, your TV screen can turn on or off while audio is streaming.

**To use the Blank Screen feature:**


**Menu > Timers > Blank Screen**

To **exit** Blank Screen, press any key (except the volume and mute keys).

## **SETTING UP CHANNELS**

**You can use the TV's Channels menu to:**

- Find channels
- Select channels to skip
- Select analog audio mode
- Select the language for digital audio
- Set parental controls

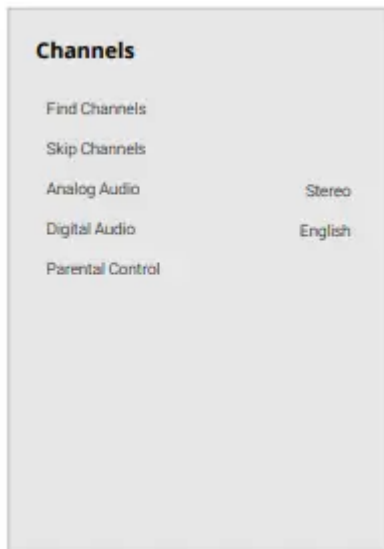

## **Scanning for Channels**


The TV may need to scan for channels before it can display programs and their associated information. A channel scan is required for free over-the-air channels (using an antenna) and cable channels from an out-of-the-wall connection (without a cable box). Moving the TV to an area with different channels requires the TV to scan for channels again.

**To perform an Auto Channel Scan:**

**Menu > Channels > Find Channels**

Wait until the channel scan is 100% complete. Highlight **Done** and press **OK**.

- If the channel scan is canceled, the channels that were already discovered are retained. A new channel scan will clear all channels.

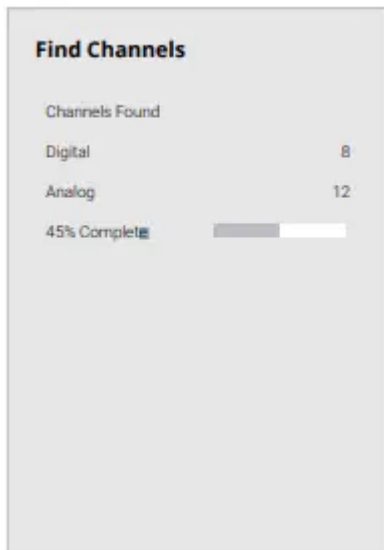

## Skipping Channels


After a channel scan is completed, you may find that some channels are too weak to watch comfortably. There may also be some channels you do not want to view. You can remove these channels from the TV's memory with the Skip Channel feature.

**WARNING:** Channels that have been removed with the Skip Channel feature can still be viewed if the channel is entered using the Number Pad. If you wish to completely block a channel from being viewed, use the parental controls.

See *Locking and Unlocking Channels on page 26*.

### To remove a channel:

1. From the CHANNELS menu, highlight **Skip Channel**, and press **OK**. The SKIP CHANNEL menu is displayed.
2. For each channel you wish to remove, use the **Up/Down Navigation** buttons on the remote to highlight the channel and press **OK**. A ✓ appears to the right of each channel you select.

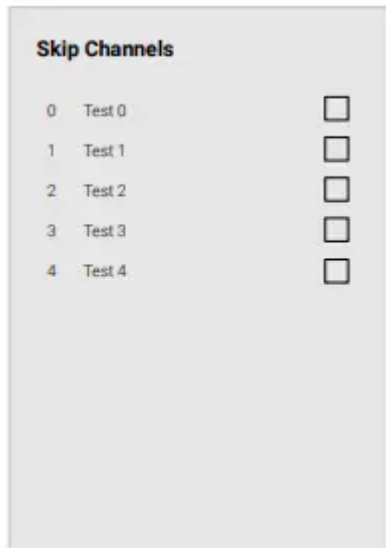

## LISTENING TO ALTERNATE AUDIO

### Changing the Analog Audio Language


Some analog over-the-air (free) and cable channels broadcast programs in more than one language. The TV's Analog Audio feature allows you to listen to audio in an alternate language using Secondary Audio Programming (SAP)

**WARNING:** Not all programs are broadcast in SAP. The Analog Audio Language feature only works when the program being viewed is being broadcast with Secondary Audio Programming.

**To use the Analog Audio feature:**

**Menu > Channels > Analog Audio**


- **Stereo** — More than one speaker channel is being used. Sounds may be dispersed through different speakers depending on how the audio is programmed.
- **SAP (Secondary Audio Program)** — Typically used for audio in a different language other than the native one used in the program.
- **Mono** — All speakers are producing the same sound; there is no distinction between left or right sounds.

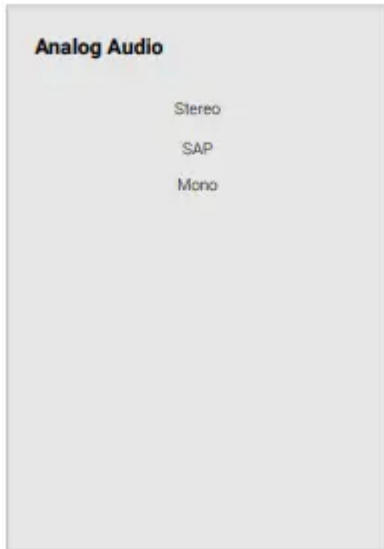

To use the Digital Language feature:

**Menu > Channels > Digital Audio**

Select the preferred audio language. Available languages or video description depend on the broadcast content.

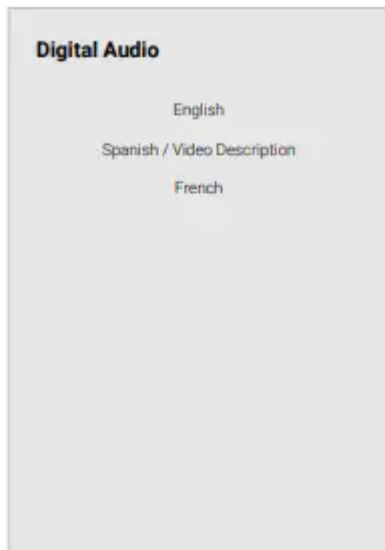

## USING PARENTAL CONTROLS

The TV's parental controls allow you to prevent the TV from displaying certain channels or programs unless a PIN is used.

### Accessing the Parental Controls Menu

To access the Parental Controls menu you must first set up a system PIN:

**Menu > Channels > Parental Controls > *Enter in PIN***

**TIP:** To set a custom PIN passcode, see *Setting a System PIN on page 34*.

The **Parental Controls** menu only appears when:

- You are using the tuner to receive your TV signals, such as when you are using an antenna for Over-the-Air signals or when connected to cable TV directly from the wall (no cable box).
- You have a device connected using a composite video cable or a coaxial cable, such as a VCR, satellite or cable box, or DVR.

**TIP:** Other devices have their own parental control settings.

## Enabling or Disabling Program Ratings

To manage program content according to its rating, you must first enable the Program Rating feature.

**To enable or disable the Program Rating feature:**

**Menu > Channels > Parental Controls > Locks > ON/OFF**



## Locking and Unlocking Channels

When a channel is locked, it cannot be accessed. Locking a channel is a good way to prevent children from viewing inappropriate material.

**To lock or unlock a channel:**

**Menu > Channels > Parental Controls > Channel Locks**

Highlight the channel you want to lock or unlock and press **OK**.

- When a channel is locked, the Lock icon appears  locked. The channel is not accessible unless the system PIN is entered.
- When a channel is unlocked, the Lock icon appears  unlocked.

## Blocking and Unblocking Content by Rating

A channel may sometimes broadcast programs that are meant for a variety of audiences (some for children and some for adults). You might not want to block the channel completely using a channel lock, but you can block certain programs from being viewed.

You can use the TV's Rating Block feature to block content based on its rating.

**To block or unblock content by its rating:**



**1.** From the Parental Controls menu, highlight the content type you want to adjust and press **OK**:

- **USA TV** — USA television program broadcasts.

- **USA Movie** — USA movie broadcasts.
- **Canadian English** — Canadian English television program broadcasts.
- **Canadian French** — Canadian French television program broadcasts

**TIP:** For a list of content ratings and their definitions, please visit: [www.tvguidelines.org](http://www.tvguidelines.org).

2. For each rating type you want to block or unblock, use the **Navigation** buttons to highlight the rating type and press **OK**.

- When the rating type is **blocked**, the Lock icon appears  locked. Content with this rating and all higher ratings cannot be viewed.
- When the rating type is **unblocked**, the Lock icon appears  unlocked. Content with this rating and all lower ratings can be viewed.
- If you want to block all unrated content, highlight **Block Unrated Shows** and use the **Navigation** buttons on the remote to select On.

## SETTING UP CLOSED CAPTIONING

Your TV can display closed captions for programs that include them. Closed captions display a transcription of a program's dialogue.

**TIP:** If the program you are viewing is not being broadcast with closed captions, the TV will not display them.

**To activate or deactivate closed captions:**

**Menu > Closed Captions > Closed Captions > Off/On**

1. Use the **Navigation** buttons on the remote to highlight either **Analog** or **Digital Closed Captions**.
2. Use the **Left/Right Navigation** buttons on the remote to select the caption channel you wish to display.



**TIP:** The Closed Captions menu does not appear when an HDMI input is selected. Closed captions are available when using the tuner or a composite video cable.

### Changing the Appearance of Digital Closed Captions

Digital closed captions can be displayed according to your preference. See the diagram on the next page for an explanation of the parts of the closed caption area.

**To change the appearance of digital closed captions:**

**Menu > Closed Captions > Digital Style**

**1.** Use the **Left/Right Navigation** buttons on the remote to select **Custom**. The Digital Style menu appears as shown.




2. Use the **Up/Down Navigation** buttons on the remote to highlight the setting you wish to change, then use the **Left/Right Navigation** buttons to change the setting:

- **Caption Style** — Choose As Broadcast to keep default settings or Custom to manually change each setting.
- **Text Style** — Change the font used for the closed captioning text.
- **Text Size** — Make the text larger or smaller.
- **Text Color** — Change the color of the text.
- **Text Opacity** — Change the transparency of the text.
- **Text Edges** — Change the effects at the edges of the text, such as raising the edges or adding drop shadows.
- **Text Edges Color** — Change the color of the text edge effects.
- **Background Color** — Change the color of the background directly behind the text.
- **Background Opacity** — Change the transparency of the background directly behind the text.
- **Window Color** — Change the color of the closed captioning box.
- **Window Opacity** — Change the opacity of the closed captioning box.

**Typical choices include:**

- **Opaque background, transparent window** — Only a strip of background appears behind the text, expanding as the text appears. This is the typical "As Broadcast" mode.
- **Opaque background and window in the same color** — When text appears, the entire line fills with color at once.

In the example, the closed caption text is green, the background is black, and the window is red.

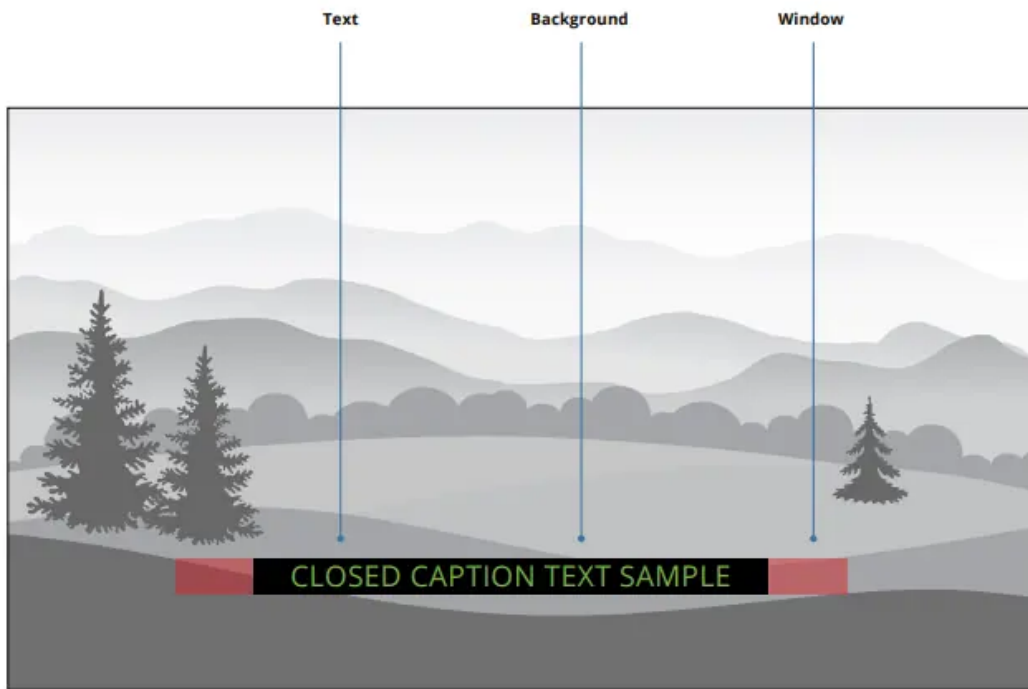

## CHANGING INPUT SETTINGS

To access input settings menu:

**Menu > Input Settings**

Highlight the input device that you want to view/change and press **OK**.

### Renaming Devices on the Input Menu

You can rename the inputs to make them easier to recognize on the Input menu. For example, if you have a DVD player connected to the component input, you can rename that input to display "DVD Player." See ***Changing the Input Source on page 14***.

To change the name of an input:

**Menu > Input Settings**

To use a preset input name:

- Highlight the **Name Input** row and press **OK**.
- Highlight the input name and use the Left/Right **Navigation** buttons on the remote to cycle through preset input names

—or—

To enter a custom name:


- Highlight the **Name Input** row and press **OK**.
- Enter your custom label using the on-screen keyboard and press **OK**.

**TIP:** You cannot rename the tuner or WatchFree input.

Other settings include the following:

- **Full UHD Color\*** — expanded color display.
- **Picture Size\*** — configure the display size to enlarge or shrink the image to fill the screen.
- **Picture Position\*** — move the vertical and horizontal position of the picture in relation to the screen.
- **Hide from Input Source** — hide inputs that are not being used. Hidden inputs will not be displayed in the input list.

\*Only available if there is an input source. Not available for WatchFree. Menu items will be grayed out if not available.

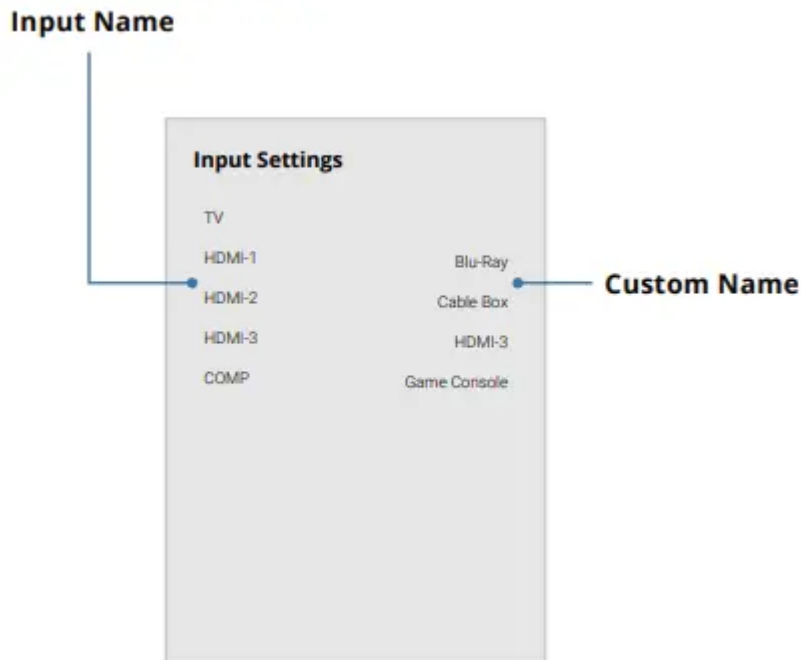


## CHANGING THE TV SETTINGS

Using the System menu, you can:

- Check for updates
- View system information
- Change the on-screen menu language
- Set time zone and local settings
- Adjust the CEC settings
- Adjust the power mode settings
- Adjust to preserve aspect ratio or fill the screen

- Name the TV
- Review and maintain the list of paired devices
- Adjust accessibility settings
- Reset the TV settings and setup administrative controls

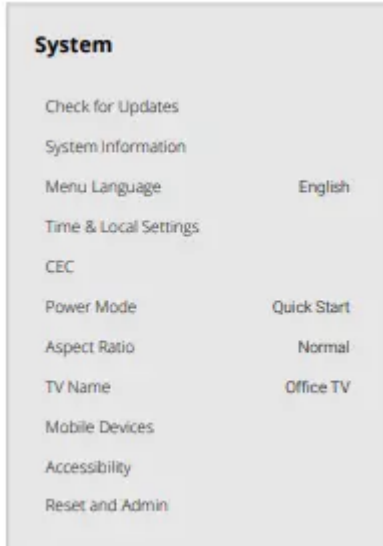

## Checking for System Updates

**To check for a system update:**

**Menu > System > Check for Updates**

If an update is found, the TV will ask to confirm the update. If no update is found, the screen will note The TV is up-to-date.

## Viewing System Information

**To view technical data and status information about your TV and network connection:**

**Menu > System > System Information**


## Changing the On-Screen Menu Language

Your TV can display the on-screen menu in different languages.

**To change the on-screen menu language:**

**Menu > System > Menu Language**

Highlight your preferred language (English, Español, or Français) and press **OK**.

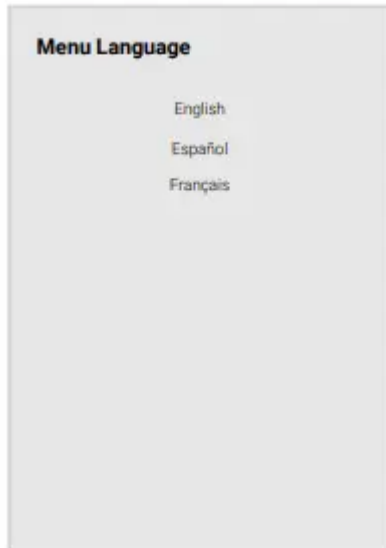

## Setting the Time and Local Settings

To ensure the correct time is displayed when you press the **INFO** button, set the TV's time zone:

**Menu > System > Time & Local > Settings > Time Zone**

### To turn Daylight Saving Time on or off:

1. Highlight Daylight Saving Time and press **OK**. The Daylight Saving Time menu is displayed.
2. Choose **On** if it is currently Daylight Savings Time, **Off** if it is Standard Time, or **Auto** to have the system automatically detect Daylight Savings Settings.

## Adjusting the CEC Settings

The CEC function on your TV enables you to control devices connected to HDMI (ARC) input with the included remote, without any programming. Using CEC, your VIZIO TV remote can control:

- Power On/Off
- Volume
- Mute

**WARNING:** Not all HDMI devices support CEC. See your device's user manual for details.

### To enable, disable, or adjust CEC settings:

Set up your audio device and connect it to the HDMI-1(HDMI Arc) input on the TV. On your audio device, select the HDMI ARC input.

**Menu > System > CEC**

Select a setting and then press **OK**.

- **CEC** — To use CEC, you must select Enable.
- **Device Discovery** — To determine if your device is connected and supports CEC, select Device Discovery and then press **OK**.

## Adjusting the Power Mode

Your TV is set to Eco Mode by default. When the TV is powered off, the Eco Mode setting uses less than 0.5W of power. Quick Start Mode enables your display to power on faster and also to turn on when powered from another device (such as when you are casting onto the TV).

**WARNING:** Please note that by changing this setting the energy consumption required to operate this device will change.

**To switch between Eco Mode and Quick Start Mode:**

**Menu > System > Power Mode**

Highlight either Eco Mode or Quick Start Mode and press **OK**.

## Changing the TV Name

Naming your TV helps differentiate it from other cast devices you may have in your home.

**To edit your TV name:**

**Menu > System > TV Name > *Enter a Name***




## Manging Mobile Devices

Your TV can be paired with a mobile device so you can easily control your TV across multiple devices.

**To see a list of paired devices or unpair a device:**

**Menu > System > Mobile Devices**

Highlight a device name to delete it and press **OK**.

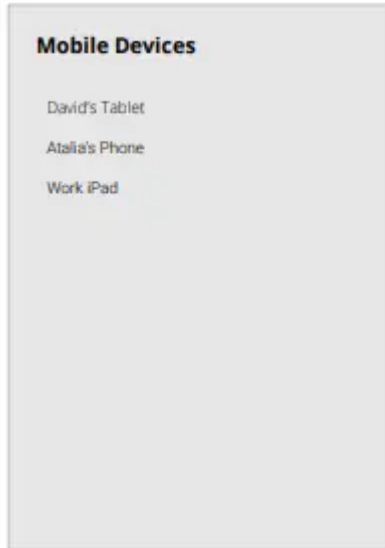

## Accessibility Settings

VIZIO is committed to providing intuitive, user-friendly products. Your new VIZIO TV offers several accessibility features that can help you with easy navigation.


**To access the Accessibility menu:**

**Menu > System > Accessibility**

1. **Talk Back** — enables your TV to speak all settings changes and adjustments using the remote in English.
2. **Speech Rate\*** — Adjusts the rate in which Text-to-Speech is spoken. Select **Slow**, **Normal (Default)**, or **Fast**.
3. **Zoom Mode** — Enlarges a section of the screen by approximately 200%.
4. **Video Description** — If included by the broadcaster, provides a narrated description of the action for the content. To access the Closed Caption menu: Menu > Closed Captions

**To access the Video Description menu:**

**Menu > Channels > Digital Audio**

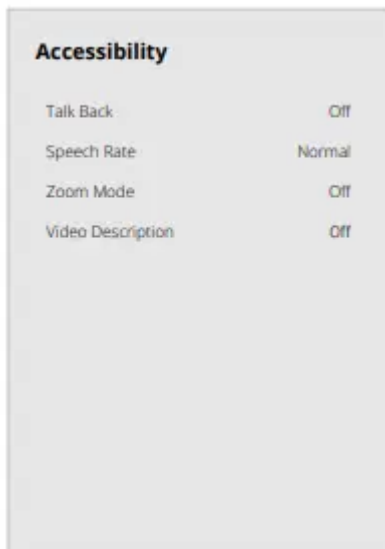

**TIP:** You can also enable/disable accessibility features using the included remote. Please see *Using the Remote — XRT150 (Galaxy Grey) on page 12.*

## USING THE RESET & ADMIN MENU

You can use the TV's Reset & Admin menu to restore the TV to its factory default settings as well as access other system settings.

### Using the RESET & ADMIN menu, you can:

- Reset the TV to factory settings
- Force the system to power off and on
- Create a system pin code to lock content and picture settings
- Turn USB power on or off.
- Enable or disable program offers and suggestions
- Enable or disable anonymous debug data for system performance.
- Start or stop the store demo mode



## Restoring the TV to Factory Default Settings

All of the on-screen menu settings can be reset to the factory defaults.

**To restore the TV to its factory default settings:**

**Menu > System > Reset & Admin > Reset to Factory Settings**

1. If you set a system PIN code, enter it now.
2. The TV displays, "Select Reset to restore all TV settings to factory defaults."
3. Highlight **Reset** and press **OK**.
4. Wait for the TV to turn off. The TV will turn back on shortly afterward and the setup process will begin.

## Performing a Soft Power Cycle

A soft power cycle forces the TV to turn off then on again.

**Menu > System > Reset & Admin > Soft Power Cycle > YES**

**WARNING:** If you restore the TV to the factory default settings, all changes you have made to the settings will be lost. This includes any wireless or picture settings.

## Turning the Power Indicator On or Off

The power indicator on the front of your TV normally does not glow when the TV is on. You can change this setting if you prefer the light to be on.

**To turn the Power Indicator Light On or Off:**


**Menu > System > Reset & Admin > Power Indicator > ON/OFF**

## Setting a System PIN

You can set a system pin to lock content and picture modes, as well as prevent accidental system resets. The first time you select System PIN code, you will need to create a PIN.

**To create a PIN.**

**Menu > System > Reset & Admin > System PIN Code > Enter Your PIN > Save**

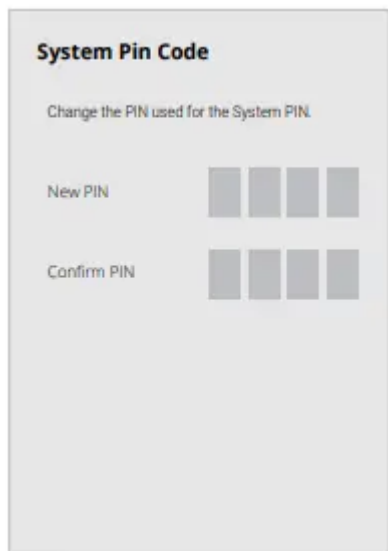

The screenshot shows a menu titled "System Pin Code" with the instruction "Change the PIN used for the System PIN." Below this, there are two rows of input fields. The first row is labeled "New PIN" and contains four empty square boxes. The second row is labeled "Confirm PIN" and also contains four empty square boxes.


**WARNING:** You will need to enter your current PIN code the next time you access this menu or if you'd like to change your PIN.

## Using the USB Power Feature

The USB port can be used to charge devices.

The two options for this feature are:

- **Always On** — Power is always available.
- **Off When TV Off** — Power is only available with the TV is on.

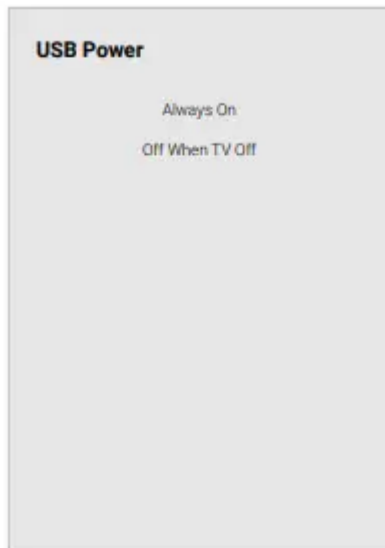

## About Viewing Data

Video ACR collects data related to publicly available content displayed on your television/display, such as the identity of your broadcast, cable, or satellite television provider, and the television programs and commercials viewed (including time, date, channel, and whether you view them live or at a later time). We also collect unique identifiers about this TV, including the IP address. This data is collectively referred to as "Viewing Data." For more information about Viewing Data and how VIZIO protects its customers' privacy, please consult our privacy policy at [www.vizio.com/privacy](http://www.vizio.com/privacy).


When ACR collection is turned on, we may share Viewing Data with authorized data partners including analytics companies, media companies and advertisers. VIZIO and its authorized data partners use Viewing Data to generate summary analysis and reports of how users engage with content on their TVs and other devices. VIZIO Viewing Data is sometimes enhanced with household demographic data and data about digital actions (e.g. digital purchases and other consumer behavior taken by devices associated with the IP Address we collect). Viewing Data also enables our authorized data partners to deliver advertising relevant to your profile that you might find useful, both on the VIZIO TV/display and other devices sharing your IP Address. Viewing Data is also used to help content publishers, broadcasters or content distribution services create or recommend more relevant entertainment based on summary insights, as well as helps us improve the design of our products, software and services.


You can easily turn this feature On or Off in the RESET & ADMIN menu. If you have trouble enabling or disabling Viewing Data, please contact VIZIO Customer Support by going to [support.vizio.com](http://support.vizio.com) and selecting **Contact Us**.

## USING THE INFO WINDOW

Press the **INFO** button one time to display:

- TV name
- Current input
- Picture mode
- Audio type
- Network name
- Time

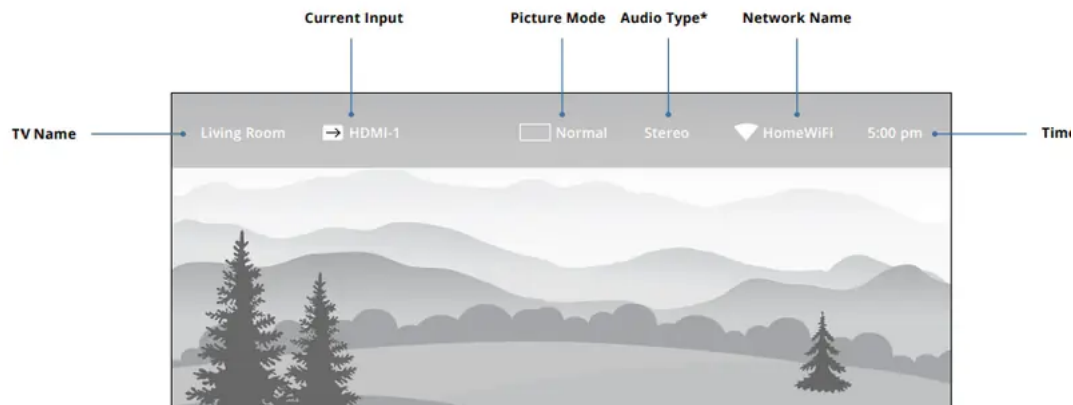

\*When TV speakers are **off** and Dolby Atmos content is passed through the TV to a sound bar or other audio device, the **Dolby Atmos icon**  will display with "Audio Out."

## SmartCast HomeSM

### What is SmartCast Home?

SmartCast Home lets you discover, stream, and control your content like never before! Access top apps, like Netflix, Hulu, and Amazon Prime Video, by using the remote to easily browse and launch content directly from the home screen. SmartCast Home makes finding something to watch easy and fun.

### How to Launch SmartCast Home

Begin streaming with SmartCast Home by:


- Press the **V-Logo** button  or the **SmartCast Home**  button on your remote.

—or—

- Select **SmartCast** from the list of inputs.

## What you can do with SmartCast Home

- Stream high quality entertainment.
- Launch top tier apps directly from the home screen.
- Unlock your photos and videos by mirroring your laptop or mobile device onto your TV.
- Rearrange apps on your home screen just the way you like it.
- Works with Google Assistant and other popular voice assistants.

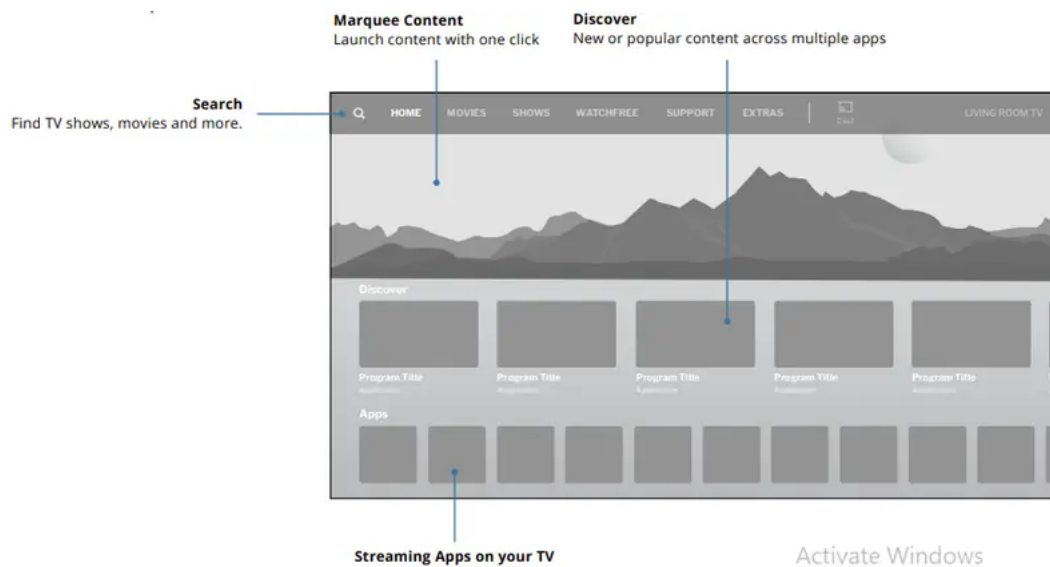

## Control your TV with the SmartCast Mobile™ App

Download the VIZIO SmartCast Mobile app and turn your smartphone into a remote to control and configure your TV.

Get it here, or visit [www.vizio.com/smartcastapp](http://www.vizio.com/smartcastapp) on your device to download:



### With SmartCast Mobile, you can:

- Power on/off devices, play/pause content, and modify advanced settings, all from the palm of your hand.
- Easily enter text onto your TV/display from your mobile device using a full keyboard.
- Browse and discover movies, TV shows, music, live streams, and more, across multiple apps at once.
- Access a quick look at show ratings, synopsis, cast, crew, clips, and other details.

# WatchFree™

## What is WatchFree?

VIZIO WatchFree takes your cord-cutting entertainment experience one step further! With the simple press of a button, enjoy free streaming TV with over 100 live TV channels to choose from – news, movies, sports, comedy, music and more. A built-in on-screen guide makes finding something to watch easier than ever.

**And it's all FREE – no fees, no subscriptions, or logins.**

**Note:** Not available in Canada.

## What you can do with WatchFree

- Stream over 100 live TV channels absolutely free – news, movies, sports, comedy, music and more.
- Navigate through channels, organized by genre, with an intuitive on-screen guide.
- Watch 1000's of free movies from major studios.
- Watch the best of internet TV.
- No logins, subscriptions or transactions fees.

### Show Details

Find out show information

### On-Screen Guide

Over 100 live TV and audio channels organized by genre



## How to Launch WatchFree

To launch and begin watching entertainment offered on WatchFree:


- Push the **WatchFree button** or the **INPUT** button on your remote.

—or—

- Simply select the **WatchFree app logo** from the SmartCast Home app row.

## Playing USB Media

The USB Media Player allows you to connect a USB flash drive to your TV and play music, video, or photos.

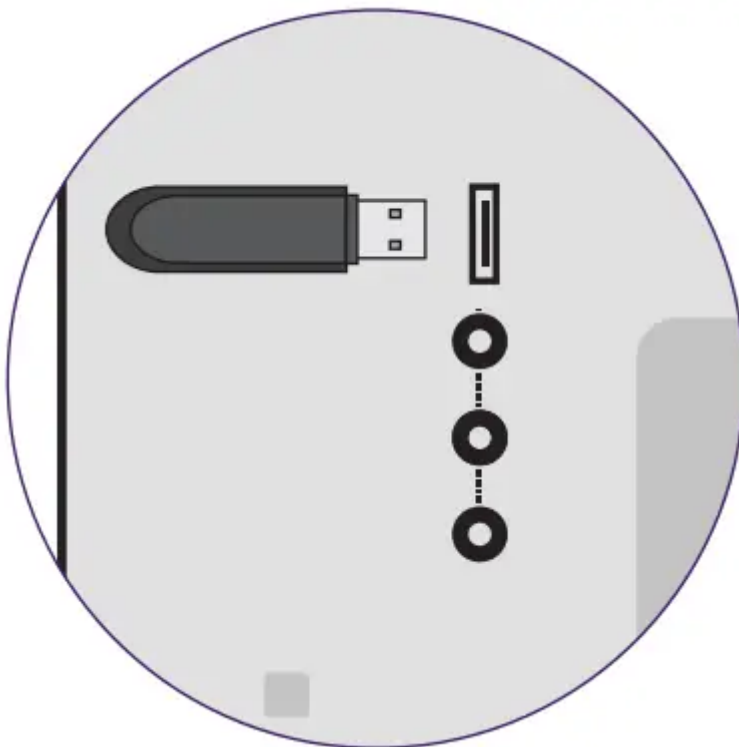

**Note:** The image shown here is for illustrative purposes only and may be subject to change. The actual number of ports and their locations may vary, depending on the model.

## Preparing Your USB Drive to Play USB Media

To display USB media, you must first save your videos onto a USB flash drive:

- The USB flash drive must be formatted as FAT32.
- Files on the USB flash drive must end in a supported file extension ( .mp3, .jpg, etc).
- The player is not designed to play media from external hard drives, MP3 players, cameras, or smartphones.

## Displaying USB Media

To display your USB media:

1. Connect your USB flash drive to the USB port on the side of the TV.
2. The TV will recognize the USB. Use the **Navigation** Keys on the remote to select the content you want to play.

—or—

3. Select **USB** from the bottom streaming icons on the SmartCast HomeSM page.

**TIP:** You can display your photos in Fullscreen. Select the photo, press **OK**, then highlight **Fullscreen** and press **OK**.

## Removing the USB Drive from the TV

To safely remove your USB flash drive from the TV:

1. Turn the TV **off**.
2. Disconnect your USB flash drive from the USB port on the side of the TV

**WARNING:** Do not remove the USB flash drive while the TV is on. Doing so may damage the drive.

## Playing USB Media: Music

**Back Button**  
Highlight this button and press **OK** to return to the previous screen.

**Now Playing Information**  
Displays song title, album title, and artist name.

**Progress Bar**  
Displays the duration of the currently playing song. The bar will lengthen as the song progresses.

**Album Art**  
If included on the USB thumb drive and associated with your music, the album art will display here.

**Connected Sources**  
Displays connected USB devices.

**Current Folder**  
My Music

**Playback Control**

**Toggle Music/Photos**  
Browse Photos


**Sort by Album/Artist/Track**  
Sort: Artist: A - Z  
View: Folders

**View All or View Folders**  
Toggle between viewing all content and only viewing folders.


**Page Information**  
If your USB thumb drive has more files than can be displayed on a single screen, the page number is displayed here.

**Folder Contents/Playlist**  
This area displays the contents of the currently selected folder. You can browse among files using the **Navigation** and **OK** buttons on the remote.

#	Track	Album	Artist	Duration
1	Starry Summer	Summer Mix	JChesny	2:42
2	Dowspin	Summer Mix	JChesny	6:20
3	Mango Dream	Beach Mix	Ana Banana	8:46
4	Crystal Waters	Beach Mix	The Dash	4:21
5	Smooth Waves	Breezy Mix	Rio Steve	7:58

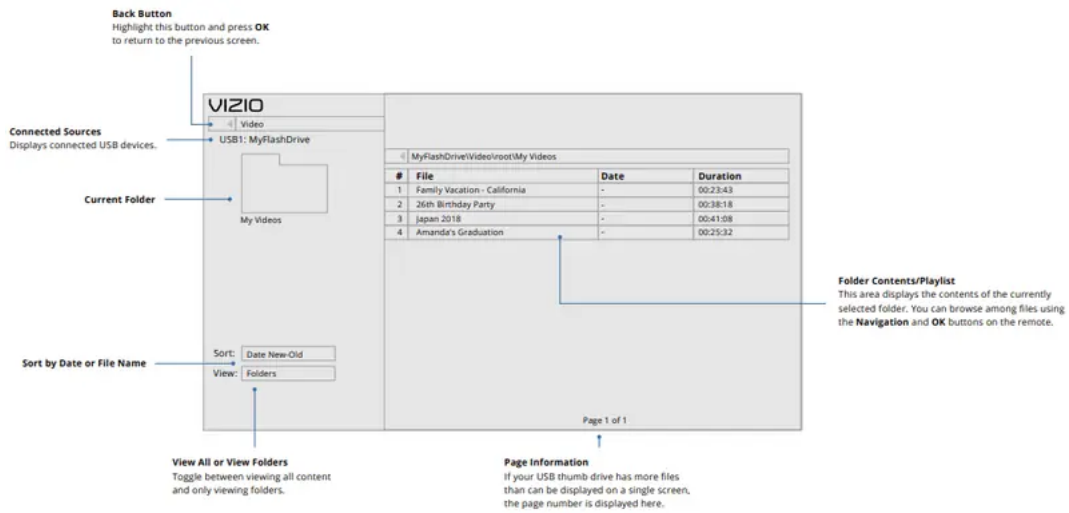

## Playing USB Media: Photo

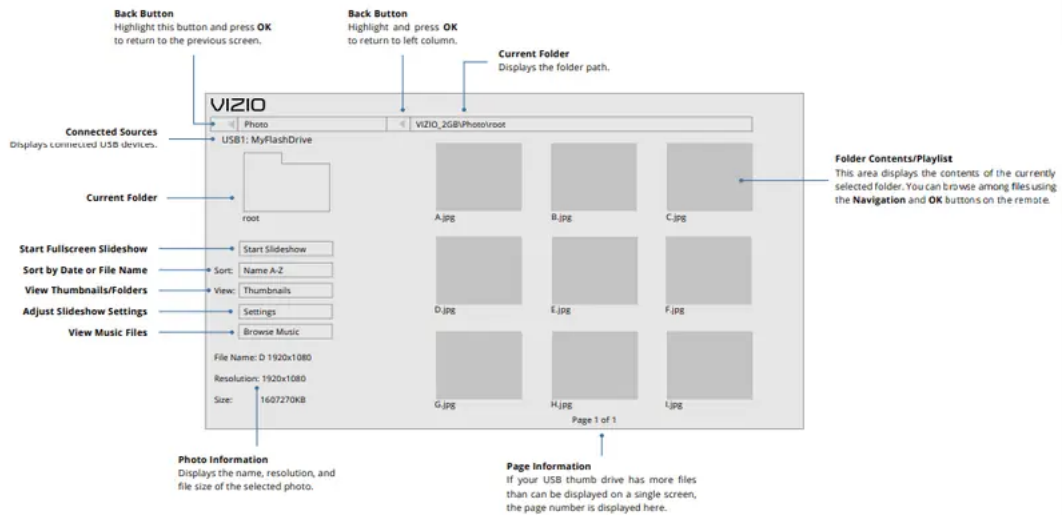

# Specifications

	P659-G1	P759-G1
<b>Size</b>	65"	75"
<b>Viewable Area</b>	64.5"	74.5"
<b>PRODUCT DIMENSIONS</b>		
<b>Dimensions w/ Stand</b>	57.01" x 35.14" x 11.81" (1448.08 x 892.52 x 300 mm)	65.77" x 40.26" x 13.39" (1670.4 x 1022.66 x 340 mm)
<b>Dimensions w/o Stand</b>	57.01" x 32.74" x 2.72" (1448.08 x 831.62 x 69 mm)	65.77" x 37.59" x 2.65" (1670.4 x 954.66 x 67.3 mm)
<b>Weight w/ Stand</b>	55.12 lb (25 kg)	75.34 lb (34.17 kg)
<b>Weight w/o Stand</b>	54.28 lb (24.62 kg)	74.37 lb (33.73 kg)
<b>Mounting Screw Size</b>	M6	M8
<b>Hole Pattern</b>	400 mm x 400 mm	400 mm x 400 mm
<b>PICTURE QUALITY</b>		
<b>Maximum Resolution</b>	3840 x 2160 (UHD)	3840 x 2160 (UHD)
<b>LCD Backlight</b>	Direct LED	Direct LED
<b>Refresh Rate</b>	240 Hz (Effective Refresh rate)	240 Hz (Effective Refresh rate)
<b>INPUTS / OUTPUTS</b>		
<b>HDMI Inputs</b>	5	5
<b>Component Video Input</b>	1	1
<b>Composite Video Input</b>	1 (shared component)	1 (shared component)
<b>Ethernet Input</b>	1	1
<b>RF Antenna Input</b>	1	1
<b>USB</b>	1	1
<b>Audio Output</b>	HDMI ARC, RCA, Digital Optical	HDMI ARC, RCA, Digital Optical
<b>OTHER</b>		
<b>Remote Control Model</b>	XRT136, XRT150	XRT136, XRT150
<b>Power Consumption</b> (at default setting)	277.2 W (USA), 240 W (Canada)	276.32 W
<b>Standby Power</b>	<0.5W	<0.5W
<b>Voltage</b>	120V	120V
<b>OSD Language</b>	English, French, Spanish	English, French, Spanish
<b>Certification</b>	UL, cUL, FCC Class B, BETS-7/ICES-003 Class B, IC, HDMI (CEC, ARC) Dolby Audio, Dolby Vision	UL, cUL, FCC Class B, BETS-7/ICES-003 Class B, IC, HDMI (CEC, ARC) Dolby Audio, Dolby Vision

## Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.