 


## What's included



**1 32-oz  
cup**

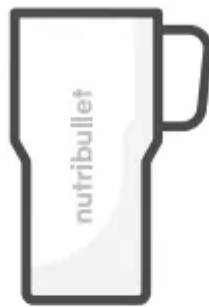

**1 24-oz  
handled cup**



**2 to-go lids**



**1 pitcher with  
integrated blade**



**1 pitcher lid  
with vented  
lid cap**



**1 easy-twist  
extractor blade**

 


**1 motor base**



**1 tamper**

## Assembly guide

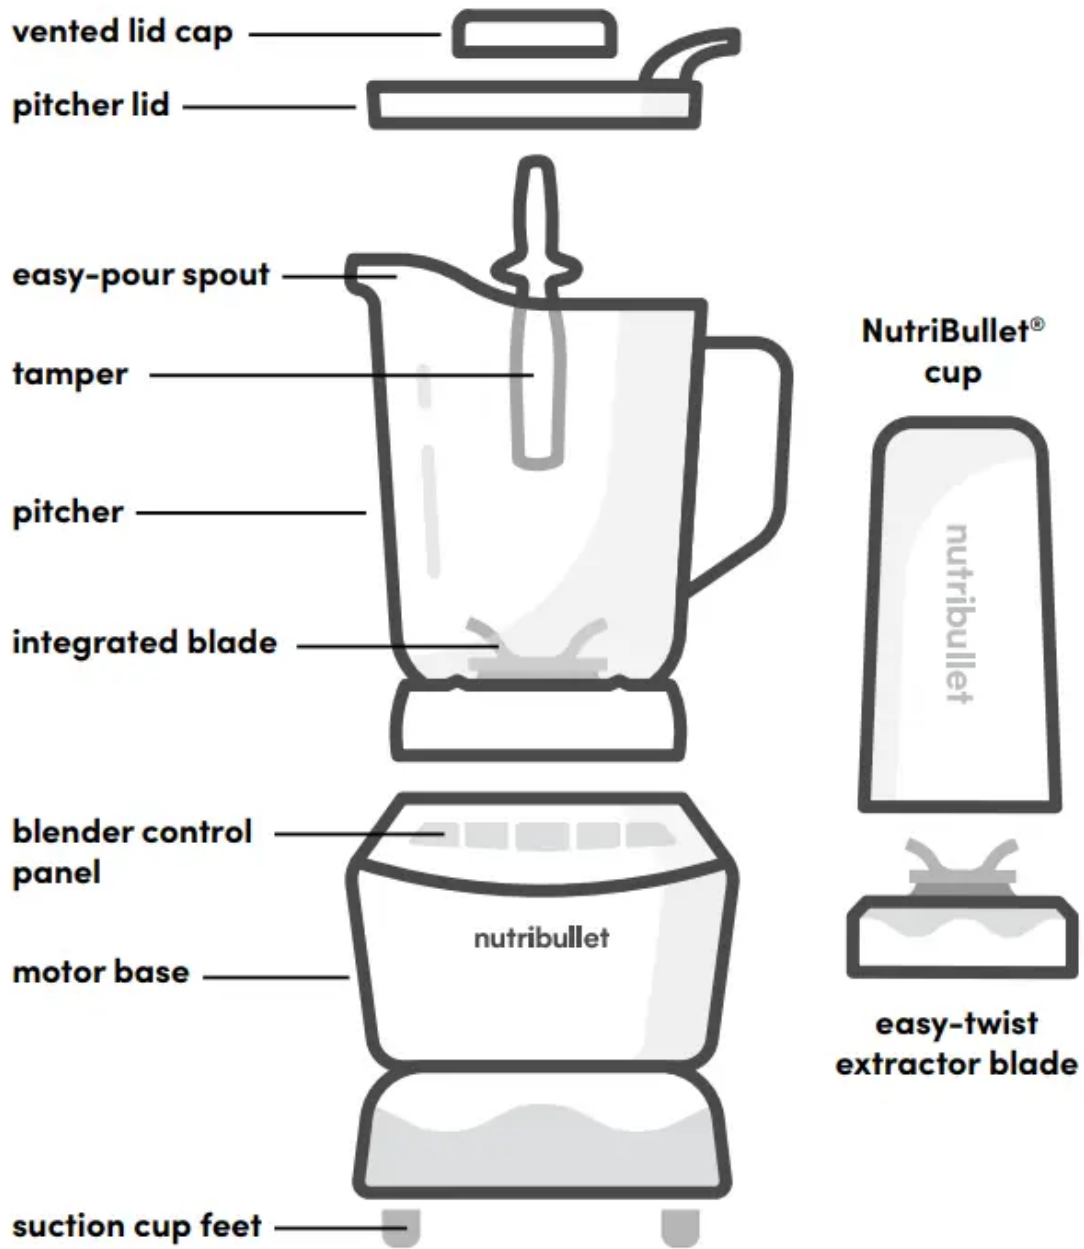

## Getting started

### Pitcher assembly & use

1. Review all warning and caution statements in the Important Safeguards section (pg 3-9) and on the previous page before proceeding to Step 2.
2. Place the motor base on a clean, dry, level surface such as a counter or table.

3. Place the pitcher onto the motor base — handle facing to the right of the blending control panel, never towards the back — and gently twist clockwise so it locks in place. When you hear the click, it's locked and ready to blend.



**NOTE:** If you are left-handed, place the handle facing towards the center of the blending control panel and twist clockwise.

4. Add the ingredients to the pitcher, making sure they do not exceed the MAX line.



**NOTE:** The blending pitcher is marked with two MAX lines: one for solid ingredients (higher line) and one for liquids (lower line). When filling the blender, make sure your ingredients do not exceed their respective MAX lines.

5. Place the pitcher lid with vented lid cap attached on the pitcher, making sure it's aligned to the handle.




6. Plug the power cord into an electrical outlet and press POWER to turn on the blender.





7. To start blending, select a speed or the EXTRACT program on the blending control panel. This program will turn off automatically. Buttons will illuminate while in use.



**NOTE:** Proceed to the blending control panel chart on page 20 for speed definitions.


8. If the ingredients stick to the side of the pitcher, stop the appliance by pressing POWER  and wait for the blade to stop turning. Then remove the pitcher lid and use the tamper to dislodge the ingredients. When finished, replace the lid and continue blending. If the ingredients continue to stick, consider adding a little more liquid.



9. When you have reached your desired consistency, pause/stop the appliance by pressing **POWER**  or the speed you selected and wait for the blades to stop turning. The unit will enter idle-mode. The **POWER**  button will remain illuminated.



**WARNING:** Blades are sharp. Never insert your hands into the pitcher.

10. Press **POWER**  to turn off the unit completely.

11. Twist pitcher counterclockwise and lift off the motor base. Pour and enjoy!



**NOTE:** If you need to add additional ingredients while blending, switch the setting to LOW and remove the vented lid cap from your pitcher lid, leaving the lid attached. Add ingredients through the hole in the top of the lid, followed by the tamper if necessary. Replace the vented lid cap, then increase to your desired speed. **DO NOT** attempt to add items through the vent hole when blending hot ingredients.



**CAUTION:** Do not use any apparatus other than the tamper to push ingredients toward the blade. The tamper is specifically designed not to come in contact with the blade. Spatulas, spoons and other tools are long enough to reach the blade, which may result in damage to the machine, damage to property, and possible injury.

### **NutriBullet® cup assembly & use**


1. Review all warning and caution statements in the Important Safeguards section (pg 3-9) before proceeding to Step 2.
- 2 Place the motor base on a clean, dry, level surface such as a counter or table.
3. Add ingredients to the NutriBullet® cup.



**NOTE:** Do not overfill! To avoid leakage, do not add ingredients beyond the MAX line.

4. Twist the easy-twist extractor blade onto the cup until tightly sealed.



5. Plug the power cord into an electrical outlet and press POWER  to turn on the blender.





6. Turn the cup upside down and place it onto the motor base, gently turning the cup clockwise to lock into the motor base.



7. To start blending, select a speed or the **EXTRACT** program on the blending control panel. This program will turn off automatically. Buttons will illuminate while in use.




**NOTE:** Proceed to the blending control panel chart on page 20 for speed definitions.

8. When you have reached your desired consistency, pause/stop the appliance by pressing POWER  or the speed you selected and wait for the blades to stop turning. The unit will enter idle-mode. The POWER  button will remain illuminated.



**NOTE:** speeds will automatically shut off after 60 seconds.

9. Press POWER  to turn off the unit completely.

10. Unlock the assembly by gently twisting the cup counterclockwise. You will hear a click.  
Enjoy!



 
**NOTE:** Blending should never take longer than one minute to yield smooth and creamy results.

**CAUTION** Do not remove the easy-twist extractor blade from the NutriBullet® cup until blending has completely ceased. Do not use the easy-twist extractor blade as a storage lid for your cup. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury. When storing contents in the cup, use plastic wrap or foil to seal your container. Always point contents away from your body when unsealing.

## Blending control panel


**WARNING! NEVER BLEND HOT LIQUIDS IN ANY SEALED NUTRIBULLET® CUP.** Doing so may cause excessive pressure buildup, resulting in risk of personal injury or property damage. Hot items should only be blended in the pitcher using proper safeguards.

### TURNING ON/OFF

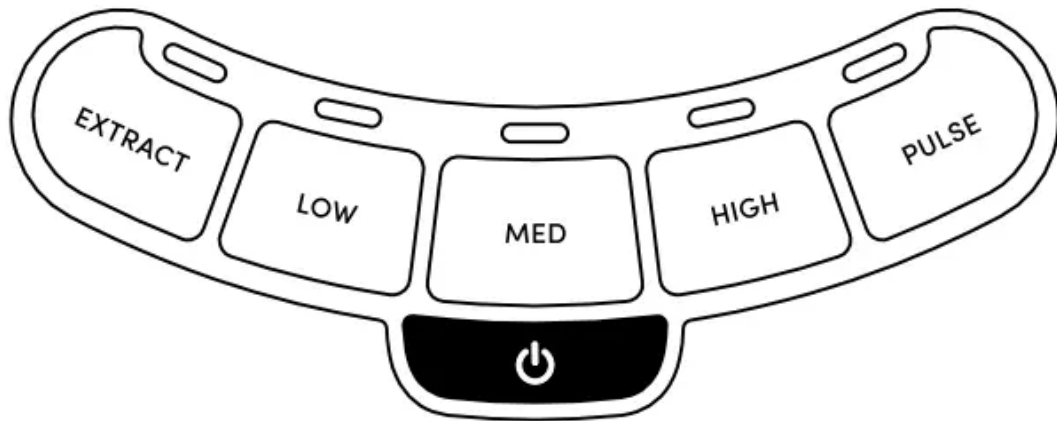


The power button actuates the master power of the appliance. When pressed, this button lights up to indicate the motor is powered on, and the other functions can be used. Always turn the master power off and unplug the unit when the machine is not in use.

#### THE EXTRACT PROGRAM

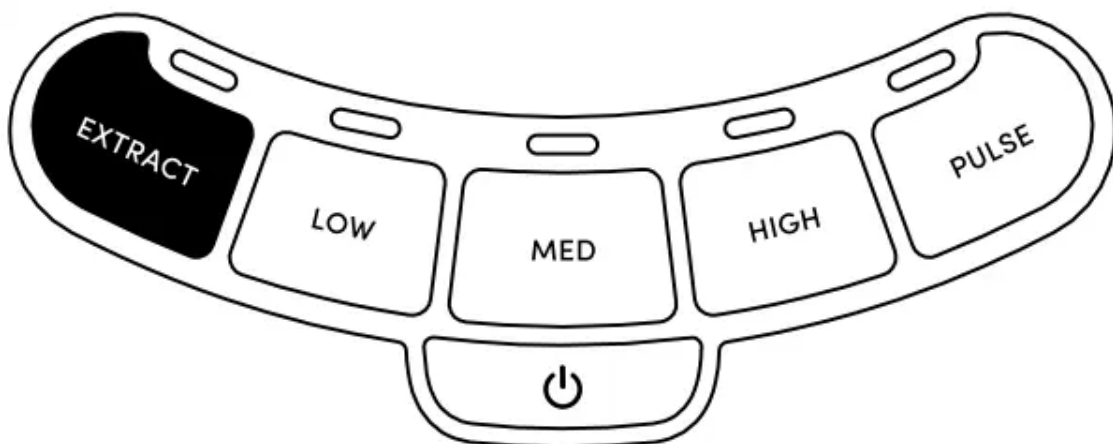 


Use to break down whole fruits, vegetables, and ice into nutrient-rich smoothies. This button will activate a run cycle that shuts off automatically.

#### LOW SPEED

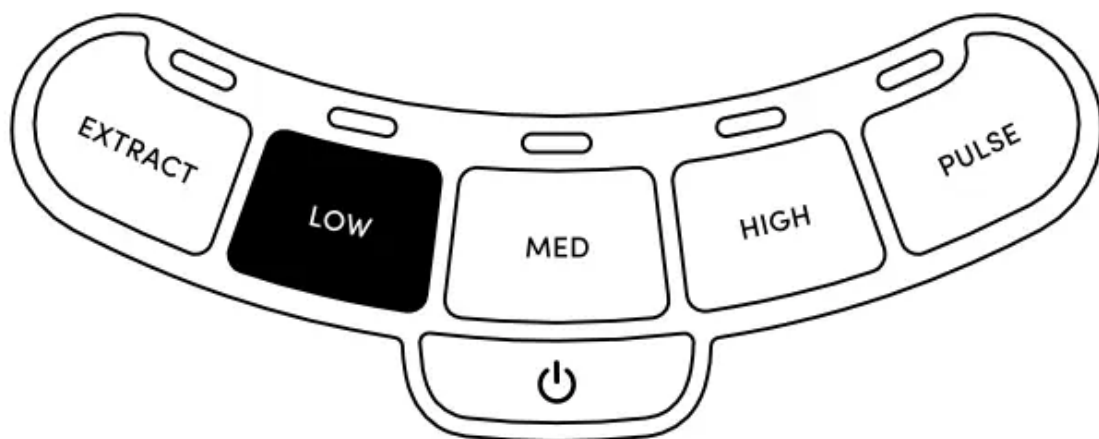 


Use to mix thin batter, gravies, marinades; scramble eggs; process cooked foods and uncooked fruits.

### **MEDIUM SPEED**

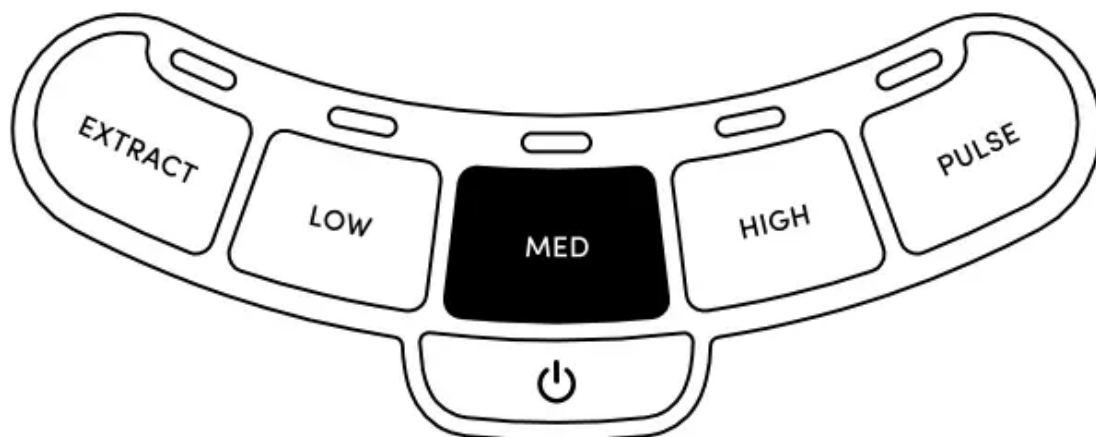 


Use to cream soups, mix dips, grind nuts, and blend sauces, spreads, mixed drinks, powdered drinks, and milkshakes.

### **HIGH SPEED**

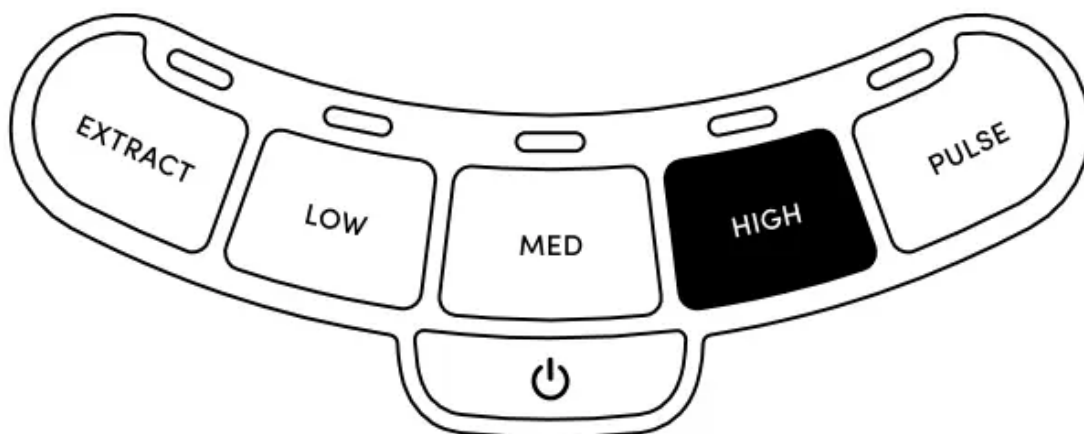 

Use to liquefy thick mixtures and blend frozen fruits and vegetables.

## PULSE

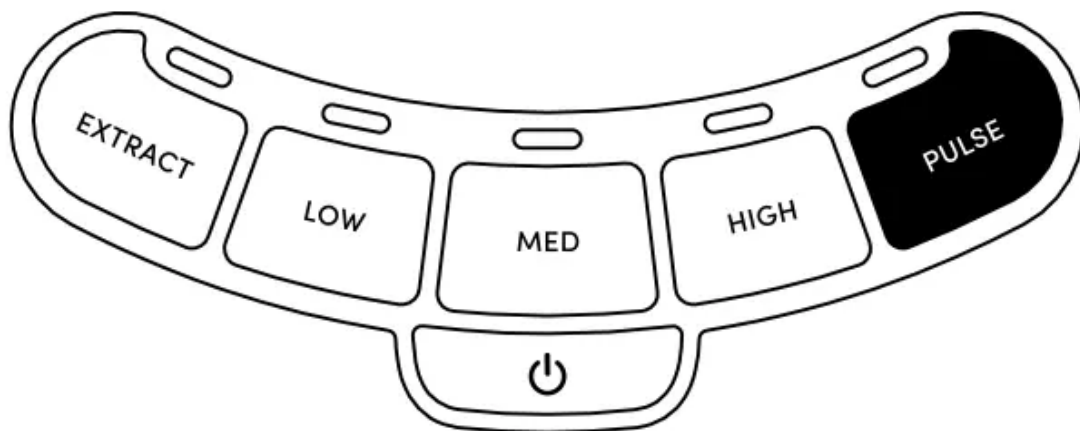 




Use to control chopping and processing.

**WARNING: DO NOT** use this setting with hot ingredients!


### How to use the blending control panel.

#### LOW, MEDIUM OR HIGH

Select a speed and press once to turn on. The button will illuminate. To pause/stop the unit, press the button a second time — it will de-illuminate — or press **POWER** . While in the idle-mode, the **POWER**  button will remain lit. To fully power down after pausing, press **POWER**  and unplug the unit.

**NOTE:** If using the pitcher, speeds will run until paused/stopped. If using the NutriBullet® cups, speeds will automatically shut off after 60 seconds.

#### THE EXTRACT PROGRAM

Press the **EXTRACT** button and the NutriBullet® Blender Combo will do the work for you. This program automatically stops at the end of its cycle. To pause or stop the blender, press **EXTRACT** again or **POWER** .

#### PULSE

Press and release the **PULSE** button to chop ingredients. If you hold this button down, it will continue to run until you release it.

## Care & maintenance

Cleaning the NutriBullet® is easy. The pitcher is dishwasher-safe while the cups and to-go lids are **TOP RACK** dishwasher-safe. The easytwist extractor blade and motor base can be quickly hand-washed with soap and water. Read on for best practices.

## How to clean the NutriBullet®

**STEP 1:** The most important thing — ALWAYS POWER OFF THE UNIT and UNPLUG the motor base from the power outlet when it is not in use. Do not attempt to handle the appliance until all parts have stopped moving! This includes during assembly and disassembly, while changing accessories during cleaning, and any time you leave the machine unattended.

**STEP 2:** Detach the NutriBullet® cup / easy-twist extractor blade or pitcher from the motor base.

**STEP 3:** Clean the individual components (motor base, easy-twist extractor blade, NutriBullet® cups) as recommended in the following pages.

### MOTOR BASE:

- To avoid risk of injury, **NEVER** attempt to clean the actuator system on the motor base while the NutriBullet® Blender Combo is plugged in.
- Do not attempt to remove any pieces from the motor base.
- Use a sponge or dish cloth dampened with warm soapy water to wipe down the motor base until clean.
- If necessary, you may use a small brush to scrub the actuator system area to ensure it's clean.
- To clean leakage residue from the motor base, wipe with a damp sponge and warm water.
- If necessary, you may use a small brush to scrub the actuator system area to ensure it's clean.

**WARNING:** Never submerge the motor base in water.

### EASY-TWIST EXTRACTOR BLADE:

- Blades are sharp! Handle the easy-twist extractor blade with care when cleaning! It is best to clean blades immediately after use to reduce buildup of residue. If food particles get stuck, use a small brush or sponge to target and dislodge them.
- **Do not remove any components of the easytwist extractor blade;** this can result in permanent damage to the blade, resulting in leakage when blending. If, over time, the easy-twist extractor blade becomes loose or damaged, you may order a new easytwist extractor blade at [nutribullet.com](http://nutribullet.com) or contact customer service.
- Dry the easy-twist extractor blade completely after every use.
- Regularly check the condition of the bottom of the blade for cracking or breakage. If damaged, replace easy-twist extractor blade immediately to prevent possible personal injury.

### NUTRIBULLET® CUPS & TO-GO LIDS:

These items are **TOP RACK** dishwasher-safe. We recommend rinsing and briefly scrubbing them with a dish brush to remove any remaining debris before placing in the dishwasher.

**NEVER** use the sanitize cycle to wash the cups — heat this high can warp the plastic.

#### **NUTRIBULLET® PITCHER:**

**WARNING:** Blades are sharp! Use caution when cleaning the pitcher.

- The pitcher is dishwasher-safe. We recommend rinsing and briefly scrubbing it with a dish brush to remove any remaining debris before placing in the dishwasher. **NEVER** use the sanitize cycle to wash the pitcher — heat this high can warp the plastic.
- If preferred, hand-wash the pitcher with soap and water. Stuck-on ingredients might require extra scrubbing from a dish brush or sponge.
- Regularly check the structure of the pitcher and twisting threads for cracking, crazing, or breakage. If damaged, replace immediately to prevent possible personal injury.
- **NEVER USE A PITCHER THAT DOES NOT PROPERLY ALIGN WITH THE BLADE.** Doing so may cause the pitcher and motor base to separate, exposing the blade assembly and potentially causing severe personal injury.

#### **TAMPER**

Always hand-wash the tamper with soap and water. Stuck-on ingredients might require extra scrubbing from a dish brush or sponge.

#### **STUBBORN CLEAN UP:**

If ingredients get stuck to the NutriBullet® cups, easy-twist extractor blades, or pitcher, here's an easy cleanup solution: fill the vessel with room temperature (21°C/70°F or less) water to its MAX line and add 1-2 drops of dish soap. For cups, twist on the easy-twist extractor blade, and blend on the motor base for 20-30 seconds. For the pitcher, attach lid and blend on the motor base for the same amount of time, 20-30 seconds. This should loosen debris enough to scrub away with soap and water.

#### **How to store**

Store the NutriBullet® Blender Combo pitcher upright with the pitcher lid secured on top. Do not place anything on top of the pitcher lid. Store remaining pieces in a safe place where they will not be damaged and won't cause harm.

**WARNING:** NEVER store the easytwist extractor blade on the motor base without a NutriBullet® cup or the pitcher as the exposed blades pose a serious laceration hazard.

#### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

---

Document generated by [ManualsFile](#)

