


PARTS

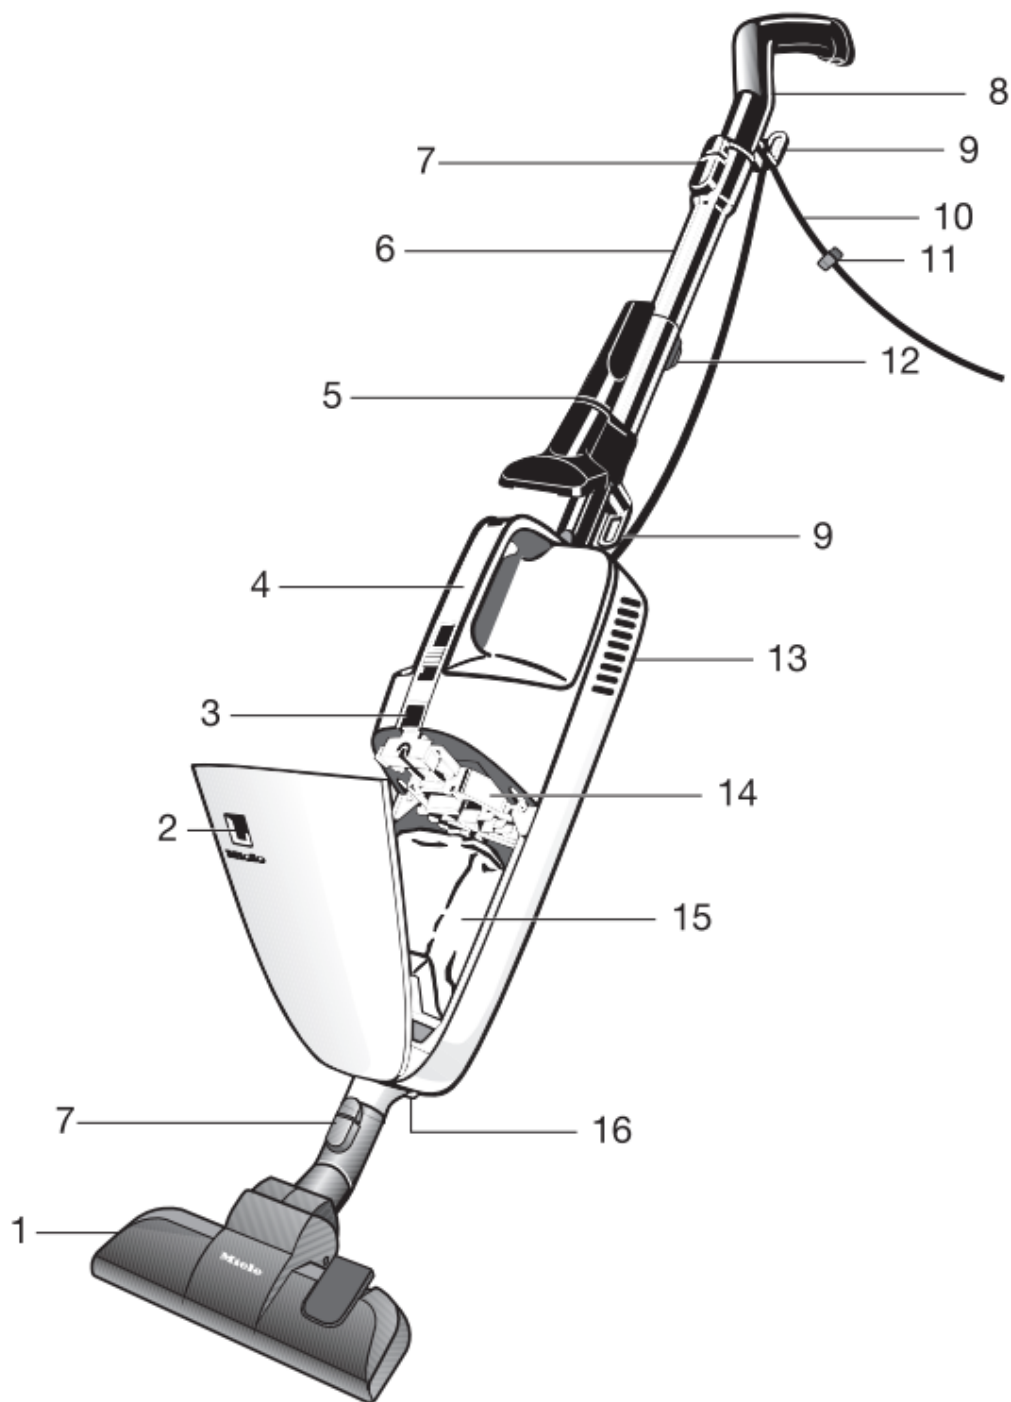

1. Rug and floor tool brush *
2. Filter bag change indicator
3. Dust compartment lid release button
4. Carrying handle with On/Off switch

5. Accessory clip *
6. Suction wand *
7. Locking buttons
8. Handpiece with anti-slip grip and hook
9. Power cord hook
10. Power cord
11. Cable clip
12. Telescopic wand adjustment button *
13. Exhaust filter compartment (on rear)
14. Dust compartment filter (motor protection)
15. Filter bag
16. Powerbrush outlet *

* Features marked with * do not come standard with all vacuum cleaners and may not be included with your model.

Some models have as standard equipment one of the following accessories that are not shown in this description of the vacuum cleaner. These vacuum cleaners come with a separate operating manual for the corresponding accessory.

- Powerbrush
- Turbobrush

The illustrations referred to in the text are shown on the fold-out pages at the end of these operating instructions.

Before using the vacuum cleaner

Connecting the suction wand see fig. 1)

- With the square hole facing the carrying handle, insert the wand into the top of the vacuum cleaner body.

Gently turn the tube until it locks in place.

Removing the suction wand

- Press and hold the release button (see arrow) while gently turning and pulling off the handle.

Connecting the handle and suction wand (see fig. 2)

- Line up the square hole and the locking button, insert the handle into the suction wand. Gently turn the handle until it locks in place.
- To detach the two parts, press and hold the release button while gently turning and pulling off the handle.

The handle can also be fitted directly to the vacuum cleaner housing (see fig. 3).

This allows for easier vacuuming of upholstered furniture, mattresses, etc.

Connecting the standard floor brush see (fig. 4)

- Insert the lower tube of the vacuum cleaner into the standard floor brush and gently turn until it locks into place.
- To remove the floor brush press and hold the release button (see arrow) while gently pulling the standard floor brush off.

You can also attach the suction wand to the nozzle of the vacuum cleaner (see fig. 5).

This makes it easier to clean under furniture that is close to the floor.

Winding up the power cord (see fig. 6)

When the vacuum cleaner is not in use the power cord can be wound around the two cord hooks.

To prevent the cord from unwinding, press the cord into the cable clip (see detail).

Using the included accessories see fig. 7)

The vacuum cleaner includes the following accessories:

1. **Accessory clip** (depending on model)
2. **Crevice nozzle** For cleaning in folds, crevices and corners.
3. **Upholstery nozzle** For cleaning upholstered furniture, mattresses, cushions, curtains, etc.

Accessory clip (see fig 8) standard on some models)

- If needed attach the accessory clip to the extension / telescopic wand.
- Push the accessory clip over the cord hook ring.

The accessory clip stores the supplied crevice nozzle and upholstery nozzle see fig. 9).

Use

Unwinding the power cord (see fig. 10)

The lower cord hook rotates.

- Turn the cord hook upwards to remove the power cord.

Adjusting the telescopic wand see fig. 11) depending on model)

One piece of the telescopic wand is stored inside the other and can be adjusted to suit your height for comfortable vacuum cleaning.

- Press the telescopic wand release button (see arrow) to release the tubes and adjust to the required height.

Plugging the vacuum cleaner in see fig. 12)

- Plug the vacuum cleaner in.
- While vacuuming, hang the cord over the hook on the handle (see insert).

The power cord will be guided so that it does not hinder vacuuming. It also prevents it kinking at the connection to the vacuum cleaner.

Turning the vacuum cleaner on and off (see fig. 13 + 14)

There are two slide switches located on the handle to turn the vacuum cleaner on and off easily whether the vacuum cleaner is used upright or horizontally.

Either of these slide switches can be used to operate the vacuum cleaner.

Double slide switch

0 = vacuum cleaner is off

min. = minimum suction

Select min. for vacuuming light weight items such as throw rugs or curtains.

max. = maximum suction

The highest setting should be used if a Turbobrush is connected to the vacuum cleaner.



- To turn the vacuum cleaner on, slide either switch to max.
- To turn the vacuum cleaner off, push the slide switch to 0 until it clicks.

Adjusting the rug and floor tool to the floor type (see fig. 15 + 16)



The rug and floor tool has been designed to give excellent cleaning results on either carpeted or smooth floors. For other floor coverings, we recommend the use of special Miele brushes (see "Optional Accessories").

It is important, however, to observe the cleaning and care instructions of the floor covering manufacturer.

Vacuum carpets and rugs with recessed bristle strip:

-  Press the foot switch marked .

Vacuum smooth floors with exposed bristle strip:

-  Press the foot switch marked .

Always vacuum floors with very deep seams or gaps with the rug and floor tool with exposed bristle strip.

Parking and storing the vacuum cleaner

There is a non-skid rubber bumper on the vacuum cleaner handle. This allows the vacuum cleaner to be leaned upright against a wall if desired (see fig. 17).

Before leaving the vacuum cleaner make sure it is turned off and leaning against a wall at a safe angle.

To protect the bristle rings on the rug and floor tool, we suggest hanging the vacuum cleaner up.

For storage you can hang up the vacuum cleaner easily. There is a hole for this located on the handle (see fig. 18).

Maintenance

Always turn off and unplug the vacuum cleaner before performing any maintenance work.

The Miele filter system consists of three components (see fig. 19).

1. Filter bag
2. Dust compartment filter
3. Exhaust filter

Each of these components must be changed periodically to maintain the vacuum cleaner's efficiency.

Only use Miele filter bags, filters and accessories with the "Original Miele" logo. Only then can the suction power of the vacuum cleaner reach its optimum potential creating the best possible cleaning results.

WARNING The use of filter bags made of paper or a similar material, or filter bags with a cardboard retaining plate can lead to serious damage to the vacuum cleaner and possibly voiding the warranty, just as with the use of filter bags without the Original Miele" logo.

Purchasing filter bags and filters

Original Miele filter bags and filters can be purchased from an authorized Miele vacuum dealer or by visiting the Miele store at <http://store.miele.com>.

Which filter bags and filters are the right ones?

Original Miele filter bags with yellow retaining plate Type K/K and Original

Miele filters, have the "Original Miele" logo on the packaging or directly on the filter bags.



An "AirClean" exhaust filter and a dust compartment filter are supplied with every box of Miele filter bags.

If you would like to purchase additional Miele filters separately, contact your vacuum dealer or Miele, please quote the model number of your Miele vacuum cleaner to ensure correct parts are ordered. These parts are also available to order from the online Miele store.

When to change the filter bag (see fig. 20)

Change the filter bag when the colored marker in the filter bag change indicator is completely red.

Miele filter bags are disposable.

Dispose of full filter bags. Do not attempt to reuse.

Blocked pores reduce the suction of the vacuum cleaner.

Checking the filter bag change indicator

- Attach the rug and floor tool to the vacuum cleaner. Other attachments can affect the function of the filter bag change indicator.

- Turn the vacuum cleaner on and select the highest power setting.
- Lift the floor brush slightly off the floor. If the marker completely fills the indicator window, the filter bag needs to be changed.

How the filter bag change indicator works

The filter bag change indicator is designed to show when the bag is full of common household dust and measures the amount of air flow through the filter bag. Normal household dust is a mixture of dust, hair, carpet fluff, threads, sand, etc.

However, if fine dust, such as drill dust, sand, plaster or flour is vacuumed, the pores of the filter bag may become blocked. The marker will indicate that the bag is "full" even when it is not. The filter bag should be changed as the suction power is greatly reduced.

If the bag is bulging with pet fur, hair, carpet fluff, etc. the indicator may not register "full". This is because the air flow of the filter bag may still be high enough not to activate the marker to show maximum. The filter bag should still be changed.

How to change the filter bag see fig. 21, 22 + 23)

- Press the dust compartment release button, raise the lid until it clicks into place.
- Grasp the collar by the two finger holes, move it away from the suction nozzle and pull it out from the filter bag holder.

The filter bag has a flap which closes automatically to prevent dust from escaping when the filter bag is removed.

- Insert the new filter bag as far as it will go into the yellow filter bag holder. Do not unfold the filter bag when taking it out of the box.
- Unfold the filter bag in the dust compartment as far as possible.
- Close the dust compartment lid until it clicks into place. Take care not to jam the filter bag in the lid.

WARNING A no-bag demobilizer blocks the dust compartment lid from closing if no filter bag is inserted or if it is not inserted all the way. Do not force it closed.

When to change the dust compartment filter (motor protection)

Whenever you open a new box of Miele filter bags, a dust compartment filter is included in every box of genuine Miele filter bags.

Replacing the dust compartment filter (see fig. 24)

- Open the compartment lid.
- Open the yellow filter cartridge, remove the old filter

- and replace it with a new one.
- Snap the filter cartridge shut and
- close the dust compartment lid firmly.

When to change the exhaust filter

Depending on the model, one of the following standard exhaust filters is installed (see fig. 25).

a AirClean

Replace this exhaust filter whenever you open a new box of Miele filter bags.

An AirClean exhaust filter is included in every box of genuine Miele filter bags.

b Active AirClean

c HEPA

Replace these exhaust filters about once a year. You can note the date on the exhaust filter.

Replacing the "AirClean" filter see fig. 26, 27 + 28)

Make sure that only one exhaust filter is installed.

- Press the release button for the exhaust filter compartment on the rear of the vacuum cleaner and remove the lid.
- Remove the used AirClean exhaust filter by the clean space (see arrow) and replace it with a new one.
- If you would like to use an Active AirClean or HEPA filter, see

Exchanging exhaust filters".

- Put the lid back on and close it.

Replacing the "Active AirClean" filter or the "HEPA" filter (see fig. 29 + 30)

Make sure that only one exhaust filter is installed.

- Press the release button for the exhaust filter compartment on the rear of the vacuum cleaner and remove the lid (see fig. 26).
- Remove the used "Active AirClean" filter or "HEPA" filter.
- Insert the new "Active AirClean" filter or "HEPA" filter.

If you would like to use an AirClean filter, see "Exchanging exhaust filters".

- Put the lid back on and close it.

Exchanging exhaust filters

Depending on the model, one of the following standard exhaust filters is installed (see fig. 25).

a AirClean

b Active AirClean (SF-AAC 10)

c HEPA (SF-H 10)

All of the above filters are interchangeable and the exhaust filter supplied with the vacuum cleaner can be exchanged with another type.

Make sure that only one exhaust filter is installed.

The exhaust filters have different features (see "Optional accessories").

When changing the filter

1. If you would like to replace filter a with filter b or c it is essential that you also remove the filter frame before inserting the new type of filter.
2. If you would like to replace exhaust filter b or c with filter a it is essential that you install a filter frame * in the lid.

* Filter frame - see "Optional accessories"

Removing or inserting the filter frame (see fig. 31)

- Grasp the sides of the filter frame at the locations shown (see arrows) and squeeze. The frame can now be inserted or removed.

When to change the thread catcher

The thread catcher pads on the bottom of the rug and floor tool should be replaced as soon as they appear worn.

Changing the thread catcher (see fig. 32 + 33)

- Use a screwdriver or similar object to remove the thread catcher pads from the slots.

Press the new thread catcher into the slots.

- Spare parts may be obtained from from any authorized Miele vacuum dealer or Miele.

Cleaning the floor roller of the floor brush AllTeQ, see fig. 34 depending on model)

1. Release the roller pin using a coin.
2. Push and take out the roller axle.
3. Take out the roller.

Remove all threads, hair etc. and reinstall the roller and lock the roller pin.

Cleaning and care

Turn off the vacuum and unplug it from the outlet before performing any maintenance work.

Vacuum cleaner and accessories

The vacuum cleaner and other plastic accessories can be cleaned with a damp cloth or a cleaner suitable for plastics.

WARNING Do not use abrasive, oil-based, glass or all purpose cleaners!

Dust compartment

The dust compartment can, if necessary, be cleaned using a dry cloth, dusting brush or a second vacuum to remove any dust.

Do not submerge the vacuum in water. If moisture gets into the appliance there is the risk of an electric shock.

Frequently asked questions

The vacuum cleaner shuts off automatically.

If the vacuum cleaner has overheated the temperature limiter will automatically turn off the vacuum cleaner.

This can occur if, for example, large articles block the suction tube or when the filter bag is full or contains particles of fine dust. A heavily soiled exhaust or dust compartment filter can also be the cause of overheating. In this case, turn off the vacuum cleaner and unplug it from the outlet.

Once the cause has been addressed, allow the vacuum cleaner to cool for approx. 20 - 30 minutes before resuming vacuuming.

Caring for the environment

Disposal of the packing material

The cardboard box and packaging protect the vacuum cleaner during shipping. These materials are recyclable. Please recycle.

Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of children.

Danger of suffocation!

Disposal of an old machine

Old vacuum cleaners may contain materials that can be recycled. Please contact your local recycling authority about the possibility of recycling these materials.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)