

# User Manual for Bosch SHE878ZD6N

## Table of Contents

- Safety Definitions
- IMPORTANT SAFETY INSTRUCTIONS
- Causes of Damage
- Getting Started
- Rinse Aid
- Loading the Dishwasher
- Detergent
- Dishwasher Cycles
- Dishwasher Cycle Options
- Operating the Dishwasher
- Care and Maintenance
- Troubleshooting
- Customer Service
- Statement of Limited Product
- Warranty

## Operating the Dishwasher

**WARNING RISK OF INJURY!** To avoid risk of injury, always use caution when opening the door during or following a wash cycle as hot water or steam may escape. Do not fully open the door until water noises have stopped and steam has subsided.

### Protection against unintentional operation

Your dishwasher is equipped with a function that helps to prevent unintentional operation (e.g. by children). After starting the dishwasher, the dishwasher door has to be closed within 4 seconds, otherwise the operation will be paused. There will be a signal on the control panel advising you to press the Start button again and close the door. This function will be activated when:

- pressing Start to begin a wash cycle
- setting Delay time and pressing Start
- opening the door while Delay time is active
- opening the door during a wash cycle. Note: This function cannot be deactivated.

### Operating the touch buttons

Buttons are sensitive and should be touched gently. Avoid any grease or food particles resting on the buttons as they could activate the dishwasher. Wiping and cleaning can also activate the dishwasher. For best results, use bare, clean hands when touching the buttons. To clean the touch buttons wipe them with a dry or slightly damp cloth.

### **AquaSensor**

The AquaSensor is an optical measuring device which measures the cleanliness of the rinse water. The AquaSensor is used according to the wash cycle. If the AquaSensor is active, "clean" rinse water can be transferred to the next rinse and water consumption can be reduced by 0.8–1.5 gal (3–6 liters). If the rinse water is not yet clear, the water is drained and is replaced with fresh water. In the automatic wash cycles the temperature and running time can also be adjusted to the degree of soiling.

### **Switching the appliance on**

1. Turn the water supply on fully.
2. Press the On/Off button (. The AUTO wash cycle has been preset as a default whenever the appliance starts. This wash cycle remains selected if no other wash cycle button 0 is pressed. Select any desired option.
3. Press Start button P. Wash cycle sequence starts.

**Note:** Your dishwasher is protected against unintentional operation. If the appliance door remains open for more than 4 seconds after pressing the Start button, the operation will be paused. Close the appliance door and press the Start button P again.

### **Time display**

When a wash cycle is selected the remaining wash cycle time is shown on the display 8. The wash cycle time is determined during the wash cycle by the water temperature, the amount of dishes, as well as the degree of soiling and may vary (depending on the selected wash cycle).

### **Delay start**

You can delay the start of the cycle in one hour increments up to 24 hours

#### To set Delay start:

1. Press On/Off button (. Select a cycle.
2. Press Delay button @ until the displayed time corresponds with your requirements.
3. Press Start button P to activate Delay start.

#### To cancel Delay start:

1. Press Delay button @ until æ:« is indicated on the digital display 8.
2. Press Start button P to save setting.

**Note:** Your dishwasher is protected against unintentional operation. If the appliance door remains open for more than 4 seconds after pressing the Start button, the operation will be paused. Close the appliance door and press the Start button P again.

### **Wash cycle end**

The wash cycle has ended when the display 8 reads.

### **Auto power off**

This setting determines the length of time the control panel stays illuminated after the cycle is complete. To save energy the recommended setting is.

To change the setting:

1. Press the On/Off button.
2. Hold down the function key and press the Start button until the display 8 indicates (x can be any number).
3. Release both buttons.
4. Press the function key until the display 8 indicates.
5. Press the function key 3 until the display corresponds with your requirements.
6. Press the Start button.

### **Switching off the appliance**

Short time after the end of the wash cycle:

1. Press On/Off button.
2. Remove the dishes when they have cooled down.

**WARNING RISK OF INJURY!** To avoid risk of injury, always use caution when opening the door during or following a wash cycle as hot water or steam may escape. Do not fully open the door until water noises have stopped and steam has subsided.

### **Interrupting the wash cycle**

**CAUTION Expansion** (overpressure) may cause the appliance door to open and/or water to escape! If the door was opened on an appliance which has a hot water connection or is heated, always leave the door ajar for several minutes and then close.

1. Press On/Off button (. The LED's go out. The wash cycle is saved.
2. To continue the wash cycle, close the door and press On/Off button ( again.

**Note:** Your dishwasher is protected against unintentional operation. If the appliance door remains open for more than 4 seconds after pressing the Start button, the operation will be paused. Close the appliance door and press the Start button P again.

### **Terminating the wash cycle (Reset)**

1. Press and hold Start button P for approximately 3 seconds until the display reads
2. Wait about 1 minute while the dishwasher drains.
3. Press On/Off button (. You may now power the dishwasher back on and begin a new cycle if desired.

### **Changing the wash cycle**

When the Start button ( has been pressed, the wash cycle cannot be changed. The only way a wash cycle can be changed is by terminating the wash cycle (Reset).

### **Child Lock (panel lock)**

The child lock will lock the panel while the dishwasher is in operation to prevent that a wash cycle is interrupted unintentionally (e.g. by children).

#### To set the panel lock:

1. Start the desired wash cycle.
2. Hold down the button that says 'Child Lock' underneath it for approximately 3 seconds until the display reads '–. The panel lock is active. '

– will be indicated now if any button is pressed and the program will not be reset.

To deactivate the panel lock hold down the button that says 'Child Lock' underneath it for approximately 3 seconds until the display no longer reads '–.

The panel lock is deactivated automatically when the wash cycle is completed. In case of a power outage the panel lock will remain active. The panel lock has to be activated with each new wash cycle.

### **Intensive drying**

The final rinse uses a higher temperature which improves the drying result. The cycle time and energy usage may be increased. (Caution if utensils are delicate!)

This feature has two settings:

1. Press the On/Off button.
2. Hold down function key and press Start button until the display 8 indicates(x can be any number).
3. Release both buttons.
4. Press function key until the display 8 indicates the factory set value
5. Press function key 3 to switch the intensive drying feature on or off .
6. Press Start button P to save setting

**Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

---

Document generated by [ManualsFile](#)

