



The main points in brief

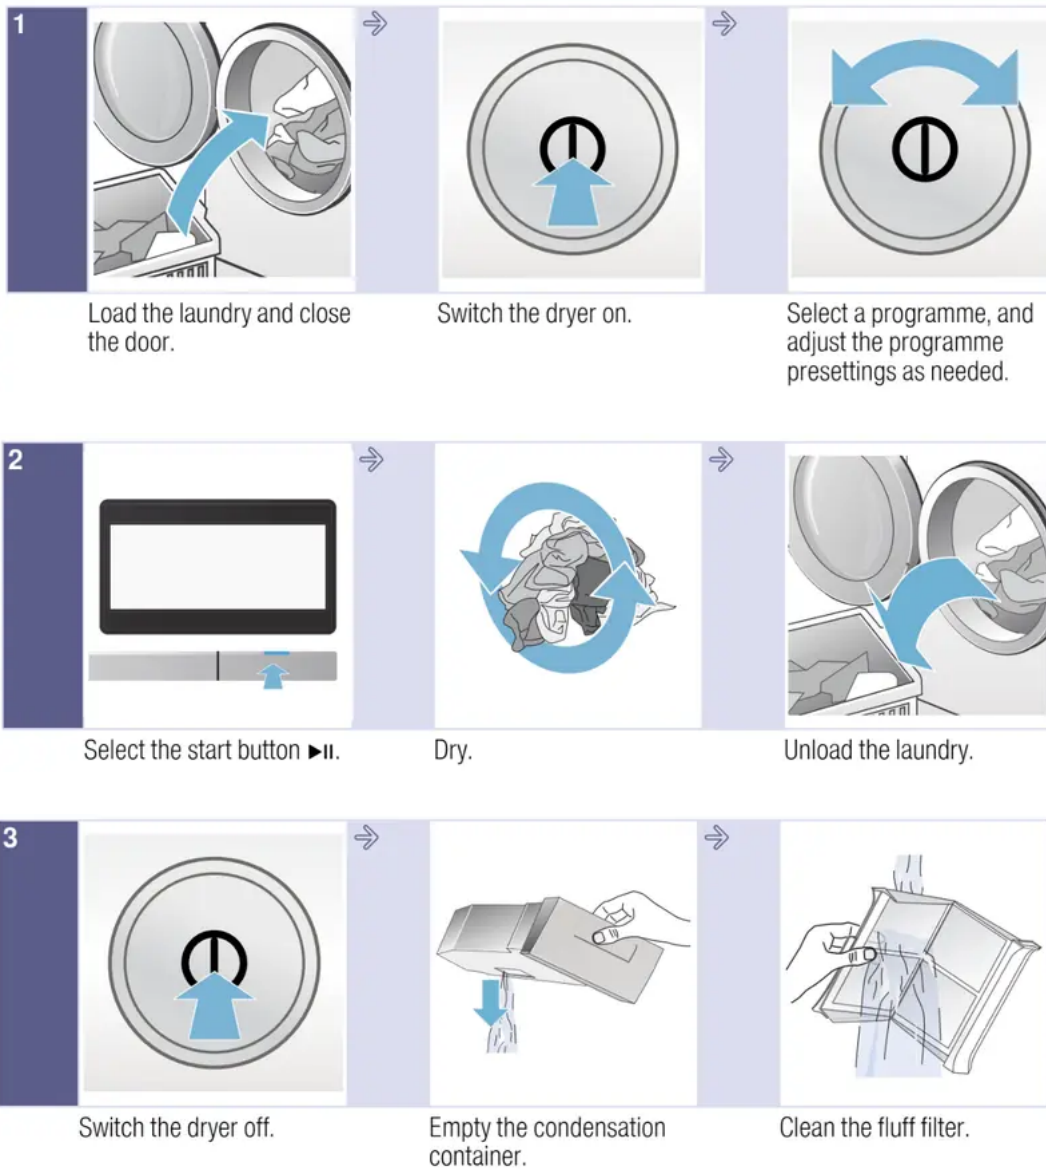


Getting to know your appliance

Dryer

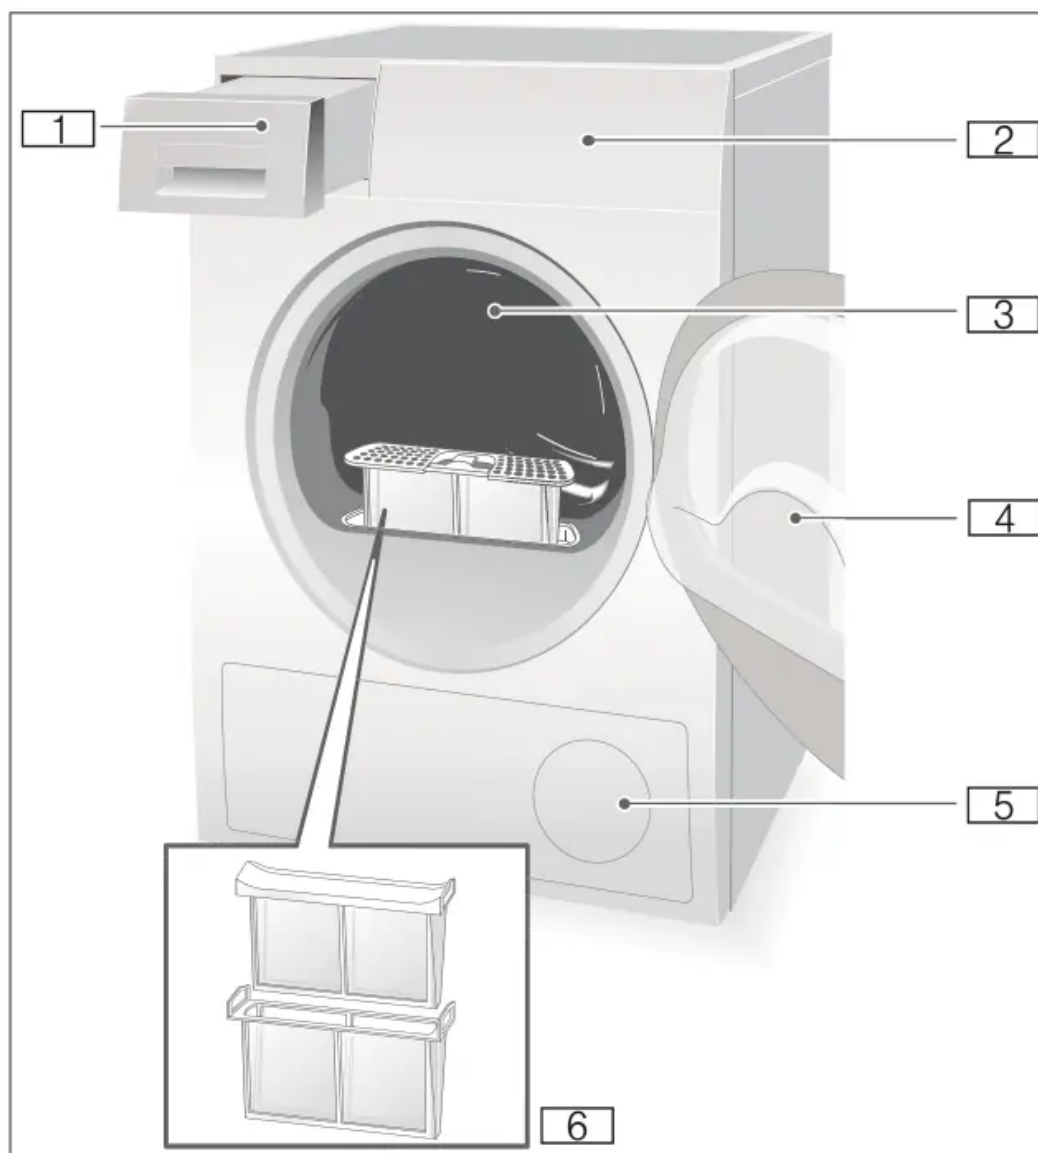


1. Condensate container
2. Control and display panel
3. Drum interior light (depending on the model)
4. Dryer door
5. Air inlet
6. Fluff filter

Control panel

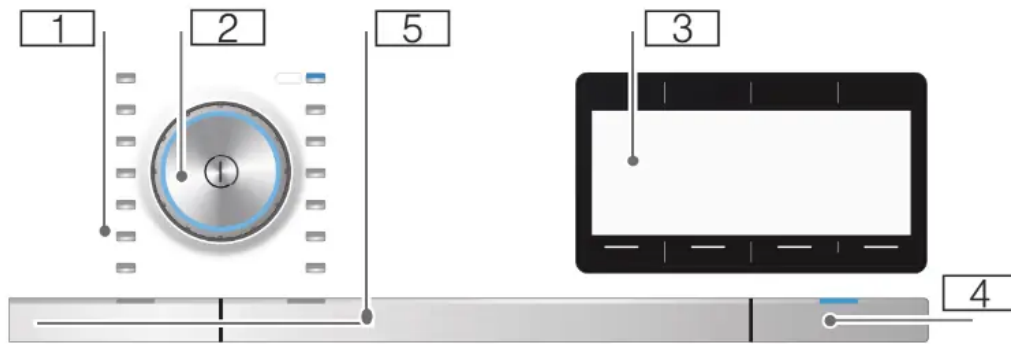
 
 
 
 



1. **Programmes** → Page 26.
2. **Programme selector and On/Off button.**
3. **Display panel with buttons** → Page 23.
4. **Start button** for starting, interrupting or cancelling the programme.
5. **Buttons** → Page 27. en Getting to know your appliance

Display panel

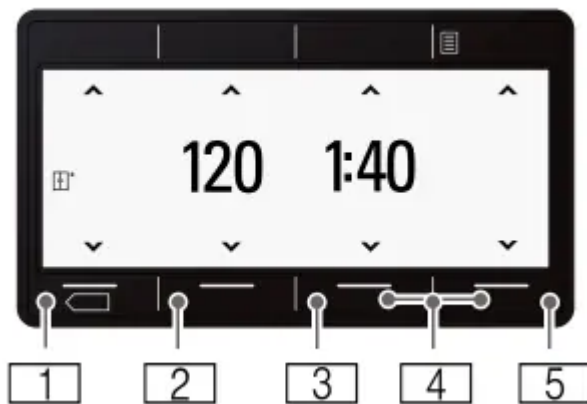


Button

Button	Description	Display
1	Select the dryness level .	 Iron Dry  Cupboard Dry  Cupboard Dry Plus
2	Select Anti-Crease .	120 Anti-Crease function in minutes
3	Select Ready in .	1:40 Expected programme duration in hours and minutes or timed programme selected 3 h Programme delay in hours when "Ready in" time is selected
4	Select Settings 3 sec .	End signal Button signal Automatic switch-off Language
5	Select Options .	 Spin class  Fine adjustment of the dryness level  Low heat

For a detailed description of all buttons, see → *Page 27* onwards.

 Other displays

Display	Description
Heat exchanger is being rinsed	The heat exchanger is cleaned automatically.
Please empty the condensate container	Empties the condensate container; → <i>Page 33</i> .
Please clean the fluff filters	Cleans the fluff filters; → <i>Page 32</i> .
	Childproof lock; → <i>Page 27</i> .
Pause, Ready/Anti-Crease	Programme progress: Anti-Crease; End and Pause

Programmes and buttons




 


Programmes



Programme and fabrics	Maximum load and programme settings/info
Name of the programme Which fabrics is the programme suitable for?	The maximum load is based on the dry weight of the fabrics Possible programme settings
Cottons Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen.	9 kg
Easy Care Synthetic or blended fabrics.	3.5 kg
Mixed Load Mixed load consisting of cotton and synthetic fabrics.	3 kg
Lingerie For delicate, washable underwear, e.g. made of velvet, lace, Lycra, silk or satin.	1 kg
Drying Basket Fabrics made from wool or a wool blend that are suitable for tumble drying. Note: Only dry the fabrics using the basket for woollens → Page 29.	1.5 kg
Cold ☹️ All types of fabric. For freshening up or airing items of laundry that have not been worn for long.	3 kg You can adjust the programme length using the Dryness level button.
Warm 😊 All types of fabric; time programme. Suitable for pre-dried or slightly damp laundry and for drying off multi-layered, thick laundry.	3 kg You can adjust the programme length using the Dryness level button.
Shirts/Blouses Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics.	1.5 kg
Quilts Fabrics, pillows, quilts or bedspreads filled with synthetic fibres. Dry large items individually. Observe the care label.	2.5 kg

Down Wear	1.5 kg
Fabrics, pillows, bedspreads or eiderdowns filled with down. Dry large items individually.	
Outdoor	1.5 kg
Weatherproof and outdoor clothing with a membrane coating and water-repellent fabrics.	
Towels	6 kg
Hard-wearing towels made of cotton.	
Super Quick 40'	2 kg
Synthetics and light cottons.	
Hygienic	4 kg
Hard-wearing fabrics. Note: Particularly suitable for the highest hygiene requirements.	



Buttons

Buttons	Explanations and notes
Drying Target:	<p>Select the dryness level (e.g. Cupboard Dry) or the drying time (20 mins up to 3 hrs 30 mins, depending on the model and programme).</p> <p>Select the dryness level according to the laundry to be dried.</p> <p>If you have selected a dryness level, this is stored for all programmes, except for Cottons, even after the dryer has been switched off.</p>
 Cupboard dry plus	For multi-layered, thick laundry which is difficult to dry.
 Cupboard dry	Normal, single-layered laundry.
 Iron dry	Normal, single-layered laundry, which should still be damp after drying and is suitable for ironing or hanging up.
Less Ironing	The drum moves the laundry at regular intervals for 60 to 120 minutes after drying, in any programme, to prevent creasing.
Finish in	The programme will end in between 1 h and 24 h. Set the "Ready in" time in increments of one hour to delay the start of the programme. The required number of hours after the programme ends is displayed on the display panel.
 Childproof lock	You can activate or deactivate the childproof lock by pressing and holding the "Ready in" button for five seconds.
 Options	Select the button and the menu will be displayed in the display panel.
 Spin class	For the spin class, set the spin speed at which the laundry has been spun in the


	<p>washing machine. This permits the expected drying time to be indicated more pre-cisely. Speeds of between 600 and 1800 rpm can be selected. Default setting: 1000 rpm</p>
 Fine adjustment of the dryness level	<p>If the laundry is too damp after drying, you can finely adjust the dryness levels e.g. Cupboard Dry. The dryness level can be increased in three stages, from +1 to +3.</p> <p>If you have adjusted the dryness level, the setting for all programmes with a selecta-ble dryness level is retained even after the dryer is switched off.</p>
 Low heat	<p>Reduced temperature for delicate fabrics, e.g. polyacrylic or elastane, may increase the drying time.</p>
Memory 1/2	<p>You can save individual programme settings under Memory 1 and 2.</p> <p>Select the required programme settings and press the Memory 1 or Memory 2 button for 3 seconds until the display panel shows that Memory programme 1 or 2 is saved. Your selected programme settings are retained even after the dryer is switched off.</p> <p>Default setting: No Memory programme saved.</p>
Basic Settings 3 sec.	<p>Press both buttons at the same time and hold them for 3 seconds. The menu will be displayed in the display panel.</p>
End signal, button signal	<p>Select the button signal volume: off - quiet - normal - loud - very loud.</p> <p>Default setting: loud</p>
Automatic switch-off	<p>Automatically switching off the dryer after 15, 30 or 60 minutes, or never automati-cally switching off. Default setting: 15 minutes</p>
Language	

	Select the desired language in the display panel.
Start/Pause 	Starts or pauses the programme.


Operating the appliance

Loading laundry and switching on the dryer



1. Place the laundry in the drum.
2. Press the  button to switch the dryer on.
3. Close the dryer door.

The basket for woollens

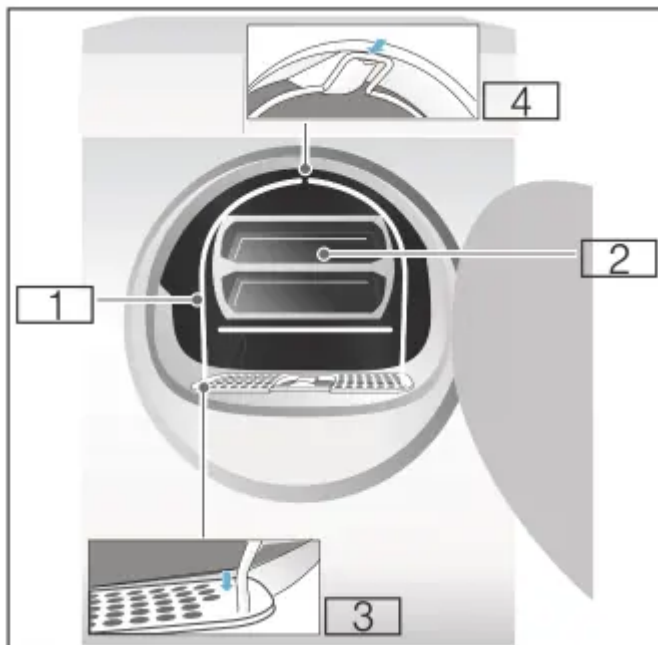


1. Basket for woollens
2. Insert for the basket for woollens

3.Recesses for mounting the basket for woollens


4.Notch for the basket for woollens

Drying with the basket for woollens

1. Insert the feet of the basket for woollens into the holes on the fluff filter.

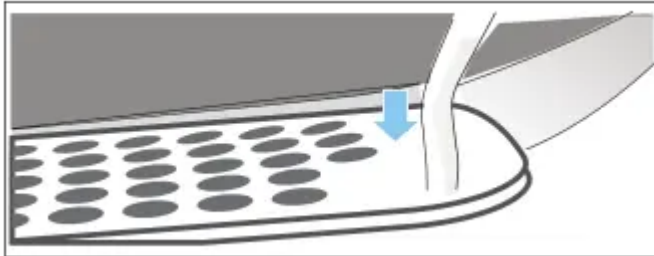

2. Lean the basket for woollens against the upper notch.

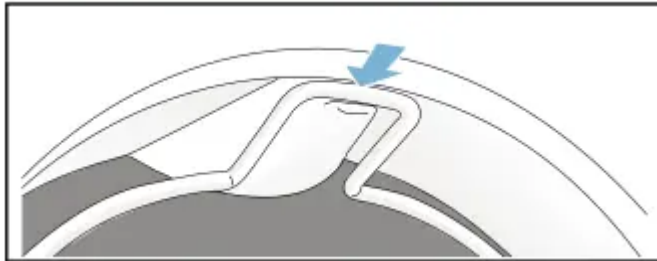


The basket for woollens should now be firmly inserted in the drum.

3. Place the required fabric in the insert of the basket for woollens

Application examples:

a) **Trousers or skirt**

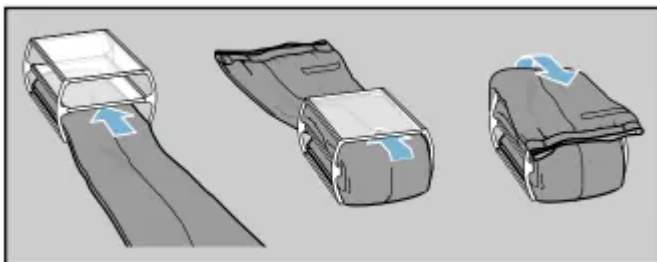

b) **Pullover**




c) Sports shoes

Place sports shoes in the basket for woollens without the insert.

Pull out the tongues of the shoes and remove the insoles or heel cushions.

Roll up a towel and place it under the sports shoes to create an inclined surface. Place the shoes so that the heels are on the towel.

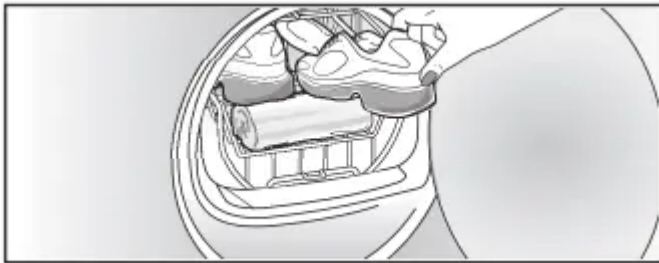

d) Soft toys

Dry soft toys in the basket for woollens without the insert.

Only place as many soft toys in the basket for woollens as is possible without any falling out.




4. Place the insert or the sports shoes in the basket for woollens.

Caution!

Risk of material damage to the fabrics.

Place the fabrics in the insert of the basket for woollens so that they do not come into contact with the drum.

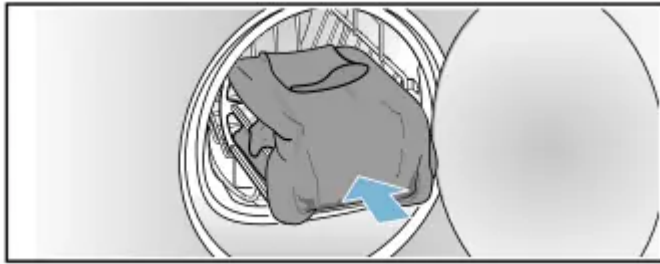

5. Use the programme selector to select the programme for the basket for woollens or a time programme.

6. Set the drying time.

Thin woollen pullover:

Approx. 1:20 hrs

Thick woollen pullover:

Approx. 1:30 hrs - 3:00 hrs

Skirt: Approx. 1:00 hr - 1:30 hrs

Trousers: Approx. 1:00 hrs - 1:30 hrs

Gloves: Approx. 30 min


Sports shoes: Approx. 1:30 hrs/ with airing max. 2:00 hrs

7. Start the programme.

8. Remove the fabrics and switch off the dryer.

Setting a programme

1. Select the required programme; detailed information on the programmes can be found from → Page 26 onwards.

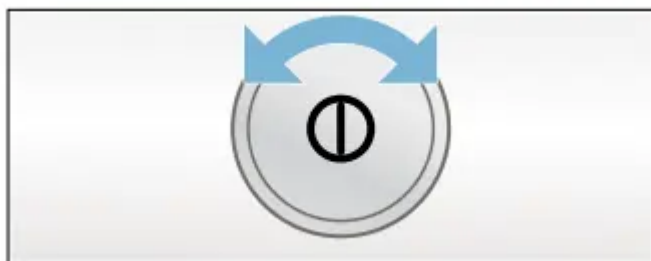

2. Use the programme selector to set the required programme. The default programme settings for the selected programme appear in the display panel.

3. If required, adjust the default programme settings. You can find detailed information on this from → Page 26 onwards.

Starting the programme

Press the Start button.

Programme sequence

The programme status is indicated in the display field.

Changing the programme or adding laundry

You can remove or add laundry and change or alter the programme at any time during drying.

1. To pause the programme, open the dryer door or press the Start button.
2. Add or remove laundry.
3. Select another programme or an additional function, if required.
4. Close the dryer door.
5. Press the Start button.


Cancelling the programme


The programme can be interrupted at any time; to pause, open the dryer door or press the Start button.

Programme end

FERTIG. WAESCHE ENTNEHMEN. appears in the display panel.

Removing laundry and switching off the dryer


1. Remove the laundry.
2. Press the  button to switch the dryer off.

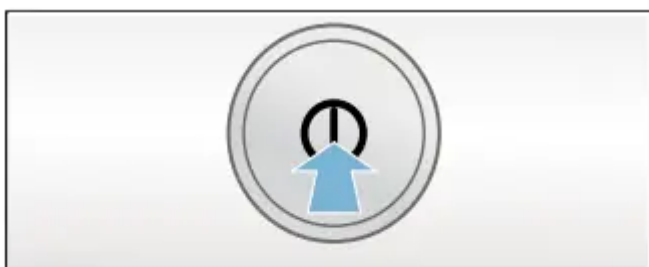

Clean the fluff filter

Clean the fluff filter after each drying cycle:


1. Open the dryer door and remove all fluff from the door.
2. Pull out the two-part fluff filter.

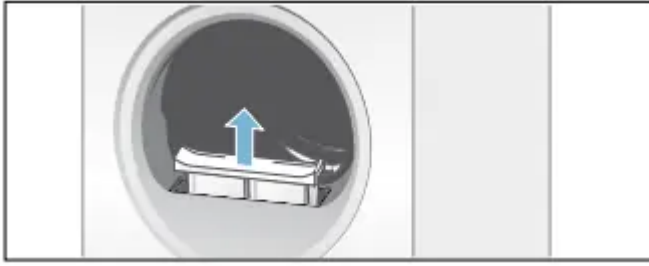

3.Remove the fluff from the recess in the fluff filter.




4.Pull apart the two-part fluff filter.

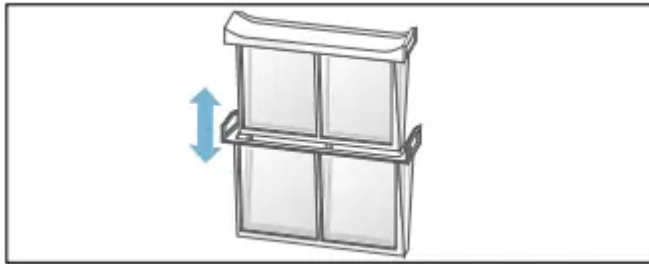


5.Open both filters and remove all the fluff.



6.Rinse away the fluff under warm, running water.

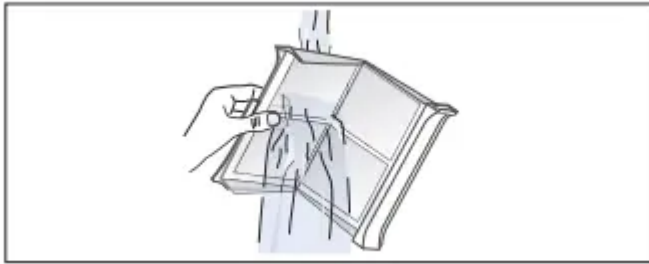


7. Dry the fluff filter, close it and reinsert the two-part fluff filter.

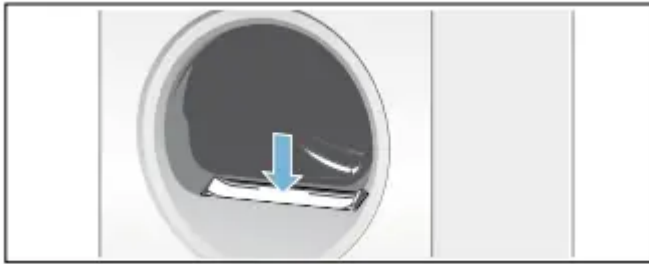


Emptying the condensate container

1. Pull out the condensate container horizontally.

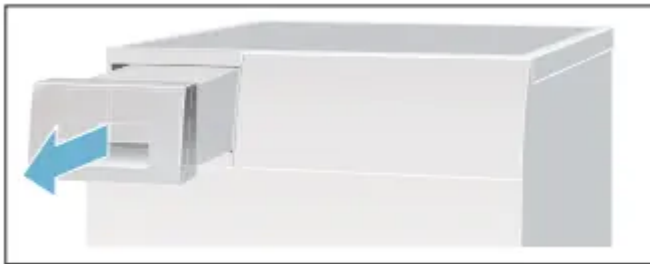

2. Pour out the condensation water.

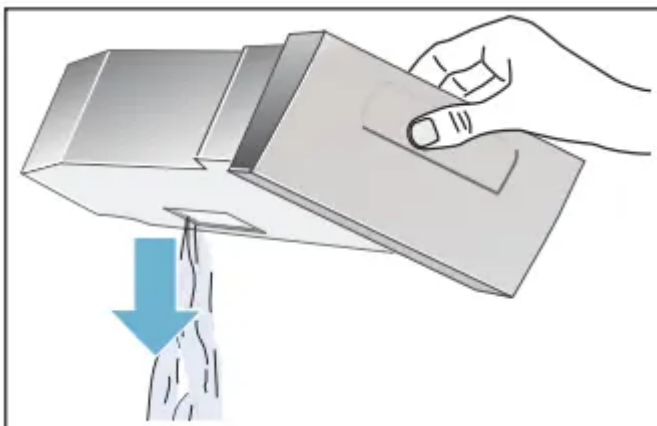

3. Push in the condensate container until you feel it lock back into place in the dryer.



Cleaning

Cleaning the dryer and the control panel

Warning

Risk of death!

There is a risk of electric shock as the dryer is operated with electricity.

Disconnect the dryer from the mains before cleaning.

Clean the dryer using only water and a soft, damp cloth.

Remove all detergent residue, spray residue or other residues immediately. Do not use cleaning agents or agents for pre-treating laundry (e.g. prewash sprays, stain removers). Do not use high-pressure cleaners or steam jet cleaners to clean your appliance.

Cleaning the moisture sensor

Note: The dryer is equipped with a stainless-steel moisture sensor. The moisture sensor measures how damp the laundry is.

After long periods of usage the moisture sensor may become covered by a fine layer of limescale or residues of detergents and care products. Such residues must be removed regularly as the sensor function and in consequence the drying result may be impaired.

Open the door and clean the moisture sensor with a coarse sponge.




Caution!

Moisture sensor may be damaged.


Do not clean moisture sensors with abrasives and steel wool.

Cleaning the filter in the condensate container


1. Pull out the condensate container horizontally.
2. Pour out the condensation water.
3. Remove the filter.

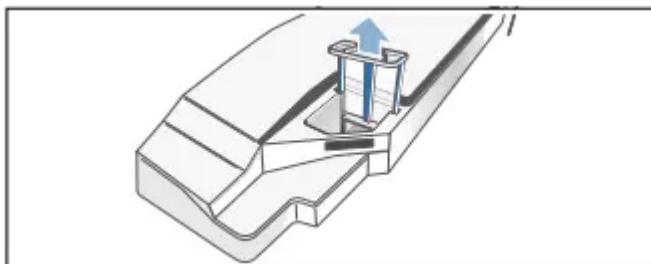

4. Clean the filter under warm, running water or in the dishwasher.

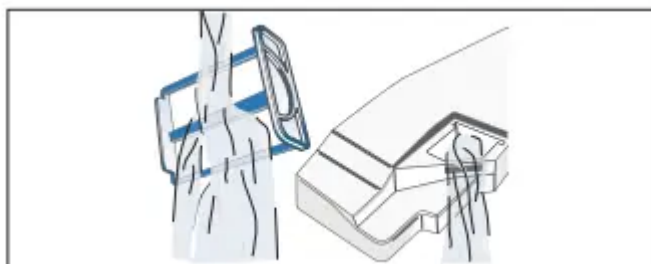

5. Push in the filter until you feel it lock into place.

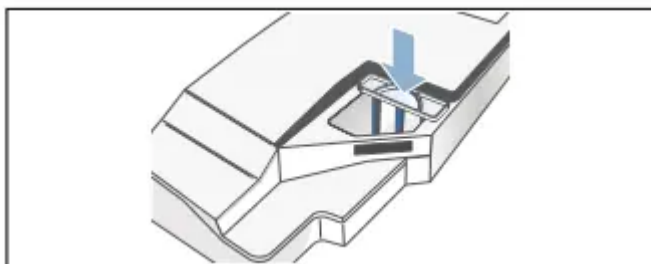

6. Push in the condensate container until you feel it lock into place.

Faults and what to do about them



Faults	Cause/remedy
<p>Please empty the condensate container on the display panel and the drying cycle is interrupted.</p>	<ul style="list-style-type: none"> • Empty the condensate container; → Page 33 and the dryer; → Page 20. • If the optional condensation drain* is installed, the drain hose may be blocked or kinked. Check the hose for deposits and rinse the hose. Lay the hose without any kinks.
<p>Please clean the fluff filters on the display panel.</p>	<p>Clean the fluff filter and press the Start button → Page 32.</p>
<p>Heat exchanger is being rinsed on the display panel.</p>	<p>Not a fault. The heat exchanger is cleaned automatically. Do not pull out the condensate container while this is displayed.</p>
<p>Dryer does not start.</p>	<ul style="list-style-type: none"> • Mains plug plugged in or fuse checked? • Programme selected? Select a programme. • Dryer door open? Close the door. • Childproof lock activated? Deactivate the childproof lock. • Ready in" time selected? Programme starts after a delay → Page 27.
<p>Creasing.</p>	<ul style="list-style-type: none"> • Creasing occurs when you have exceeded the maximum load or selected the wrong programme for the type of fabric. All the required information can be found in the programme table → Page 26. • Remove clothes immediately after drying; creasing may occur if they are left in the drum.
<p>Water is leaking out.</p>	<p>Not a fault; the dryer may be positioned on an incline. Level the dryer.</p>
<p>Change in the programme duration displayed during drying.</p>	<p>Not a fault. The moisture sensors detect the remaining moisture in the load and adjust the programme length (except timed programmes).</p>

<p>Laundry is not dried correctly or is still too damp.</p>	<ul style="list-style-type: none"> • After the end of the programme, warm laundry feels damper than it actually is. Spread the laundry out and allow the heat to disperse. • Finely adjust the dryness level – this extends the drying time but does not increase the temperature. Your laundry will become drier → Page 27. • Select a programme with a longer drying time or increase the drying level. This does not increase the temperature. • Select a timed programme for subsequent drying of laundry that is still damp → Page 26. • If you have exceeded the maximum load for the programme, the laundry may not be dried properly. • Clean the moisture sensor in the drum. The sensor may become covered by a fine layer of limescale or residues of detergents and care products which then impair its function. Your laundry is not being dried correctly → Page 35. • Drying has been interrupted as a result of a power cut, because the condensate container is full or because the maximum drying time has been exceeded. • Note: See also the laundry tips → Page 25.
<p>Drying time too long?</p>	<ul style="list-style-type: none"> • The fluff filter may be dirty and cause a longer drying time. Clean the fluff filter. • If the air inlet on the dryer is blocked or not freely accessible, this may increase the drying time. Make sure that the air inlet remains unobstructed. • The optimum ambient temperature for drying is between 15 °C and 30 °C. Outside of this range, the drying time may increase. • Insufficient air circulation in the room may increase the drying time. Ventilate the room.

Display panel goes off and Start button flashes.	Not a fault. Energy saving mode is active → Page 12.
Residual water in the condensate container despite the dryer being connected to the condensation drain*.	Not a fault. If the condensation drain is installed, residual water remains in the condensate container due to the dryer's self-cleaning function.
Humidity in the room increases.	Not a fault. Make sure the room is sufficiently ventilated.
Power cut.	The drying programme is interrupted. Remove the laundry and spread it out, or restart the programme.
Unusual noises when drying.	Not a fault. Noises are produced by the automatic cleaning of the heat exchanger → Page 34.
The dryer feels cold despite drying.	Not a fault. The dryer can dry efficiently at low temperatures using a heat pump.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.