

Intended use

- This appliance is intended for private domestic use only.
- Do not install or operate this appliance anywhere that is liable to experience frost and/or outdoor conditions. There is a risk that the appliance will be damaged if residual water in it freezes. If hoses freeze up, they may crack/burst.
- This appliance must only be used for drying and freshening up domestic laundry, consisting of items that have been washed with water and are suitable for tumble drying (see label on item). Using the appliance for any other purpose is outside of the scope of its intended application and is forbidden.
- This appliance is intended for use up to a maximum height of 4000 metres above sea level.

Installation and connection


Installing and connecting the dryer

- Check the dryer for visible damage. You must not operate the dryer if it is damaged.
- Before connecting the dryer to the power supply, ensure that the electric voltage specified on the rating plate matches the voltage of your socket.
- Only use earth-leakage circuit breakers with the following symbol: .
- Ensure that the mains cable is not kinked or trapped, and that it does not come into contact with heat sources or sharp edges.
- Due to the heavy weight of the dryer, you may injure yourself if you lift it. Do not lift the dryer on your own.
- You could cut your hands on the sharp edges of the dryer. Do not hold the dryer by the sharp edges.
- Protruding parts on the dryer may break off when it is lifted or pushed. Do not move the dryer by holding onto protruding parts.
- Check the dryer for damage caused during transportation. Never operate a dryer if it is damaged.
- Any residual water in the dryer may freeze and damage the dryer. Do not install the dryer in rooms that are at risk of frost.

During installation, ensure that:

- The dryer is placed on a clean, level and firm surface,
- The mains plug can be accessed at all times,

- The air inlet on the dryer is kept clear and there is sufficient ventilation,
- The area around the dryer is kept clean and
- The dryer is levelled using the threaded feet.
- Note: Check the alignment of the appliance with a spirit level and correct if necessary. Change the height by turning the appliance feet. All appliance feet must stand firmly on the ground.

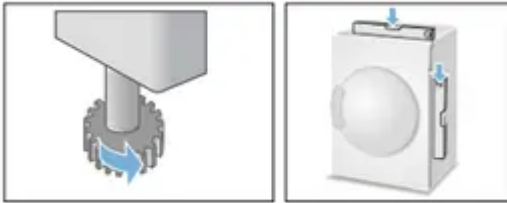

- Incorrect alignment may cause high noise levels, vibrations and improper movement of the drum.
- Note: If in doubt, have the appliance connected by a specialist.

Optional accessories

Order optional accessories* from after- sales service:

- Washer-dryer stack connection set: To save space, the dryer can be placed on top of a suitable washing machine of the same width and depth. The dryer must be secured to the washing machine using this connection set. Order number with pull-out worktop: WTZ11400; Order number without pull-out worktop: WTZ20410.
- Platform: For easier loading and unloading, use a platform to raise your dryer. Transport laundry with the integrated clothes basket integrated in the platform's pull-out drawer. Order number: WMZ20540W.
- Basket for woollens: Dry individual woollen items, sports shoes and soft toys in the basket for woollens. Order number: WMZ20600.
- Connecting kit for the condensation drain: Use a hose to draw off the condensation immediately. Order number: WTZ1110.

Transport and frost protection


To empty the condensate container:

- Use the program selector to select any program.
- Press the Start button.
- Wait for 5 minutes. Note: The condensation is drained.
- Empty the condensate container again.
- Switch off the dryer.

Caution! Any residual water may leak out and cause material damage.

Transport the dryer in an upright position.

The main points in brief

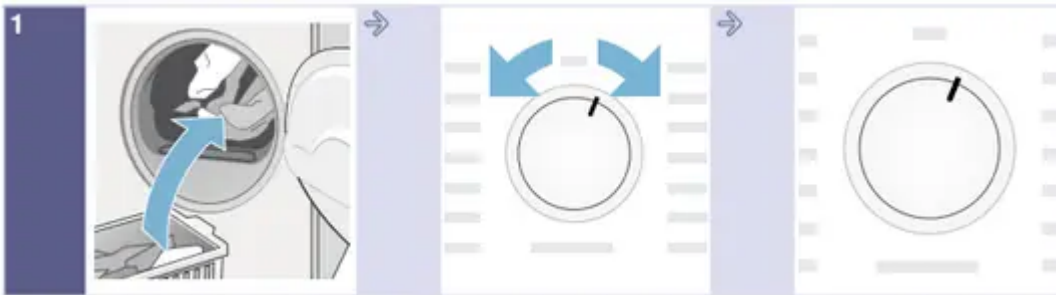

Load the laundry and close the door.

Switch on the dryer.

Select a program and, if necessary, adjust the program default settings.



Select the start button >II

Dry.

Unload the laundry.




Switch off the dryer.

Empty the condensate container.

Clean the fluff filter.


Getting to know your appliance

Dryer

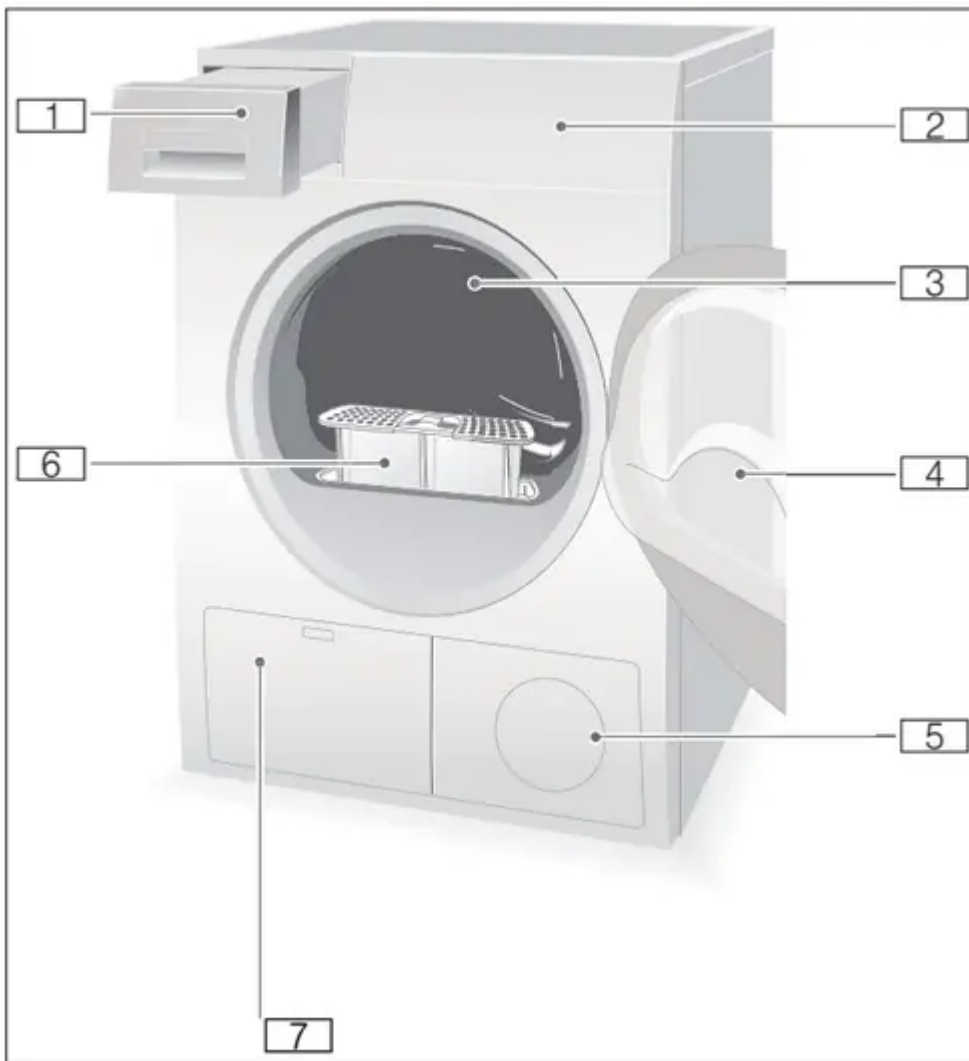

- 1 Condensate container
- 2 Control and display panel
- 3 Drum interior light (depending on the model)
- 4 Dryer door
- 5 Air inlet
- 6 Fluff filter
- 7 Heat exchanger

Control panel

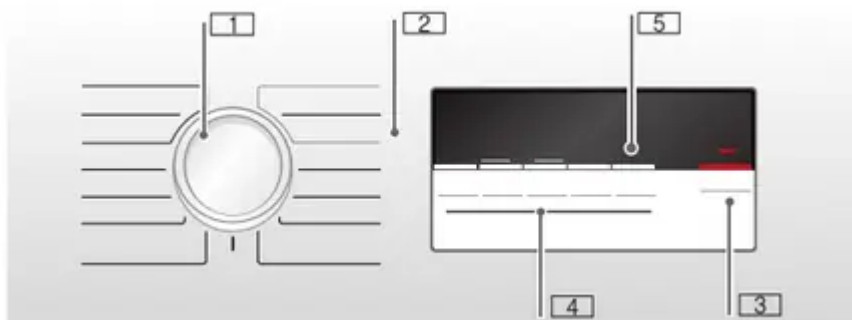


- 1 Use the program selector to switch the dryer on and off and to select the program.



- 2 Programm ~ Page 20.
- 3 Start button for starting or interrupting the program ~ Page 22.
- 4 Buttons ~ Page 22.
- 5 Display panel with buttons ~ Page 18.

Display panel

Buttons in the display panel

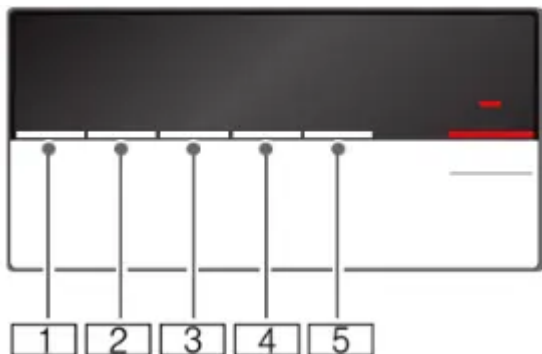

- 1 Select the degree of dryness.
- 2 Select the drying time.
- 3 Select the Ready in time.
- 4 Select Anti-Crease.
- 5 Select Low-Heat Drying.

For a detailed description of all buttons, see ~ Page 22 onwards.

Laundry

Laundry Preparing the laundry

Remove all objects from pockets and observe the following information:

- Tie cloth belts, apron strings, etc. together or use a laundry bag.
- Close zips, hooks and eyelets and buttons. Button up large items of laundry, such as covers.
- Remove any metal objects, such as paper clips, from pockets.
- To ensure a consistent drying result, sort laundry by fabric type and drying programme.
- Always dry very small items of laundry, e.g. babies' socks, together with large items such as towels.
- Knitted fabrics such as T-shirts and jerseys often shrink the first time they are tumble-dried. Use a gentle programme.

- Do not overdry easy-care laundry. This increases creasing of the laundry.
- Use timed programmes for single garments.
- Some detergents and care products, e.g. starch or softeners, contain particles which may be deposited on the moisture sensor. This may impair the sensor function and in consequence the drying result.

Notes

- When washing laundry to be tumble-dried, use the correct amount of detergent and care products as specified in the manufacturer's instructions.
- Clean the moisture sensor regularly.

Sorting laundry according to

- Suitable for tumble drying
- Dry at normal temperature
- Dry at low temperature
- Do not tumble-dry







Note: Do not load laundry from the washing machine directly into the tumble dryer. Sort the spun laundry before placing it in the dryer drum.

If you dry thin, thick and multi-layer fabrics together, they will dry to differing degrees. To achieve an even drying result, you should therefore only dry together laundry of the same type of fabric and structure. If you feel that the laundry is still too damp, you can select a timed programme for subsequent drying ~ Page 20.










Programs and buttons

Programs

Program and fabrics	Maximum load and program settings/info
Name of the program Which fabrics is the program suitable for?	The maximum load is based on the dry weight of the fabrics Possible program settings
Cotton  Cupboard-dry extra 	8 kg
Hard-wearing, heat-resistant fabrics that are made of more than one layer of cotton or linen and do not dry readily.	
Cotton  Cupboard-dry 	8 kg
Normal, hard-wearing and heat-resistant fabrics made of a single layer of cotton or linen.	
Cotton  Iron-dry 	8 kg
Normal, hard-wearing and heat-resistant fabrics made of a single layer of cotton or linen that need to be damp after drying and are suitable for ironing or hanging up.	
Easy-Care  Cupboard-dry extra 	3.5 kg
Synthetic or blended fabrics that are made of more than one layer and do not dry readily.	
Easy-Care  Cupboard-dry 	3.5 kg
Normal synthetic or blended fabrics made of a single layer.	
Easy-Care  Iron-dry 	3.5 kg
Normal synthetic or blended fabrics made of a single layer that need to be damp after drying and are suitable for ironing or hanging up.	
Sportswear 	1.5 kg
Weatherproof and outdoor clothing with a membrane coating and water-repellent fabrics.	
AllergyPlus 	6 kg
Hard-wearing towels made of cotton.	
Mixture 	3 kg
Mixed load consisting of cotton and synthetic fabrics.	

Time program warm  All types of fabric; time programme. Suitable for pre-dried or slightly damp laundry and for drying off multi-layered, thick laundry. Notes <ul style="list-style-type: none"> Only dry wool, sports shoes and soft toys with the basket for woollens → Page 14. In the time programme, the laundry's residual moisture is not automatically detected. If the laundry is still too damp after the drying programme, repeat the programme and, if required, extend the programme length. 	3 kg You can adjust the programme length using the button for the drying time.
Time program cold  All types of fabric. For freshening up or airing items of laundry that have not been worn for long.	3 kg You can adjust the programme length using the button for the drying time.
Shirts 15  For optimum drying results, dry a maximum of 5 shirts at one time. After drying, iron the laundry or hang it up and leave for a period of time: Residual moisture is then distributed evenly.	1 kg
Super 40  Synthetics and light cottons.	2 kg
Woollens finish  Machine-washable fabrics made of wool or containing wool. Notes <ul style="list-style-type: none"> Fabrics become fluffier but not dry. Remove fabrics once the programme has ended and allow to dry. 	0.5 kg
Delicates  For delicate, washable textiles, e.g. made of satin, synthetic fibres or blended fabrics.	2 kg

 Buttons

Buttons	Explanations and notes
Note: Not all buttons and their functions can be selected in all programs.	
 (Degree of dryness)	If the laundry is too damp after drying, you can finely adjust the dryness levels e.g. Cupboard Dry. The dryness level can be increased with the degree of dryness in three stages, from  to  . If you have adjusted the dryness level, the setting for all programmes with a selectable dryness level is retained even after the dryer is switched off. Note: The higher the degree of dryness, the longer the programme duration.
 (Drying time)	Adjust the programme length for the time programmes. Between 20 minutes and 3 hours, in 10-minute increments.
 (Ready in)	The programme will end in 1-24 hrs. Set the "Ready in" time in increments of one hour to delay the start of the programme. The required number of hours after the programme ends is displayed in the display panel.
 3 sec. (Childproof lock)	Press and hold the "Ready in" time button and the drying time button at the same time for 3 seconds to activate or deactivate the childproof lock.
 (Less ironing)	The drum moves the laundry at regular intervals for 60 minutes after drying, in any program, to prevent creasing. Automatic anti-crease function can be extended by up to 180 min.
 (Gentle Dry)	Reduced temperature for delicate fabrics, e.g. polyacrylic or elastane. Selecting the button will extend the drying time.
 (Start/Pause)	Starts or pauses the programme.

Operating the appliance

Loading laundry and switching on the dryer

Note: The dryer must be correctly positioned and connected, -> Page 13.

1. Place the laundry in the drum.
2. To switch the dryer on, turn the program selector to any program.
3. Close the dryer door.

Setting a program

Note: If you have activated the childproof lock, you must deactivate it before you can set a program, see -> Page 22.

- Select the required program; detailed information on the programs can be found from -> Page 20 onwards.
- Use the program selector to set the required program. The default program settings for the selected program appear in the display panel.



- Note: Default program settings are standard settings that are already defined when a program is selected. After selecting a program, you can see the default program settings in the display panel.
- If required, adjust the default program settings. You can find detailed information on this from -> Page 20 onwards.

Starting the program

Press the Start button.

Note: If you want to lock the program to prevent it from being inadvertently adjusted, you can select the childproof lock, see -> Page 22.

Program sequence

The programme status is indicated in the display field.


e.g.

1:27 Expected programme duration in hours and minutes.

Note: When a programme is selected, the expected drying time for the recommended load is displayed. During drying moisture sensors detect the remaining moisture in the load and adjust the programme length (except timed programmes). This is visible via the time remaining leaping forward.

 Wet

 Iron Dry

 Cupboard Dry

 AntiCrease

-P- Pause

End End

Changing the program or adding laundry

You can remove or add laundry and change or alter the program at any time during drying.

- To pause the program, open the dryer door or press the Start button.
- Add or remove laundry.
- Select another program or an additional function, if required.
- Close the dryer door.
- Press the Start button.

Note: The program duration in the display panel is updated depending on the load and residual moisture in the laundry. The values displayed may change after the program is changed or the load is adapted.

Program interruption

The program can be interrupted at any time; to pause, open the dryer door or press the Start button.

Caution! Risk of fire.


Laundry may catch fire. If you cancel the program, you must remove the laundry items and spread them out so that the heat can disperse.

Program end

End appears in the display panel.

Removing laundry and switching off the dryer

1. Remove the laundry.
2. Turn the program selector to the "off" position.

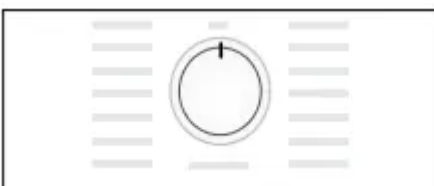

Clean the fluff filter

Note: During drying, fluff and hair from the laundry is trapped by the fluff filter. If the fluff filter is blocked or dirty, this reduces the flow of air, which prevents the dryer from achieving its maximum performance. Clean fluff filters also reduce energy consumption and the drying time.

Clean the fluff filter after each drying cycle:

- Open the dryer door and remove all fluff from the door.
- Remove the fluff filter.



- Remove the fluff from the recess in the fluff filter.



Note: Ensure that no fluff falls into the open shaft.

- Open the fluff filter and remove all the fluff.
- Rinse away the fluff under running water or clean the fluff filter in the dishwasher.



- Dry the fluff filter, close it and reinsert the fluff filter.




Emptying the condensate container

Note: After each drying cycle, empty the condensate container; otherwise the next drying programme may be cancelled as a result of the condensate container being full.

- Pull out the condensate container horizontally.



- Pour out the condensation water.

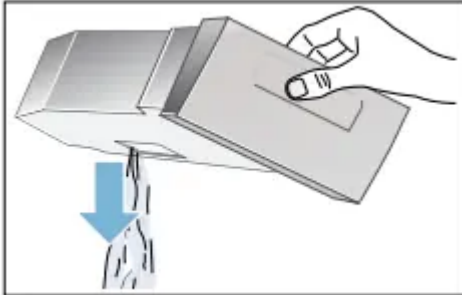

- Push in the condensate container until you feel it lock back into place in the dryer.




Signal setting

You can change the following settings:

- The spin speed that is used for spinning your laundry before it is dried,
- The volume of the audible signal at the end of the programme,
- The volume of the audible button signals,
- The current rating for your dryer's fuse (10 A or 16 A). Note: The values for the energy label are determined using a circuit breaker/fuse rating of 16 A. If the circuit breaker/fuse rating is changed to 10 A, the drying time and energy consumption will be higher. You can find details on this in the consumption values table. -> Page 33

You will need to activate the setting mode in order to change these settings.

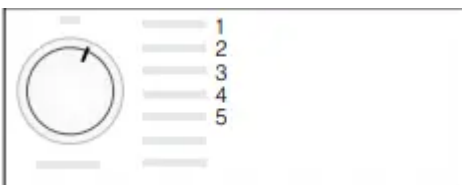

Activating setting mode

1. Switch the dryer on.
2. Select the Cottons programme in position 1 and wait 5 seconds.

Setting mode is now activated. The symbols go out on the display panel and the programme duration is displayed.

- Press and hold the Start button and, at the same time, turn the programme selector clockwise to position 2.
- The spin speed is shown on the display.
- Press the "Ready in" time button or the drying time button to change the spin speed.
- Turn the programme selector clockwise to position 3.
- The volume of the audible signal at the end of the programme is shown on the display



1 = quiet, 2 = medium, 3 = loud, 4 = very loud

- Press the "Ready in" time button or the drying time button to change the volume.
- Turn the programme selector clockwise to position 4.
- The volume for the audible button signal is shown on the display.



0 = off, 1 = quiet, 2 = medium, 3 = loud, 4 = very loud

- Press the "Ready in" time button or the drying time button to change the volume.
- Turn the programme selector clockwise to position 5.
- The current is shown in the display.

LO = 10 A

HI = 16 A

- Press the "Ready in" time button or the drying time button to change the current.

Exiting setting mode

Turn the programme selector to the "Off" position once you have set the required spin speed, volume or fuse current rating. The settings have now been saved.

Cleaning

Cleaning the dryer and the control panel

- Clean the dryer using only water and a soft, damp cloth.

- Remove all detergent residue, spray residue or other residues immediately. Do not use cleaning agents or agents for pre-treating laundry (e.g. prewash sprays, stain removers). Do not use high-pressure cleaners or steam jet cleaners to clean your appliance.

Cleaning the heat exchanger

Notes


The heat exchanger requires cleaning once a month, however this varies depending on how frequently the dryer is used.

If there is debris in the heat exchanger, this will increase the amount of time required for drying and will compromise the drying results.


- Allow the dryer to cool down and place an absorbent cloth beneath the maintenance flap.
Note: Residual water may leak out.
- Open the maintenance flap fully.




- Turn both locking levers towards each other.

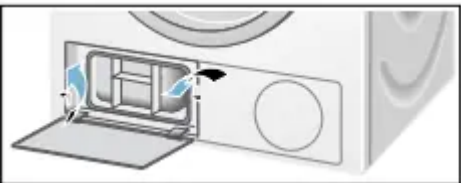

- Remove the top cap from the heat exchanger.

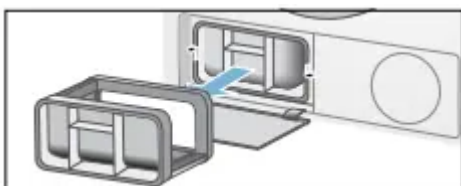


- Remove the heat exchanger.

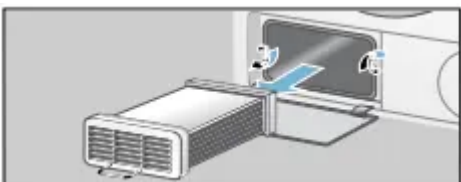


- Flush water through the heat exchanger from all sides to completely remove all fluff.



- Remove all fluff from the seals on the dryer and on the heat exchanger.
- Allow all the water to drip off.
- First insert the heat exchanger, and then fit the heat exchanger's top cap in place.
- Turn both locking levers back and close the maintenance flap until it locks into place.

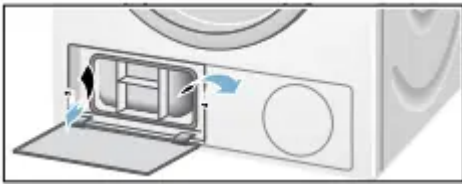

- Close the maintenance flap and press on it until you feel it click in place.

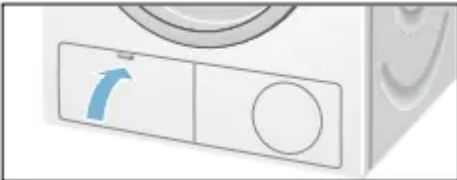


Cleaning the moisture sensor

- Note: The dryer is equipped with a stainless-steel moisture sensor. The moisture sensor measures how damp the laundry is.
- After long periods of usage the moisture sensor may become covered by a fine layer of limescale or residues of detergents and care products. Such residues must be removed regularly as the sensor function and in consequence the drying result may be impaired.
- Open the door and clean the moisture sensor with a coarse sponge.



Faults and what to do about them

 on the display panel and drying has been interrupted.

- Empty the condensate container and press the Start button -> Page 22.
- If the optional condensation drain is installed, the drain hose may be blocked. Check the hose for deposits and flush the hose out.

 on the display panel.

- Clean the fluff filter and/or the heat exchanger, then select the Start button -> Page 25; -> Page 28.

Dryer does not start

- Mains plug plugged in or fuse checked?
- program selected? Select a program.
- Dryer door open? Close the door.
- Childproof lock activated? Deactivate the childproof lock.
- "Finish in" time selected? program starts after a delay.

Display panel goes off and Start button flashes.

- Not a fault. Energy saving mode is active -> Page 12.

Creasing.

- Creasing occurs when you have exceeded the maximum load or selected the wrong program for the type of fabric. All the required information can be found in the program table.
- Remove clothes immediately after drying; creasing may occur if they are left in the drum.

Water is leaking out.

- Not a fault; the dryer may be positioned on an incline. Level the dryer.

Change in the programme duration displayed during drying.

- Not a fault. The moisture sensors detect the remaining moisture in the load and adjust the programme length (except timed programmes).

Laundry is not dried correctly or is still too damp.

- After the end of the program, warm laundry feels damper than it actually is. Spread the laundry out and allow the heat to disperse.
- Finely adjust the dryness level – this extends the drying time but does not increase the temperature. Your laundry will become drier -> Page 22.
- Select a program with a longer drying time or increase the drying level. This does not increase the temperature.
- Select a timed program for subsequent drying of laundry that is still damp -> Page 20.
- If you have exceeded the maximum load for the program, the laundry may not be dried properly.
- Clean the moisture sensor in the drum. The sensor may become covered by a fine layer of limescale or residues of detergents and care products which then impair its function. Your laundry is not being dried correctly -> Page 29.

- Drying has been interrupted as a result of a power cut, because the condensate container is full or because the maximum drying time has been exceeded.
- Note: See also the laundry tips -> Page 19.

Drying time too long?

- The fluff filter may be dirty and cause a longer drying time. Clean the fluff filter.
- The heat exchanger may be dirty and cause a longer drying time. Clean the heat exchanger.
- If the air inlet on the dryer is blocked or not freely accessible, this may increase the drying time. Make sure that the air inlet remains unobstructed.
- If the ambient temperature is higher than 35 °C, this may extend the drying time.
- Insufficient air circulation in the room may increase the drying time. Ventilate the room.

Displayed drying time changes during drying process.

- Not a fault. The dryer recognizes the load and adapts the remaining program duration.

Humidity in the room increases.

- Not a fault. Make sure the room is sufficiently ventilated.

Power cut.

- The drying program is interrupted. Remove the laundry and spread it out, or restart the program.

After-sales service

After-sales service

- If you cannot rectify the fault yourself (faults, what to do?), please contact our after-sales service. We will always find an appropriate solution to avoid unnecessary visits by engineers.
- The contact information for your nearest after-sales service can be found here or in the enclosed after-sales service directory.
- Please provide after-sales service with the dryer's product number (E-no.) and production number (FD).

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

