



Overview

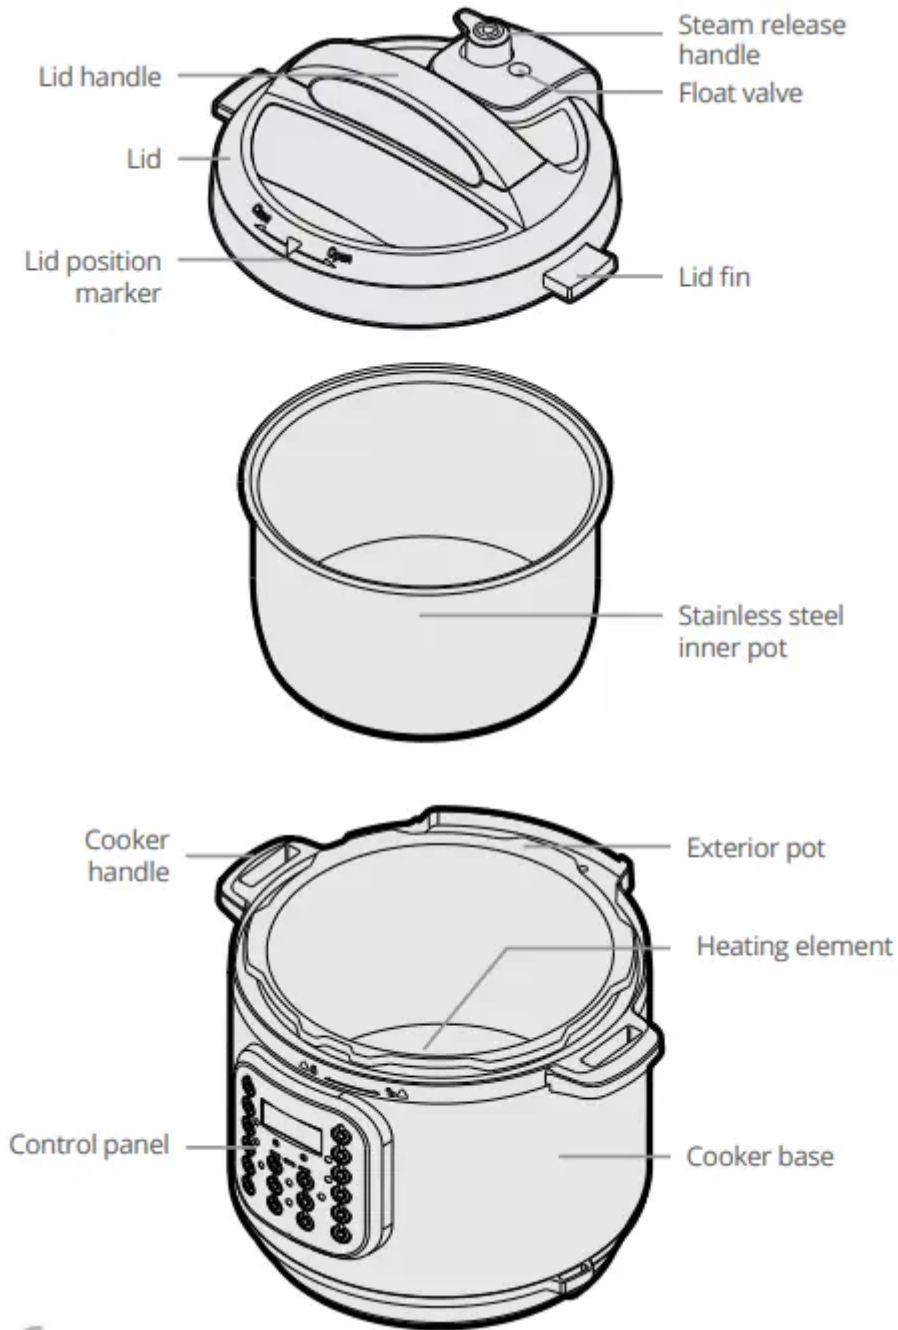

Anti-block shield


To install:

Position the anti-block shield in place and push down

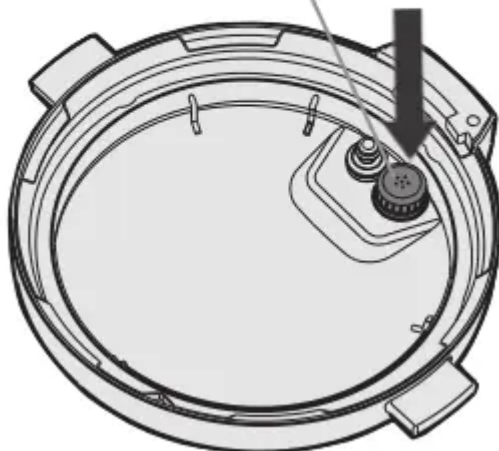

To remove:


Using your thumb, push the side of the anti-block shield towards the lid rim and lift up with some effort. The anti-block shield should pop out

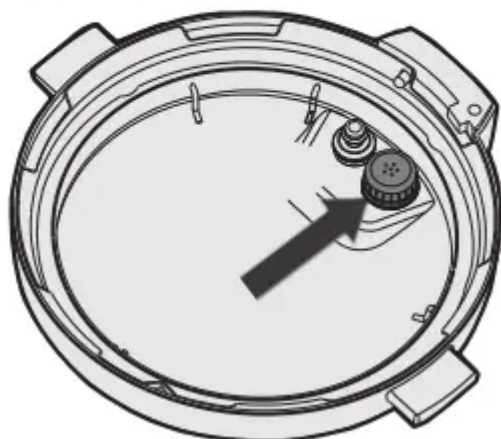

Control and Features

Control Panel for the DUO Series

The control panel of your Instant Pot® DUO Mini/60/80 consists of a LED display, cooking program keys, operation keys, +/- keys to adjust time

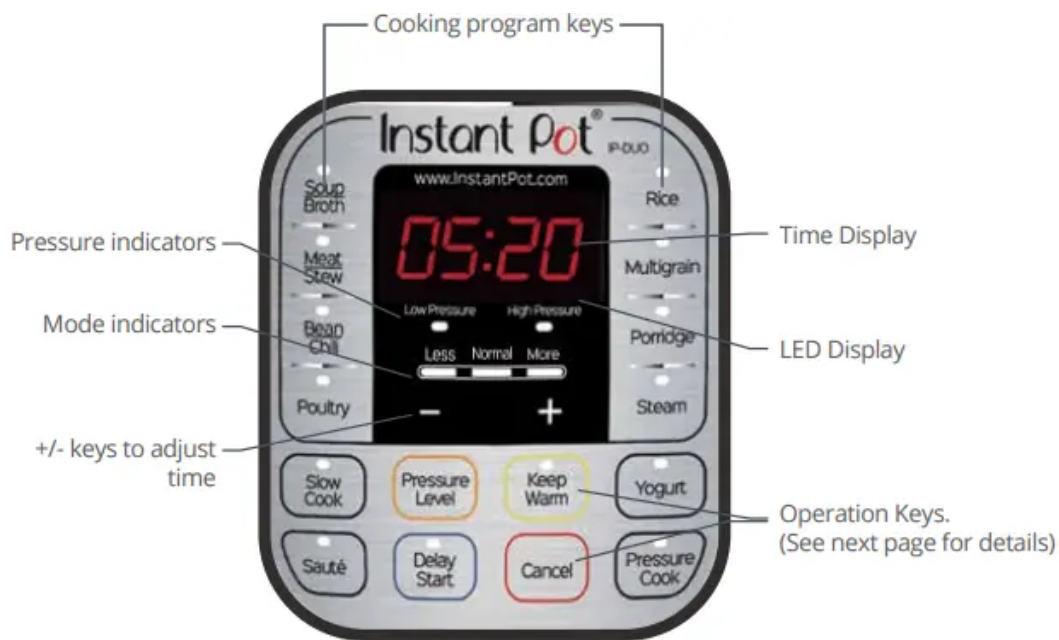

Instant Pot® is a programmed smart cooker that has preset cooking times for different food ingredients and cooking methods. It also remembers your most recent settings per cooking program for a more personalized cooking experience. To return to the factory default settings, press Cancel to return the cooker to standby mode displaying OFF, 1) for individual cooking programs reset, press and hold the cooking program key until the cooker beeps, or 2) for global reset, press and hold the Cancel key until the cooker beeps.





The Pressure Level key has no effect on non-pressure cooking programs: Slow Cook, Sauté and Yogurt

Cooking Program Options

Programs	Modes	Suggested Uses	Notes for Users
Soup Broth	Less	Soup without meat.	The soup/broth remains clear due to lack of boiling motion under pressure cooking.
	Normal	Soup with meat.	
	More	Rich bone broth.	
Meat Stew	Less	Soft texture.	Choose different modes based on the meat texture desired.
	Normal	Very soft texture.	
	More	Fall-off-the bone meat texture.	
Bean Chili	Less	Less soft texture.	Choose different modes based on the bean texture desired.
	Normal	Soft texture.	
	More	Very soft texture.	
Poultry ¹	Less	Soft texture.	Choose different modes based on the meat texture desired.
	Normal	Very soft texture.	
	More	Fall-off-the-bone texture.	
Slow Cook	Less	Corresponds to Low setting in some temperature controlled slow cookers.	Non-pressure cooking program. You may also use the Instant Pot® glass lid as an option.
	Normal	Corresponds to Medium setting in some temperature controlled slow cookers.	
	More	Corresponds to High setting in some temperature controlled slow cookers.	

Programs	Modes	Suggested Uses	Notes for Users
Rice	Less	Al dente white rice.	Automated cooking program. LED displays 'Auto'. The +/- keys will not work in this program.
	Normal	Normal texture white rice.	
	More	Softer texture white rice.	
Multigrain ¹	Less	Wild rice, brown rice, mung beans, etc.	Choose different modes based on the type of grains and the desired texture.
	Normal	Wild rice, brown rice, mung beans, etc.	
	More	Tough grains or a mixture of grains and beans.	Program includes 45 minutes of warm water soaking time prior to 60 minutes of pressure cooking.
Porridge	Less	Oatmeal.	DO NOT use Quick Release as thick liquid will spatter out and block the steam release valve. See page 17.
	Normal	White rice porridge/congee.	
	More	Rice porridge/congee with various rices and beans.	
Steam	Less	Vegetables.	Use the steam rack provided to elevate food above the water. Use Quick Release method to prevent food from overcooking.
	Normal	Fish and Seafood.	
	More	Meat.	
Sauté (Brown)	Less	Simmering, thickening and reducing liquids.	NEVER have the lid on when sautéing. Maximum time is 30 minutes as a safety precaution.
	Normal	Pan searing.	
	More	Stir-frying or browning meat.	

  Programs	Modes	Suggested Uses	Notes for Users
 Yogurt	Less	Jiu Niang, a sweet fermented glutinous rice dessert.	Default fermentation time is 24:00 hours. You can adjust time based on your recipe.
	Normal	Fermenting milk when making yogurt.	'Yogt' will be displayed on the screen when completed.
	More	Pasteurizing milk when making yogurt.	'boil' will be displayed on the screen.
 Pressure Cook	Less	Manual programming of pressure level and cooking time according to your favourite recipes or cooking habits.	Press the Pressure Level key to adjust pressure levels and the + / - keys to change cooking time.
	Normal		
	More		

Pressure Cooking Programs:

Working Pressure: Low Pressure: 5.8 - 7.2 psi (40 - 50 kPa); High Pressure: 10.2 - 11.6 psi (70 - 80 kPa) Pressure Release Pressure Limit: 15.22psi (105kPa) Working Temperature: 115°C - 118°C (239°F ~ 244°F)

Non-Pressure Cooking Programs:

Keep Warm function: 63 - 78°C (145 ~ 172°F); Slow Cook function: Less mode: 82-87.8°C / 180-190°F; Normal mode: 87.8-93°C / 190-200°F; More mode: 93-99°C / 200-210°F; Sauté function: Less mode: 135 -150°C (275 -302°F); Normal mode: 160 -176°C (320 -349°F); More mode: 175 - 210°C (347 - 410°F)

Getting Started

1. Read warning cards and warning labels. Remove all packaging materials and removable warning cards from the cooker and accessories.
2. Clean the inner pot, lid and accessories with water and detergent before the first use.
3. Install the condensation collector at the rear of the cooker by aligning the top of the collector with the guides on the cooker and press in.





4. Place the steam release handle on the lid.



Before using your Instant Pot®:

1. To remove the lid, hold the handle, turn the lid counterclockwise and lift.

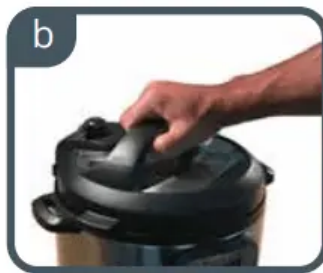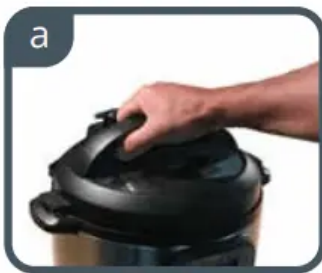

2. Remove the inner pot from the cooker

3. Add food and liquids to the inner pot as the recipe directs. If required, place the steam rack on the bottom of the inner pot first. Always add at least 18 fl oz / 500 mL of liquid for minimum liquid requirement. See “Cooking and Safety Tips” on page 22.

4. Wipe the outside of the inner pot dry. Make sure there is no food debris on the bottom side of the inner pot nor on the cooking element.

5. Put the inner pot back into the cooker. Rotate slightly to ensure that it is seated correctly

6. Make sure the sealing ring rack is completely set in the groove on the inside of the sealing ring. Ensure there is no deformation on the sealing ring rack. Do not attempt to repair a deformed ring rack. Please contact the customer care team.

7. To place lid, reverse Step 1. Place the lid on the cooker, align the ▼ mark on the lid with the 🔓▲ (unlock) mark and turn clockwise to the ▲🔒 (lock) mark.



Initial Test Run

To familiarize yourself with the Instant Pot® and check if the cooker is working properly:

1. Add 3 measuring cups of water into the inner pot (~25 fl oz / 750 mL).
2. Close the lid. Turn the steam release handle to Sealing position.
3. Press the Steam button and press the + / - keys to adjust time to 2 minutes.



The preheating cycle will start after 10 seconds and the cooker will display On. Traces of steam will release until the float valve pops up. The Steam program will begin when working pressure is reached. After the cooking cycle has completed, the cooker will beep and switch to Keep Warm mode if the Auto Keep Warm function is ON.

If you have any questions or concerns, please refer to the troubleshooting guide on pages 24 - 26, or call the customer care team. Contact information on page 24.

Pressure Cooking

The following are all pressure cooking programs: Soup/Broth, Meat/Stew, Bean/Chili, Poultry1 , Rice, Multigrain1 , Porridge, Steam, and Pressure Cook.

1. Follow the steps in "Getting Started" pages 12 - 14.
2. Position the steam release handle to Sealing.



3. Connect the power cord. The LED displays OFF, indicating that the cooker is in standby mode.




4. Select a pressure cooking program: Soup/Broth, Meat/Stew, Bean/Chili, Poultry1, Rice, Multigrain1, Porridge, Steam, or Pressure Cook.

5. Optionally, personalize pressure cooking programs as follows:

To do this	Press this button...	Followed by these steps...
Change the cooking time	Cooking Program Key	Select between three preset cooking times, Less, Normal and More by pressing the cooking program key repeatedly
	+ / -	Add/subtract time; press and hold for faster changes
Change the cooking pressure	Pressure Level	Select either High or Low
Set the delayed cooking time	Delay Start	<ol style="list-style-type: none"> 1. Use the + / - buttons to set the hours 2. Press Delay Start again 3. Use the + / - buttons to set the minutes

6.10 seconds after choosing the settings, the cooker beeps 3 times and displays On to indicate that the cooker has entered preheating cycle. If using Delay Start, the Delay Start light indicator will light up and 10 seconds later, the delay timer will start to count down. When count down is finished, cooking will start and LED will display On for the preheating cycle. Depending on the amount of food and its temperature, the preheating cycle can last from a few minutes to 40 minutes or more . As the cooker heats up and pressure builds, the float valve rises. When working pressure is reached, the cooker enters the pressure cooking cycle and displays the remaining cooking time. When the cooking cycle has finished, the cooker beeps and enters the Keep Warm mode if the Auto Keep Warm function is turned ON. The LED displays the elapsed time (such as L0:02). If Cancel is not pressed, the cooker will turn OFF after 10 hours.

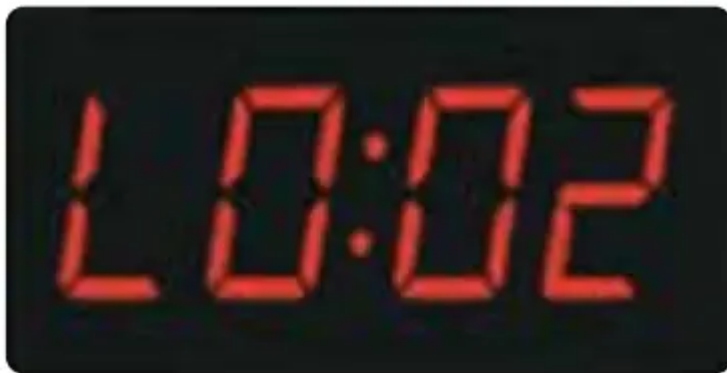

**Users can switch Auto Keep Warm ON/OFF, adjust pressure level and cooking time at any time during the cooking process.

7. Release the pressure using one of the following methods (refer to recipe): Natural Release: Allow the cooker to cool down naturally until the float valve drops down. This may take 10 to 40 minutes, or even more, depending on the amount of food in the cooker. Place a wet towel on the metal part of the lid to speed up cooling (do not cover the steam release).

Quick Release: Turn the steam release handle to the Venting position to let steam out until the float valve drops down. Never pull out the steam release handle while releasing steam, as escaping steam is extremely hot and can cause scalding. When cooking food with large liquid volume or starch content, immediately turn the steam release handle back to the Sealing position at the first sign of spattering. Quick Release should ALWAYS be closely attended.



Do not place hand over
steam release valve



Do not lean face over
cooker when it is in operation or
releasing steam/pressure

8. Press Cancel. The LED displays OFF, indicating that the cooker is in standby mode. Open the lid. Make sure the float valve is down before opening the lid.

Non-Pressure Cooking

The following are all non-pressure cooking programs: Sauté, Slow Cook, Yogurt and Keep Warm.

Sauté

1. Connect the power cord. The LED displays OFF, indicating that the cooker is on standby.
2. Select the Sauté program
3. To change the cooking temperature, press Sauté key repeatedly to toggle between Less (for simmering or thickening sauce), Normal (for regular browning), and More (for stir-frying or blackening meat). 10 seconds after choosing the settings, the cooking process will start. The cooker will beep 3 times and the LED displays On to indicate that the cooker has entered the preheating cycle. When the working temperature is reached, the LED displays Hot.



4. Add food to the inner pot and sauté.
5. When you have finished sautéing the food, press Cancel. The LED displays OFF, indicating that the cooker is in standby mode.

Slow Cook

1. You may use the Instant Pot® glass lid as an option. If using the pressure cooking lid, make sure the steam release handle is turned to Venting



2. Connect the power cord. The LED displays OFF, indicating that the cooker is on standby.

3. Select the Slow Cook program. Optionally, modify the slow cooking program as follows:

To do this	Press this button...	Followed by these steps...
Change the cooking time	+ / -	Add / subtract time
Change the cooking temperature	Cooking Program Key	Select between three preset cooking temperatures, Less , Normal and More by pressing the cooking program key repeatedly
Set the delayed cooking time	Delay Start	<ol style="list-style-type: none"> 1. Use the + / - buttons to set the hours 2. Press Delay Start again 3. Use the + / - buttons to set the minutes

10 seconds after choosing the settings, the cooking program will start. The cooker will beep 3 times and the cooker will enter the cooking cycle. The LED will display the remaining cooking time. If using Delay Start, the light indicator will light up and 10 seconds later, the delay timer will start to count down. Cooking begins when count down is finished.

4. When the cooking cycle has finished, the cooker will beep and enter the Keep Warm mode if the Keep Warm program is turned ON. The LED will display the elapsed time (such as L0:02). If Cancel is not pressed, the cooker will turn OFF after 10 hours.

5. When the cooking cycle has finished, the cooker will beep and enter the Keep Warm mode if the Keep Warm program is turned ON. The LED will display the elapsed time (such as L0:02). If Cancel is not pressed, the cooker will turn OFF after 10 hours.

6. If the lid is on, remove it by turning counterclockwise and lifting.

7. Press Cancel. The LED displays OFF, indicating that the cooker is in standby mode.

Yogurt

1.Pasteurize Milk



- a) Add milk to the inner pot.
- b) Select the Yogurt program.
- c) Press the Yogurt key repeatedly to select the More mode. 10 seconds after choosing the settings, the heating process will begin. The cooker will beep 3 times and the LED will display boil.
- d) When finished, the cooker will beep and the LED will display Yogt.

If making yogurt in smaller containers: add 1 cup/250 ml of water to the inner pot, place the steam rack in the inner pot and put the containers on top of the steam rack, close the lid, select the Steam program and use the + / - buttons to set time to 2 minutes. Make sure the steam release handle is in Sealing position when running the Steam program as this is a pressure cooking program. When complete, use the natural release method (page 17) and continue with steps 2 to 4.

*The advantages of pasteurizing milk are to 1) kill pathogens and harmful bacteria, and 2) denature milk proteins for easier absorption by the body

2.Cool Milk

- a) Remove the inner pot and place it on a wire rack.
- b) Allow the milk to cool to 115°F/46°C. Test the milk temperature with a thermometer.

3.Add Starter Culture

- a) Add starter culture to the warm milk in the inner pot.
- b) Replace the inner pot and close the lid.

4.Ferment Yogurt

- a) Select the Yogurt program and adjust to Normal mode.

b) Press + / - to set fermentation time.

c) When finished, the cooker will beep and the LED will display Yogt.



Cooking and Safety Tips

- Extreme caution should be taken when moving the steam release handle to the Venting position. Keep hands and face away from the steam release openings. Failure to comply may result in scalding or serious injury.
- Do not attempt to open the lid until pressure inside the cooker is completely released. As a safety feature, until the float valve drops down the lid is locked and cannot be opened. Do not force lid open.
- When opening the lid, the inner pot may adhere to the lid. This is caused by vacuum due to cooling. Make sure the steam release handle is in the Venting position and all the steam is released.
- If the float valve is stuck, move the steam release handle to the Venting position. Once all the steam is released, push the float valve down with a pen or long utensil.
- Always add at least 18 fl oz. / 500 ml of water or other liquids so enough steam can be generated to cook under pressure. These include cooking sauces, wine, beer, stocks, juices of fruits and vegetables. Oils, oil-based sauces and thick cooking sauces do not have enough water content and will not account for the required liquid volume.
- Time to pressure and cooking time will vary according to the temperature and quantity of the ingredients. Food that is cold or frozen will take longer to cook than food that is at room temperature.
- When using the Delay Start program, allow sufficient cooling down time before serving.
- The Delay Start program is not recommended for porridge, oatmeal or other foamy and thick liquids. Cooking progresses should be monitored when cooking these foods.

Specifications

Model	Power Supply	Rated Power	Volume	Inner Pot Dimensions	Product Dimensions	Weight
DUO Mini	120V~ 60Hz	700 W	3 quart	19.8x12.7cm 7.8x5 in.	29x25.5x28.5 cm 11.4x10x11.2 in.	3.9 kg 8.6 lbs
IP-DUO60 V3		1000 W	6 quart	15.7x 23.9cm 6.2 x 9.4 in.	33 x 31 x 32 cm 13 x 12.2 x 12.6 in.	6.75 kg 14.8 lbs
IP-DUO80 V2		1200 W	8 quart	17.5 x 26.4 cm 6.9 x 10.4 in	37.6 x 33.8 x 36.1 cm 14.8 x 13.3 x 14.2 in	8.21 kg 18 lbs

Care and Cleaning

Unplug your Instant Pot® and let it cool to room temperature before cleaning.

- All Instant Pot® inner pots, pressure cooker lids, glass lids, and accessories are dishwasher safe.
- Remove the inner pot and lid, and wash with detergent. Rinse with clear water and wipe dry with a soft cloth.
- Wipe the inner cooker base rim and slot with dry cloth to prevent rusting of the exterior cooker rim.
- Remove the sealing ring and anti-block shield from the underside of the lid. Wash with warm, soapy water, rinse with clear water and wipe dry with a soft cloth.
- The sealing ring must always be properly positioned on the underside of the lid.
- Clean the outer body with a damp soft cloth or sponge.
- Never use harsh chemical detergents, scouring pads or powders on any of the parts or components.
- Periodically check that the steam release valve and float valve are in good working order and free of debris.

Troubleshooting



Problem	Possible reason	Solution
Difficulty with closing the lid	Sealing ring not installed properly	Position the sealing ring
	Float valve in the popped-up position	Slightly press the float valve downward
Difficulty with opening the lid	Pressure inside the cooker	Position the steam release handle to the venting position to release the internal pressure. Open the lid after the pressure is completely released
	Float valve stuck at the popped-up position due to debris or stickiness from food	Ensure steam is completely released by turning steam release handle to Venting position, Press the float valve lightly with a long utensil. Open the lid cautiously and clean the float valve and lid before the next use.
Steam leaks from the side of the lid	No sealing ring	Install the sealing ring
	Sealing ring damaged	Replace the sealing ring
	Food debris attached to the sealing ring	Clean the sealing ring
	Lid not closed properly	Open then close the lid again
Steam leaks from float valve for over 2 minutes	Food debris on the float valve silicone seal	Clean the float valve silicone seal
	Float valve silicone ring worn- out or missing	Replace the float valve silicone ring
Float valve unable to rise	Too little food or water in inner pot	Add water according to the recipe
	Float valve obstructed by the lid locking pin	Close the lid completely, see “Getting Started” section

Steam comes out from the steam release valve non-stop	Steam release valve not in sealing position	Turn the steam release handle to the sealing position
	Pressure control fails	Contact support
Display flashes "Lid"	Lid is not in the correct position for the selected program	Close the lid for pressure cooking or open the lid for sautéing
Display remains blank after connecting the power cord	Bad power connection or no power	Inspect the power cord to ensure a good connection, check if the power outlet is active
	Cooker's electrical fuse has blown	Contact support
All LEDs flash with a code appearing on screen and the warning beep is ON		
C1	Faulty temperature sensor	Contact support
C2	Faulty temperature sensor	Contact support
C5	Temperature is too high because inner pot is not placed into the cooker base	Insert the inner pot properly
	Temperature is too high because there is no water in inner pot	Put food and water in the inner pot
C6	Faulty pressure sensor	Contact support
C6H	Faulty HIGH pressure sensor	
C6L	Faulty LOW pressure sensor	
Rice is half cooked or too hard	Too little water	Adjust dry rice and water ratio according to recipe
	Lid opened too early	After cooking cycle completes, leave the lid on for 5 more minutes

Rice is too soft	Too much water	Adjust dry rice and water ratio according to recipe
The cooker beeps 5 times and displays 'burn' message after the cooking program started.	Indication of overheating. The cooker has reduced the heating temperature, and may not reach cooking pressure	Starch deposits at the bottom of the inner pot might have clogged heat dissipation. Stop the cooker and inspect the bottom of the inner pot
Occasional ticking or light cracking sound	The sound of power switching and expanding pressure board when changing temperature	This is normal
	Bottom of the inner pot is wet	Wipe bottom of the inner pot dry before cooking

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.