


Getting to know your appliance

Control panel

You can set your appliance's various functions on the control panel. The current settings are shown on the display.

The overview shows the control panel when the appliance is switched on with a clock

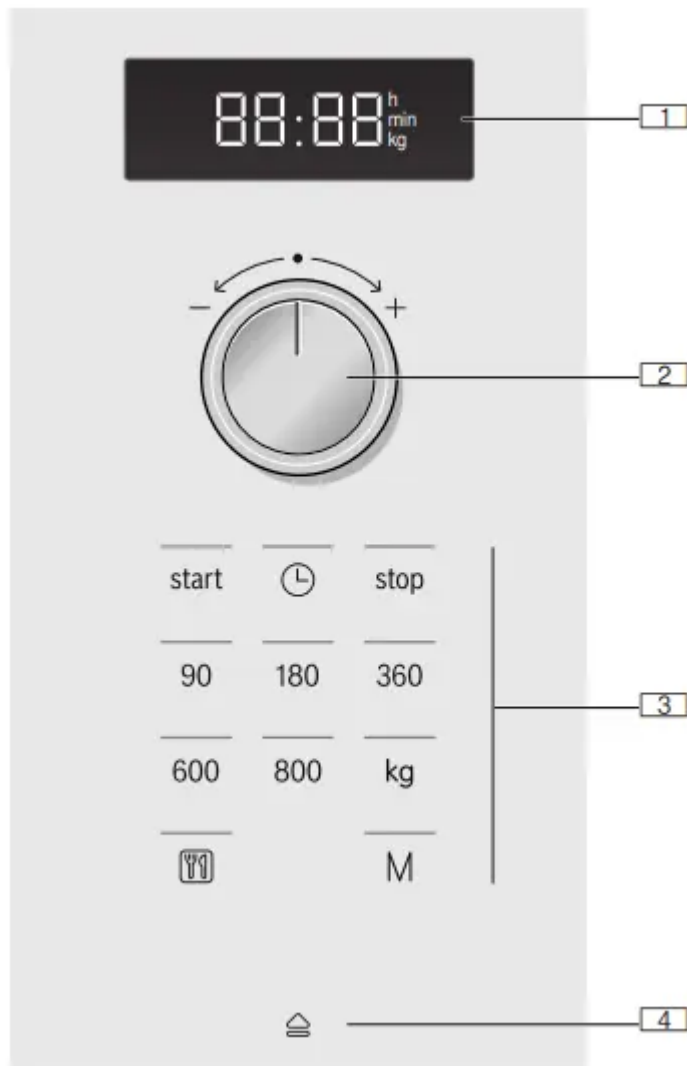

time that has been set.




1. **Display** : For clock and cooking times
2. **Rotary selector** : For setting the clock and cooking times or for setting automatic programmes
3. **Buttons**
4. **Automatic door opening button**

Controls

You will find a brief explanation of the various buttons below. These buttons allow you to set your appliance simply and directly.

Buttons and their meaning

You will find a brief explanation of the various buttons below.

Buttons	Meaning
Symbol	
start	Start the appliance
	Setting the time
stop	Stop or pause the appliance
90	Select a microwave power output of 90 watts
180	Select a microwave power output of 180 watts
360	Select a microwave power output of 360 watts
600	Select a microwave power output of 600 watts
800	Select a microwave power output of 800 watts
kg	Select a weight for the programmes
	Select automatic programmes
M	Select the memory
	Open appliance door

Rotary selector

The rotary selector is used to alter the default values and set values.

The rotary selector is retractable. Press on the rotary selector to lock it in or out.

Automatic door opening

The appliance door springs open if you activate the automatic door opening. You can fully open the appliance door manually.

The automatic door opening does not work in the event of a power cut. You can open the door manually

Cooling fan

The appliance is equipped with a cooling fan. The fan may run on even if the oven has been switched off.

Changing the signal duration

You will hear a signal when the appliance is switched off. You can change the duration of the acoustic signal.

Press the "start" button for approx. 6 seconds.

The new signal duration is adopted.

The clock reappears.

The following are possible:

Short signal duration - 3 tones

Long signal duration - 30 tones.

Accessories

Turntable



Note: Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.

Roller ring



Special accessories

Special accessories can be purchased from our aftersales service, from specialist retailers, or online. You will find a comprehensive range of products in our brochures and online.

Their availability and whether it is possible to order them online varies from country to country. Please see our sales brochures for more details.


Before using for the first time

Cleaning the cooking compartment and putting the turntable in place

Before using the appliance to prepare food for the first time, you must clean the cooking compartment and accessories.



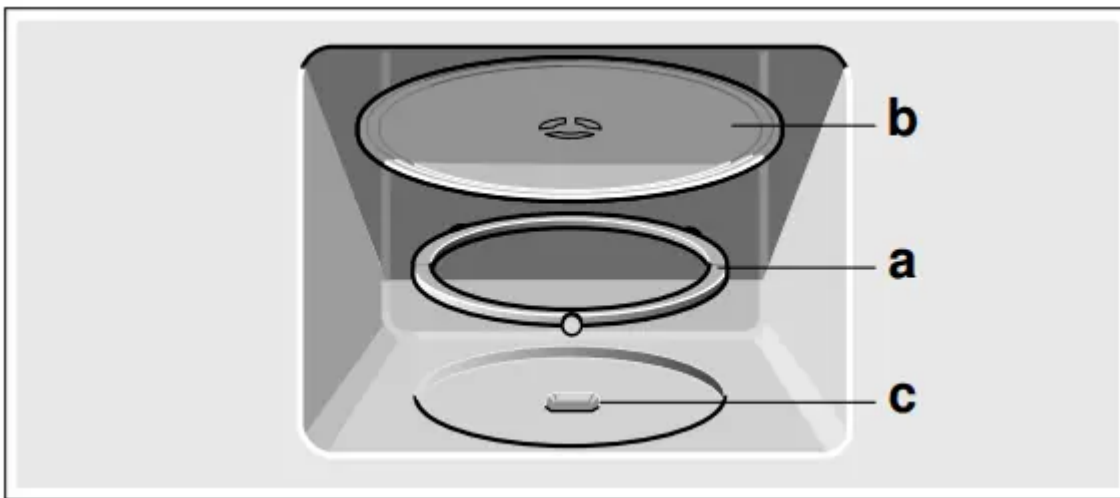

How to put the turntable in place

1. Place the roller ring **a** into the recess in the cooking compartment.
2. Make sure that the turntable **b** engages in drive **c** in the center of the cooking compartment floor.




Setting the clock

When the appliance is first connected or after a power cut, three zeros will appear in the display panel.

1. Press the  button,  appears in the display and the indicator lamp above the  button lights up.
2. Set the clock using the rotary selector.
3. Press the  button again. The current time is set.

Hiding the clock

Press the  button and then press Stop. The display is blank.

Resetting the clock

Press the **Clock** button. "12:00" appears in the display. Make settings as detailed in points 2 and 3.

Change the clock, e.g. from summer to winter time

Set as described in point 1 to 3.

Cleaning the cooking compartment and accessories

To eliminate the new-appliance smell, wipe down the cooking compartment with hot soapy water when it is empty.~ "Cleaning" on page 14

Microwave

Cookware

Not all cookware is microwavable. So that your food is heated and the appliance is not damaged, only use microwavable cookware.

Suitable cookware

Heat-resistant cookware made of glass, glass ceramic, porcelain, ceramic or heat-resistant plastic are suitable. These materials allow microwaves to pass through.

Tip: Make sure that there is no leftover packaging, such as polystyrene pellets, in the cooking compartment. Wipe the smooth surfaces in the cooking compartment with a soft, damp cloth.

Cleaning the accessories

Clean the accessories thoroughly using soapy water and a dishcloth or soft brush.

You can also use serving dishes. This saves you having to transfer food from one dish to another. You should only use cookware with decorative gold or silver trim if the manufacturer guarantees that they are suitable for use in microwaves.

Unsuitable cookware

Metal cookware is unsuitable. Metal does not allow microwaves to pass through. Food in covered metal containers will remain cold.

Caution!

Creation of sparks: Metal – e.g. a spoon in a glass – must be kept at least 2 cm from the cooking compartment walls and the inside of the door. Sparks can irreparably damage the glass on the inside of the door.

Cookware test

Never switch on the microwave unless there is food inside. The short cookware test is the only exception to this rule.

Perform the following test if you are unsure whether your cookware is suitable for use in the microwave.

1. Heat the empty cookware at maximum power for ½ to 1 minute.

2. Check the temperature of the cookware during this time.

The cookware should remain cold or warm to the touch.

The cookware is unsuitable if it becomes hot or sparks are generated. In this case, stop the test.


Microwave power settings

Microwave power setting	Suitable for
90 W	Defrosting delicate foods
180 W	Defrosting and continued cooking
360 W	Cooking meat and heating delicate foods
600 W	Heating and cooking food
900 W	Heating liquids

Setting the microwave

Example: Microwave power output 600 W, cooking time 5 minutes

1. Press the required microwave power setting. The indicator light above the button lights up.
2. Use the rotary selector to set a cooking time.

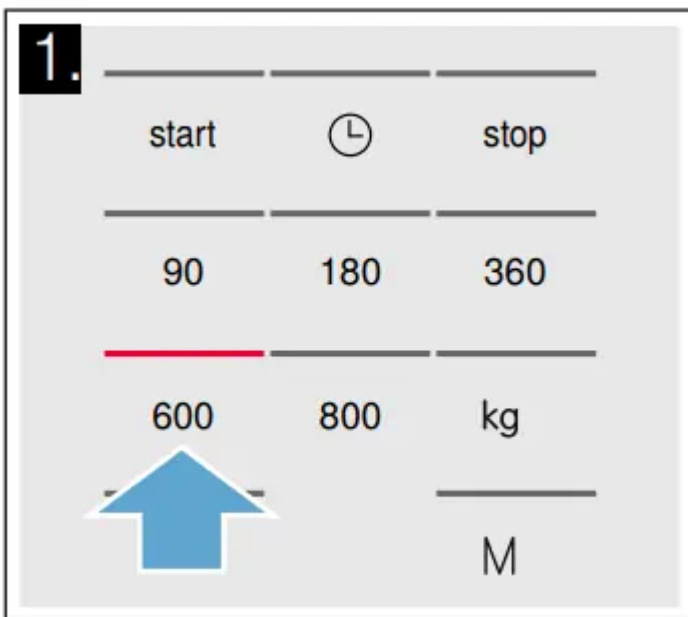



3. Press the "Start" button. The cooking time counts down in the display

The cooking time has elapsed

A signal sounds. Open the appliance door or press Stop. The clock reappears.

Changing the cooking time

This can be done at any time. Change the cooking time using the rotary selector.

Pausing the appliance

Touch the Stop button once or open the appliance door. This pauses the appliance. The indicator above the Stop button will light up. After closing the door, touch the Start button again.

Canceling operation

Press the Stop button twice, or open the door and press the Stop button once.

Memory



The memory function allows you to save the setting for a dish and call it up at any time.

The memory function is useful if you prepare one dish particularly frequently.

Saving memory settings.

Example: 360 W, 25 minutes

1. Press the **M** button. The indicator light above the button lights up.
2. Press the required microwave power setting. The indicator light above the button lights up and "1:00 min" appears in the display.

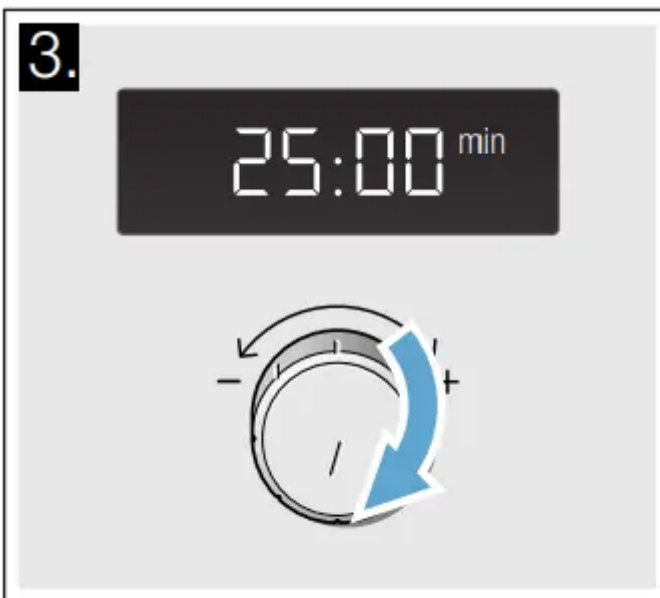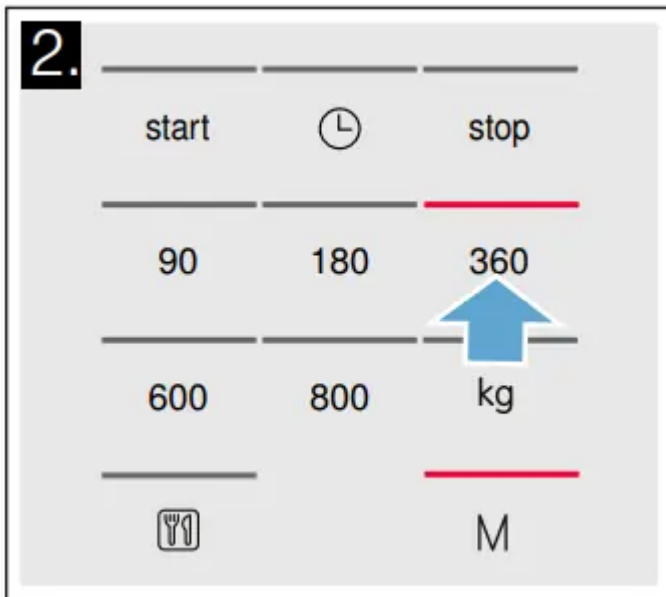

3. Use the rotary selector to set the cooking time.

4. Confirm by pressing the **M** button. The clock reappears. The setting has been saved.

Starting the memory

It is very easy to start the saved programme. Place your meal into the appliance. Close the appliance door.

1. Press the **M** button. The saved settings are displayed.
2. Press the "Start" button.

The cooking time counts down in the display.

The cooking time has elapsed

A signal sounds. Open the appliance door or press Stop. The clock reappears.

Pausing the appliance

Touch the Stop button once or open the appliance door. This pauses the appliance. The indicator above the Stop button will light up. After closing the door, touch the Start button again.


Canceling


Press the "stop" button twice, or open the door and press the "stop" button once.


Programs

Setting a program

Once you have selected a program, make settings as follows:

1. Press the  button repeatedly until the required program number appears. The indicator light above the button lights up.
2. Press the **Kg** button. The indicator light above the button lights up and a suggested value appears in the display

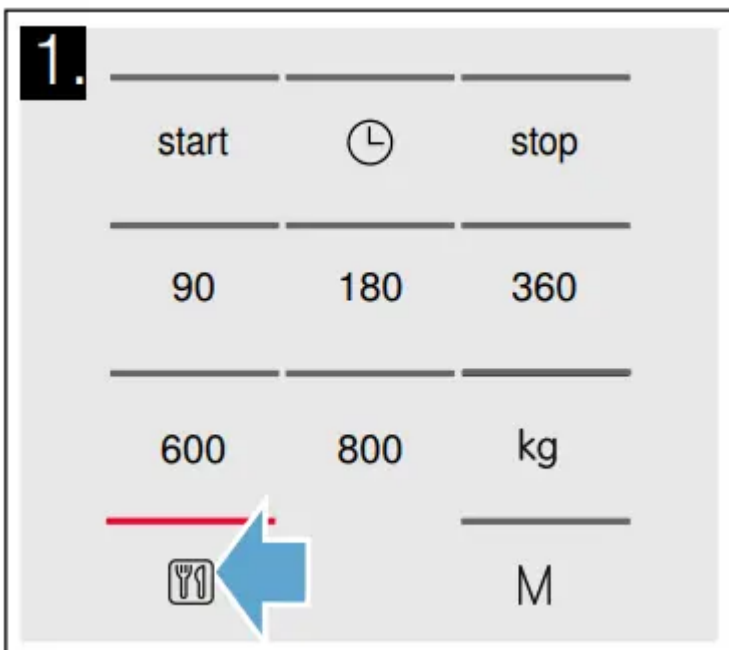

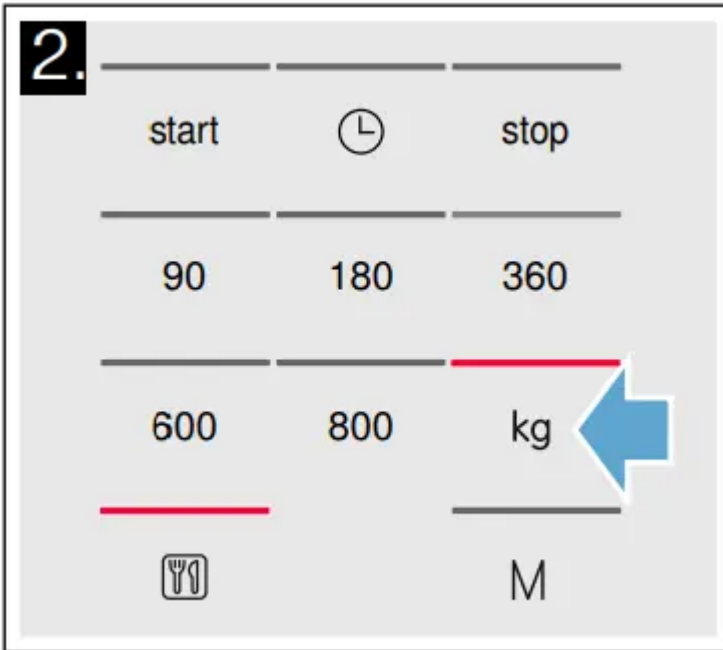

3. Use the rotary selector to set the weight of the dish.

4. Press the "Start" button.

The cooking time for the program starts counting down.

The cooking time has elapsed

A signal sounds. Open the appliance door or press Stop. The clock reappears.

Correction

Press the "stop" button twice and reset. Pausing the appliance Touch the Stop button once or open the appliance door. This pauses the appliance. The indicator above the Stop button will light up. After closing the door, touch the Start button again.

Canceling

Press the "stop" button twice, or open the door and press the "stop" button once.

Defrosting using the automatic programs

You can use the 4 defrosting programs to defrost meat, poultry and bread.

Notes

■ Preparing food

Use food that has been frozen at -18 °C and stored in portion-sized quantities that are as thin as possible. Take the food to be defrosted out of all packaging and weigh it. You need to know the weight to set the program.

■ Liquid will be produced when defrosting meat or poultry. Drain off this liquid when turning meat and poultry and under no circumstances use it for other purposes or allow it to come into contact with other foods.

■ Ovenware

Place the food in a microwaveable shallow dish, e.g. a china or glass plate, but do not cover.

■ Resting time

The defrosted food should be left to stand for an additional 10 to 30 minutes until it reaches an even temperature. Large pieces of meat require a longer standing time than smaller pieces. Flat pieces of meat and items made from minced meat should be separated from each other before leaving to stand. After this time, you can continue to prepare the food, even though thick pieces of meat may still be frozen in the middle. The giblets can be removed from poultry at this point.

■ Signal

For some programs, a signal sounds after a certain time. Open the appliance door and separate the food out or turn the meat or poultry. Close the door and press the Start button.

Programme no.		Weight range in kg
	Defrost	
P 01	Minced meat	0.20 - 1.00
P 02	Pieces of meat	0.20 - 1.00
P 03	Chicken, chicken pieces	0.40 - 1.80
P 04	Bread	0.20 - 1.00

Cooking with the automatic programs

With the 3 cooking programs, you can cook rice, potatoes or vegetables.

Notes

- **Ovenware** The food must be cooked in microwaveable cookware with a lid. For rice, you should use a large, deep dish.
- **Preparing food** Weigh out the food. You need to know the weight to set the program. Rice: Do not use boil-in-the-bag rice. Add the required amount of water, as specified on the packaging. This is usually two or three times the quantity of rice. Potatoes: For boiled potatoes, cut the fresh potatoes into small, even-sized pieces. Add one tablespoon of water for each 100 g boiled potatoes, and a little salt. Fresh vegetables: Weigh out the fresh, trimmed vegetables. Cut

the vegetables into small, even-sized pieces. Add a tbsp water for each 100 g vegetable.

- **Signal** While the program is running, a signal sounds after some time. Stir the food.
- **Resting time** Once the program has finished, stir the food again. You should leave it to stand for another 5 to 10 minutes until it reaches an even temperature. The cooking result will depend on the quality and consistency of the food.

Programme no.	Weight range in kg	
	Cooking	
P 05	Rice	0.05 - 0.2
P 06	Potatoes	0.15 - 1.0
P 07	Vegetables	0.15 - 1.0

Basic settings

Your appliance has basic settings that you can change to suit your needs

Setting	Options
1 Button tone	On* Switched on
	OFF Switched off Button tone (will remain active for the start and stop buttons)
2 Demo mode	dEO The appliance is switched off. You can use the buttons and the display, but the buttons will not activate any function on the appliance (i.e. the microwave has no power). Demo mode is mainly used by dealers.


* Factory setting (factory settings may vary depending on the appliance model)

You can change the button tone on your appliance if you wish.

Changing the button tone


The appliance must be switched off when you do this.

1. Press and hold the **start** and **stop** buttons at the same time for a couple of seconds.

 will appear in the display.

2. Touch the **start** button.

 will start flashing in the display.

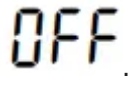3. Turn the rotary selector to .

4. Touch the **start** button. The setting has been applied.

5. Touch the **stop** button.

The button tone has been switched off.

You can change this setting at any time.

Cleaning

Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information in the table.

Do not use:

- Harsh or abrasive cleaning agents.
- Metal or glass scrapers to clean the door panels.
- Metal or glass scrapers to clean the door seal.
- Hard scouring pads or sponges.
- Cleaning agents with a high alcohol content.

Wash new sponge cloths thoroughly before use.

Area	Cleaning product
Appliance front	Hot soapy water: Clean using a dish cloth and then dry with a soft cloth. Do not use metal or glass scrapers for cleaning.
Appliance front with stainless steel	Hot soapy water: Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin (e.g. egg white) immediately. Corrosion can form under these patches or splashes. Special stainless-steel cleaning products are available from the after-sales service or from specialist retailers. Do not use glass cleaners or metal or glass scrapers for cleaning.
Cooking compartment made of stainless steel	Hot soapy water or vinegar solution: Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.
Recess in the cooking compartment	Damp cloth: Water must not be allowed to run into the appliance through the turntable drive. Dry the turntable drive with a cloth.
Turntable and roller ring	Hot soapy water: When placing the turntable back into its recess, it must engage properly.
Door panels	Glass cleaner: Clean with a dish cloth. Do not use glass scrapers.

Troubleshooting

Fault table

Fault	Possible cause	Remedy/information
The appliance is not working	The plug is not plugged into the mains	Check whether other kitchen appliances are working
	Power failure	Check whether other kitchen appliances are working
	The circuit breaker/fuse is faulty	Check in the fuse box to make sure that the circuit breaker/fuse for the appliance is in working order
	Faulty operation	Switch off the circuit breaker/fuse for the appliance in the fuse box and switch it back on after approximately 10 seconds
Three zeros are lit on the display.	Power failure	Reset the time.
The microwave is not working.	The rotary selector has been accidentally turned.	Press the "stop" button.
	The "start" button has not been pressed after the setting was applied.	Press the "start" button or cancel the setting by pressing the "stop" button.
It is taking longer than usual for food to heat up	The microwave power output has been set too low.	Select a higher microwave power setting.
	A larger amount of food than usual has been placed in the appliance.	Double the amount – double the time.
	The food was colder than usual.	Stir or turn the food during heating.
The turntable is making a scraping or grinding noise.	Dirt or debris in the area around the turntable drive.	Clean the roller ring and the recess in the cooking compartment.

The microwave has stopped for no apparent reason.	The microwave has a fault.	If this fault recurs, please call the after-sales service.
An M is shown on the display.	The appliance is in demo mode	Deactivate demo mode. → "Basic settings" on page 13
Error message "E - 3"	Fault in automatic door opening system.	If an error message is displayed, switch the appliance off and on again; if the message disappears, it was a one-off problem. If the fault occurs again or the error message is still displayed, please contact the aftersales service and provide the fault code.

Technical specifications

Input voltage	230-240 V AC, 50 Hz
Power consumption	1270 W
Max. output power	800 W (IEC 60705)
Microwave frequency	2450 MHz
Circuit breaker/fuse rating	10 A
Dimensions (H/W/D)	
- Appliance	382 x 594 x 317 mm
- Cooking compartment	201 x 308 x 282 mm
VDE approved	Yes
CE mark	Yes

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

