


Getting to Know Your TV

FRONT PANEL



Remote Sensor and Power Indicator
When using the remote, aim it directly at this sensor.
The power indicator flashes when the TV turns on, then goes out after several seconds.
To keep the power indicator on, see **Turning the Power Indicator On or Off** on page 23.

REAR PANEL

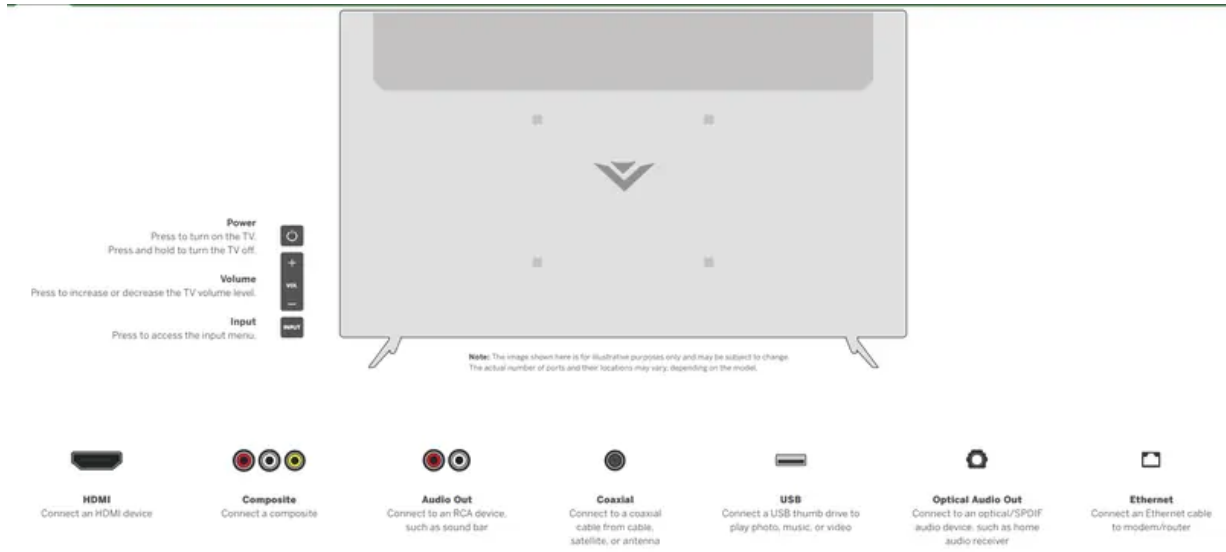

Connecting a device — AUDIO & VIDEO CABLE TYPES



HDMI CABLE



HDMI

COAXIAL CABLE



Coaxial

COMPOSITE (AV) CABLE



Y



L



R

Your TV can be used to display output from most devices.

1. Verify that your device has a video port that matches an available port on the TV (HDMI, Composite, etc.).
2. Connect the appropriate cable (not included) to the TV and the device.
3. Turn the TV and your device on.
4. Set the TV's input to match the connection you used (HDMI-1, HDMI-2, etc.).


Connecting a device — AUDIO CABLE TYPES

Your TV can be output sound to an audio device, such as a receiver or sound bar.

HDMI CABLE



COMPONENT AND/OR COMPOSITE CABLE

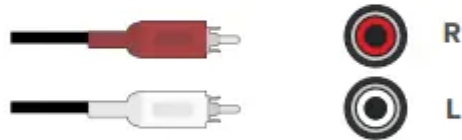

OPTICAL/SPDIF CABLE



1. Verify that your device has an audio port that matches an available port on the TV (optical, RCA, etc).
2. Connect the appropriate cable (not included) to the TV and the device.
3. Turn the TV and your device on.


WALL-MOUNTING THE TV

First you will need a wall mount. Consult the provided table below to find the appropriate mount for your TV.

Be sure the mount you choose is capable of supporting the weight of the TV.


To install your TV on a wall:

1. Disconnect any cables connected to your TV.
2. Place the TV face-down on a clean, flat, stable surface. Be sure the surface is clear of debris that can scratch or damage the TV.
3. If attached, remove the stands by loosening and removing the screws.
4. Attach your TV and wall mount to the wall by carefully following the instructions that came with your mount. Use only with a UL-listed wall mount bracket rated for the weight/load of your TV.

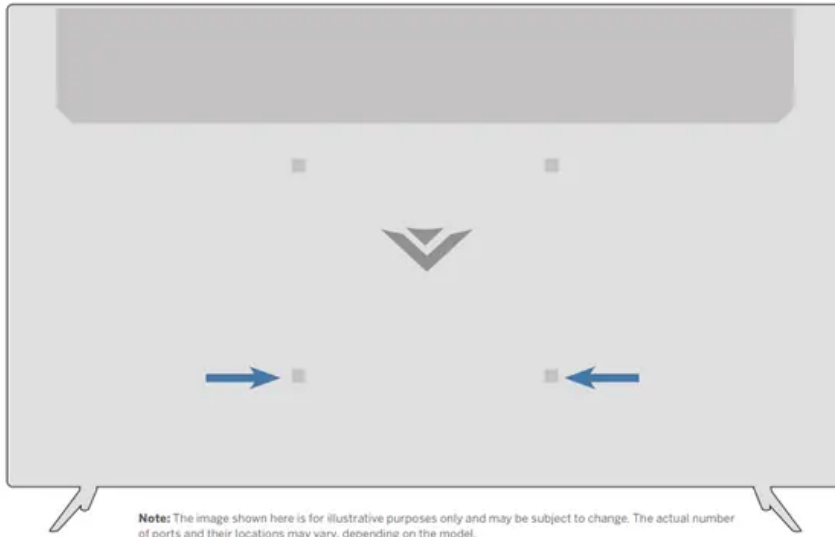

| | P65Q9-H1 | P65Q9-H61 | P75Q9-H1 | P75Q9-H61 |
|--------------------------|---------------------|---------------------|---------------------|---------------------|
| Screw Size: | M6 | M6 | M8 | M8 |
| Hole Depth: | 14 mm | 14 mm | 14 mm | 14 mm |
| Hole Pattern: | 400 mm x 400 mm | 400 mm x 400 mm | 400 mm x 400 mm | 400 mm x 400 mm |
| Weight w/o Stand: | 54.28 lb (24.62 kg) | 54.28 lb (24.62 kg) | 74.37 lb (33.73 kg) | 74.37 lb (33.73 kg) |

USING THE REMOTE

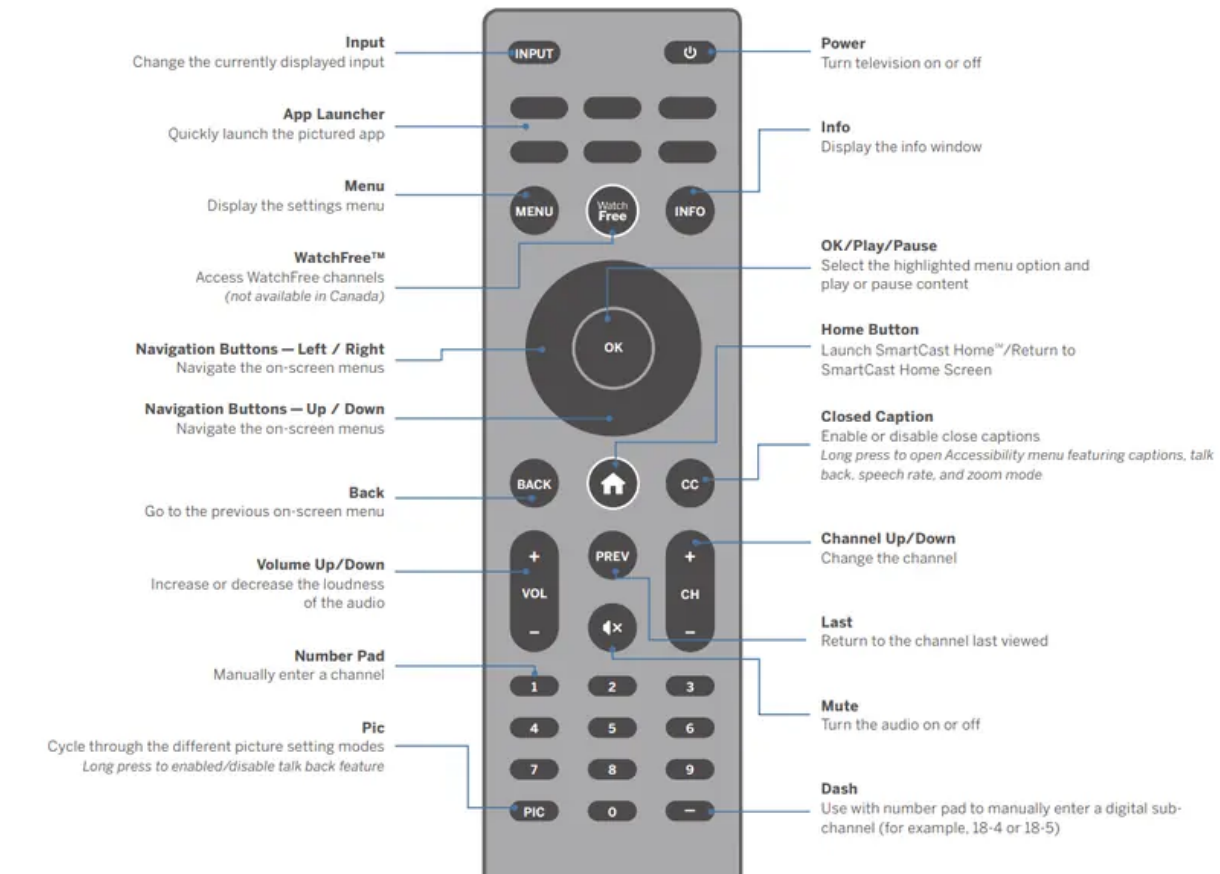


Completing the First-Time Setup

Before you begin the first-time setup:

- Your TV should be installed and the power cord should be connected to an electrical outlet.
- If you have a wireless network, have the network password ready.
- If you are connecting to your network with an Ethernet cable, connect it to the Ethernet port on the TV.

The first time you turn on the TV, the on-screen instructions will guide you through each of the steps necessary to get your TV ready for use:

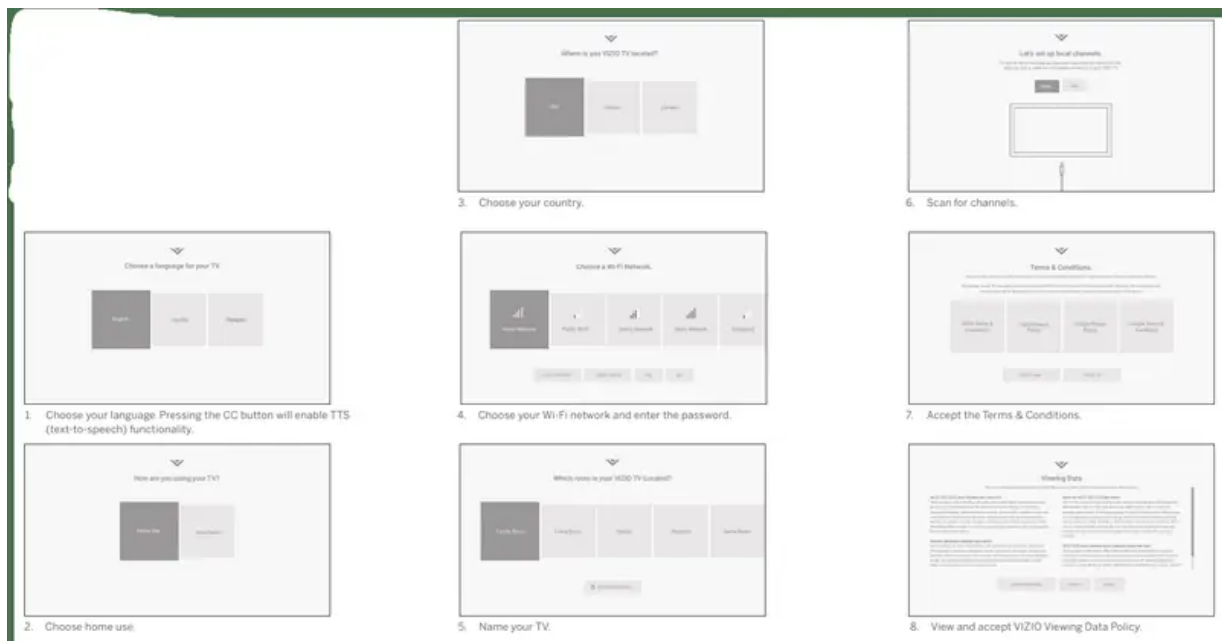

Using the On-Screen Menu

Your TV features an easy-to-use on-screen menu .


To open the on-screen menu, press the MENU button on the remote.

From this menu, you can:

- Adjust the picture settings
- Adjust the audio settings
- Adjust the network settings
- Adjust the TV channel settings
- Adjust accessibility settings
- Adjust TV system settings
- Access admin and privacy settings



- View the user manual

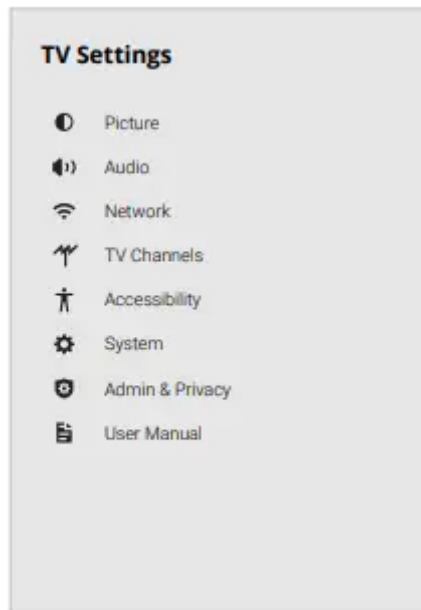

NAVIGATING THE ON-SCREEN MENU

To open the on-screen menu:


1. Press the MENU button on the remote.
2. Use the Navigation buttons to highlight a menu option, and press the OK button to select that option.

CHANGING THE INPUT SOURCE

External devices, such as DVD players, Blu-ray players, and video game consoles, can be connected to your TV.

To use one of these devices with your TV, you must first change the input source using the input menu. To change the input sources:

1. Press the INPUT button on the remote. The input menu is displayed.
2. Use the Navigation buttons or the INPUT button on the remote to highlight the input you wish to view. The corresponding inputs are named on the back of your TV.
3. Press OK or release the INPUT button. The selected input is displayed.

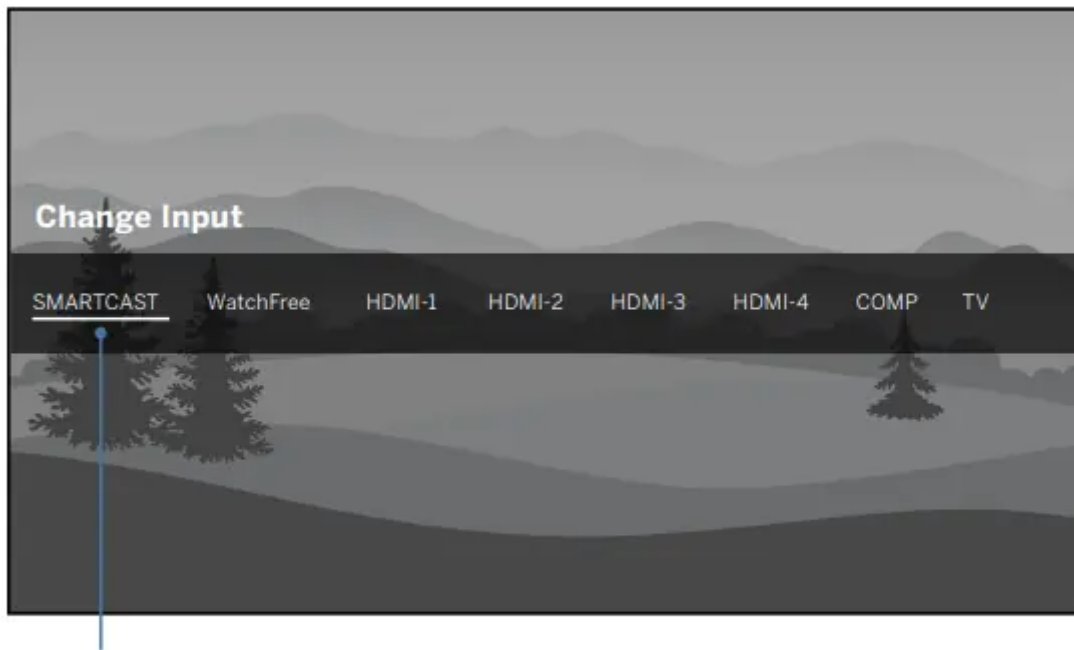

Input Name

The underlined input on the left is the current input selected. Inputs may vary by TV.

ADJUSTING THE PICTURE SETTINGS


Your TV can be adjusted to suit your preferences and viewing conditions.

To adjust the picture mode settings: Menu > Picture > Picture Mode

1. Use the Navigation buttons on the remote to highlight Picture Mode, then use the Left/Right Navigation buttons to change the picture mode:

- Vivid — Sets the picture settings to values that produce a brighter, more vivid picture.
- Bright — Sets the picture settings to values ideal for watching TV in a brightly-lit room.
- Calibrated — Sets the picture settings to the default settings.
- Calibrated Dark — Sets the picture settings to values ideal for watching TV in a dark room.
- Game — Reduces throughput delays and optimizes the picture settings for displaying game console output. Also the preferred picture mode for computer mode.
- Sports — Sets the picture settings to values ideal for watching sport events with motion control setting.

2. To manually change each of the picture settings, use the Up/Down Navigation buttons on the remote to highlight that picture setting, then use the Left/Right Navigation buttons to adjust the setting:

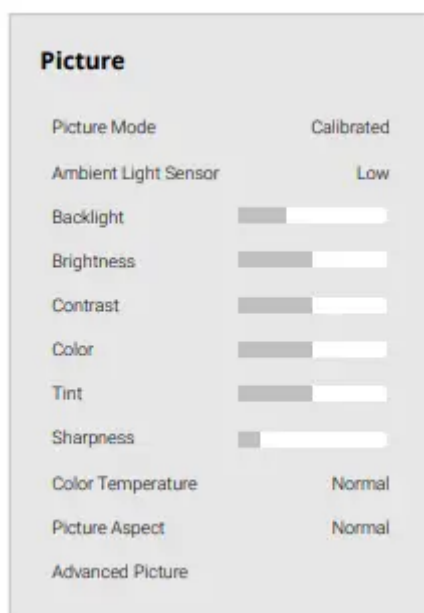


- Ambient Light Sensor — Detects your room's light level and automatically adjusts the background. Select Low for the darkest picture or High for the brightest picture. Select Off for manual backlight control.
- Backlight (SDR content) or Tone Mapping (HDR content) — Adjusts the LED brightness to affect the overall brilliance of the picture.
- Brightness — Adjusts the black level of the picture. When this setting is too low, the picture may be too dark to distinguish details. When this setting is too high, the picture may appear faded or washed out.
- Contrast — Adjusts the white level of the picture. When this setting is too low, the picture may appear dark. When this setting is too high, the picture may appear faded or washed out. If the setting is too high or too low, detail may be difficult to distinguish in dark or bright areas of the picture.
- Color — Adjusts the intensity of the picture colors.
- Tint — Adjusts the hue of the picture. This setting is useful in adjusting the flesh tones in the picture. If flesh appears too orange, reduce the level of color before adjusting tint.
- Sharpness — Adjusts the edge sharpness of picture elements. It can be used to sharpen non-HD (high definition) content; however, it will not produce detail that does not otherwise exist.

Adjusting the Color Temperature

- Adjusting the color temperature changes the white balance of the picture.
- To adjust the color temperature: Menu > Picture > Color Temperature


- Use the Navigation buttons on the remote to highlight a color temperature preset and then press OK.
 - Warm — Produces an orange-hued picture.
 - Cool — Produces a blue-hued picture.
 - Normal — Optimized for television viewing

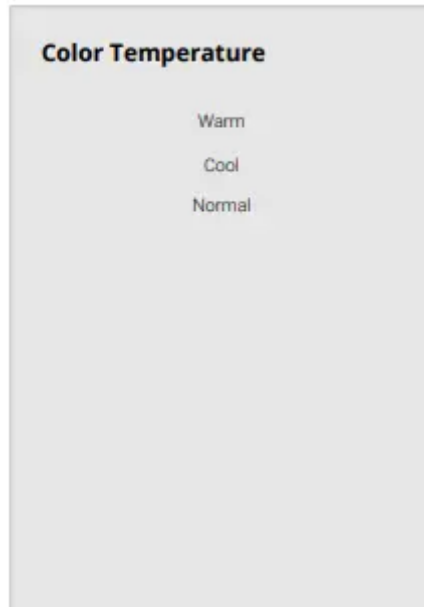

ADJUSTING THE AUDIO SETTINGS

To adjust the audio settings: Menu > Audio

Use the Navigation buttons to highlight the setting you wish to adjust, then press Left/Right Navigation buttons to change the setting:

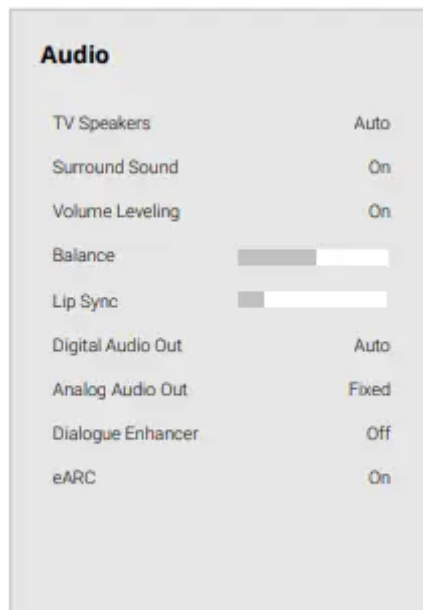

- TV Speakers — Built-in speakers automatically turn off if a sound bar is discovered. Turn the built-in speakers On or Off.
- Surround Sound — When set to On, enables surround sound suitable for sports and TV shows. Virtual:X™ adds virtualized height best for movies.
- Volume Leveling — When set On, DTS TruVolume™ audio solution levels the speaker volume.
- Balance — Balance the audio loudness between the left and right speakers.
- Lip Sync — Synchronize the display image with the audio track.
- Digital Audio Out — Select the digital audio output format for both the optical and HDMI ARC audio devices. - To hear talk back when Talk Back function is enabled, digital audio out must be set to PCM.
- Analog Audio Out — Select Variable if you are controlling the volume with the remote. Select Fixed if an external audio device (sound bar or AV receiver) will control the volume.
- Dialogue Enhancer — If enabled and the signal source includes Dolby 5.1 AC-4 audio then clarity of dialogue is enhanced.
- eARC — Toggle between ARC (Off) and eARC (On) for audio output using HDMI 1. If On, audio is sent using eARC and is uncompressed. If Off, audio is sent using ARC and some audio formats may play in standard Dolby Audio, DTS Digital Surround, or PCM.
- Equalizer — Only available when Surround Sound is set to OFF. Boosts or attenuates loudness at different frequencies.

ADJUSTING THE NETWORK SETTINGS

Your TV is Internet-ready, featuring both an Ethernet port and built-in high-speed wireless internet.

Connecting to a Wireless Network



- To connect to a wireless network whose network name (SSID) is being broadcast: Menu > Network > Choose your network > Enter in the password > Connect
- To forget a saved network: Highlight a saved wireless access point > OK > Forget
- If you do not see your wireless network displayed, click on: More Access Points > Highlight your wireless network > Enter in the password > Connect

Changing the Manual Setup Settings

Advanced users can fine-tune the network settings using the Manual Setup feature. The security settings on your router may require you to enter the TV's MAC address.

To change advanced network settings: Menu > Network > Manual Setup > DHCP > Off

| Manual Setup | |
|---------------------|--------------|
| DHCP | Disconnected |
| IP Address | _____ |
| Subnet Mask | _____ |
| Default Gateway | _____ |
| Pref. DNS Server | _____ |
| Alt DNS Server | _____ |
| RJ45 Mac | 00:00:00:00 |
| Wireless Mac | 00:00:00:00 |

1. Use the Navigation and OK buttons to adjust each setting:

- IP Address — The IP address assigned to the TV.
- Subnet Mask — The subnet Exit 2D.
- Default Gateway — Your network's default gateway address.
- Pref . DNS Server — Your preferred domain name server address.
- Alt . DNS Server — Your alternate domain name server address.

2. Use the Navigation buttons on the remote to highlight Save and press OK.

To find the TV's MAC address: Menu > Network > Manual Setup

You can find your TV's MAC address at the bottom of the list. The MAC addresses for the connections in use are displayed:

- RJ45 MAC — The Ethernet or RJ45 MAC address may be needed to set up your network when you have connected the TV to your network when you have connected the TV to your network with an Ethernet (Cat 5) cable.
- Wireless MAC — The Wireless (Wi-Fi) MAC address may be needed to connect your TV to your network with Wi-Fi.

Connecting to a Hidden Network

- To connect to a wireless network whose network name (SSID) is not being broadcast:
Menu > Network > Hidden Network > Enter the Access Point Name > Connect > Enter in the password
- Testing Your Network Connection
- To test your network connection: Menu > Network > Test Connection

Enter Access Point Name

Enter your access point name. This is used to connect to an access point with a hidden SSID.

—

| | | | | | | | | |
|-----|---|-----|-------|----------------------|---|---|---|---|
| a | b | c | d | e | f | g | h | i |
| j | k | l | m | n | o | p | q | r |
| s | t | u | v | w | x | y | z | 0 |
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
| .@# | ↑ | äëí | Space | <input type="text"/> | | | | |

SETTING UP TV CHANNELS

You can use the TV's Channels menu to:

- Find channels
- Find new channels
- Select channels to skip
- Select analog audio mode
- Select the language for digital audio
- Set parental controls

TV Channels

Find Channels

Find New Channels

Skip Channel

Analog Audio Stereo

Digital Audio English

Parental Controls


Scanning for TV Channels

The TV may need to scan for channels before it can display programs and their associated information. A channel scan is required for free over-the-air channels (using an antenna) and cable channels from an out-of-the-wall connection (without a cable box). Moving the TV to an area with different channels requires the TV to scan for channels again.

To perform an Auto Channel Scan: Menu > TV Channels > Find Channels Wait until the channel scan is 100% complete.

Highlight Done and press OK.

- If the channel scan is canceled, the channels that were already discovered are retained.

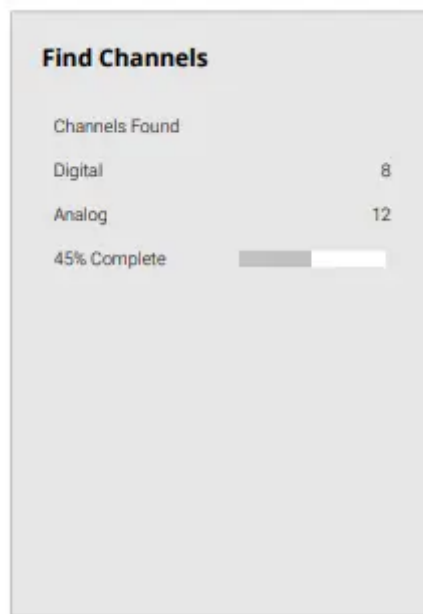


To perform a New Channel Scan: Menu > TV Channels > Find New Channels

A New Channel Scan saves the current channel map and scans for additional channels.

Skipping Channels

After a channel scan is completed, you may find that some channels are too weak to watch comfortably. There may also be some channels you do not want to view. You can remove these channels from the TV's memory with the Skip Channel feature.

To remove a channel:

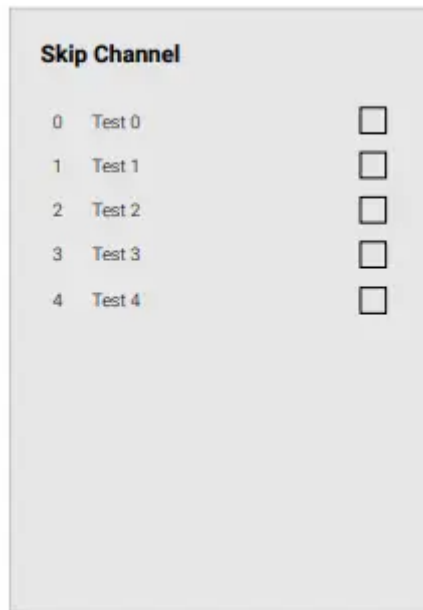


1. From the TV CHANNELS menu, highlight Skip Channel, and press OK. The SKIP CHANNEL menu is displayed.
2. For each channel you wish to remove, use the Up/Down Navigation buttons on the remote to highlight the channel and press OK. A ✓ appears to the right of each channel you select.

ACCESSIBILITY SETTINGS

VIZIO is committed to providing intuitive, user-friendly products. Your new VIZIO TV offers several accessibility features that can help you with easy navigation.

To access the Accessibility menu: Menu > Accessibility

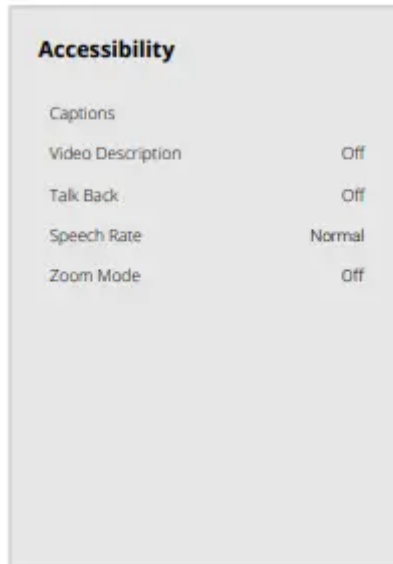

1. Captions — Activate and customize analog and digital closed captions.
2. Video Description — If included by the broadcaster, provides a narrated description of the action for the content.
3. Talk Back* — Enables your TV to speak all settings changes and adjustments using the remote in English.
4. Speech Rate — Adjusts the rate in which Text-to-Speech is spoken. Select Slow, Normal (default), or Fast.
5. Zoom Mode — Enlarges a section of the screen by approximately 200%.


To access the Video Description menu: Menu > Accessibility > Video Description > Off/On

Setting Up Closed Captioning

Your TV can display closed captions for programs that include them. Closed captions display a transcription of a program's dialogue.

To activate or deactivate Close Captions for current content: Menu > Accessibility > Captions > Closed Captions > Off/On — or —

Push the  button on the remote .

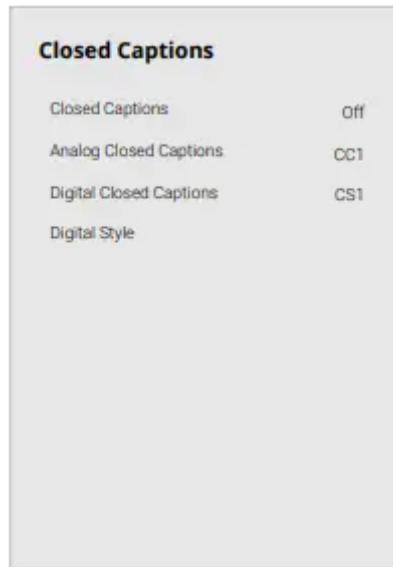

1. Use the Navigation buttons on the remote to highlight either Analog or Digital Closed Captions.
2. Use the Left/Right Navigation buttons on the remote to select the caption channel you wish to display

Changing the Appearance of Digital Closed Captions

- Digital closed captions can be displayed according to your preference. See the diagram on the next page for an explanation of the parts of the closed caption area.
- To change the appearance of digital closed captions: Menu > Accessibility > Captions > Digital Style
 1. Use the Left/Right Navigation buttons on the remote to select Custom. The Digital Style menu appears as shown.
 2. Use the Up/Down Navigation buttons on the remote to highlight the setting you wish to change, then use the Left/Right Navigation buttons to change the

settings (choose "As Broadcast" to keep default setting):


| Digital Style | |
|----------------------|--------------|
| Text Style | As Broadcast |
| Text Size | Large |
| Text Color | Blue |
| Text Opacity | As Broadcast |
| Text Edges | As Broadcast |
| Text Edges Color | As Broadcast |
| Background Color | As Broadcast |
| Background Opacity | As Broadcast |
| Window Color | As Broadcast |
| Window Opacity | As Broadcast |

- Text Style — Change the font used for the closed captioning text.
- Text Size — Make the text larger or smaller.
- Text Color — Change the color of the text.
- Text Opacity — Change the transparency of the text.
- Text Edges — Change the effects at the edges of the text, such as raising the edges or adding drop shadows.
- Text Edges Color — Change the color of the text edge effects.
- Background Color — Change the color of the background directly behind the text.
- Background Opacity — Change the transparency of the background directly behind the text.
- Window Color — Change the color of the closed captioning box.
- Window Opacity — Change the opacity of the closed captioning box.

Typical choices include:

- Opaque background, transparent window — Only a strip of background appears behind the text, expanding as the text appears. This is the typical "As Broadcast" mode.
- Opaque background and window in the same color — When text appears, the entire line fills with color at once.

In the example, the closed caption text is green, the background is black, and the window is red.

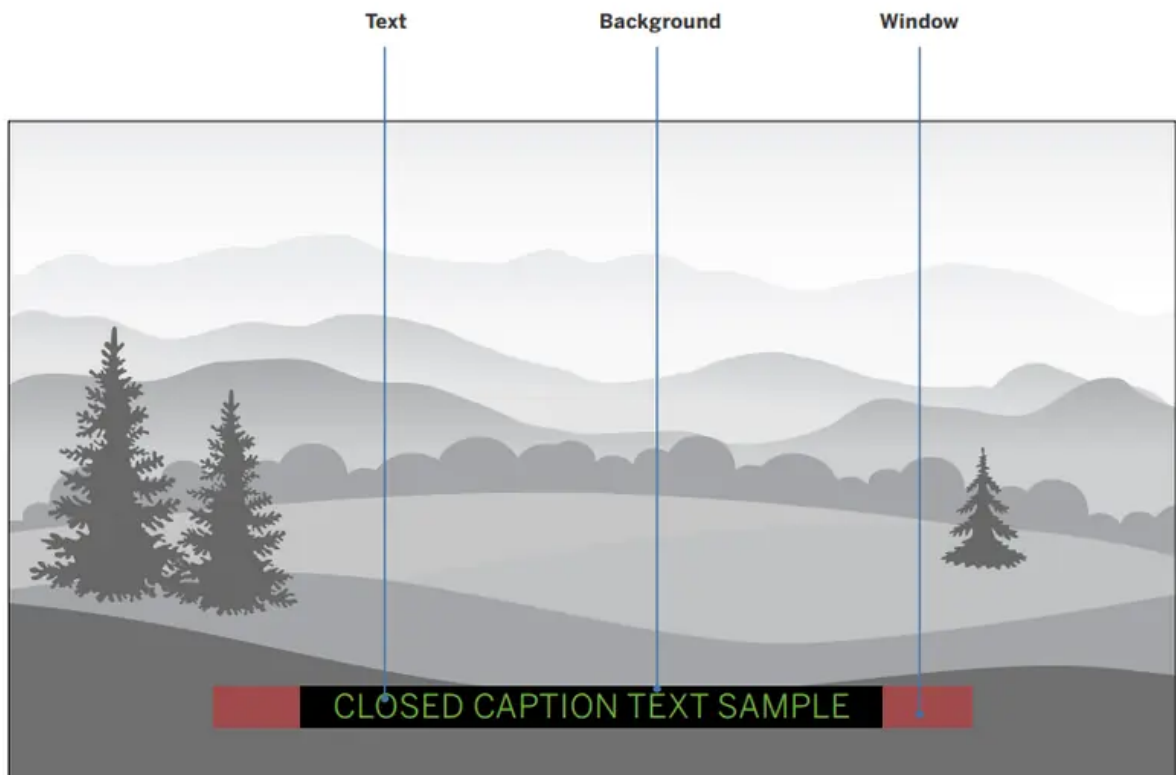


SmartCast Home™

What is SmartCast Home?


- SmartCast Home lets you discover, stream, and control your content like never before! Access top apps, like Netflix, Hulu, and Amazon Prime Video, by using the remote to easily browse and launch content directly from the home screen. SmartCast Home makes finding something to watch easy and fun.

How to Launch SmartCast Home: Begin streaming with SmartCast Home by:

- Press the SmartCast Home button  on your remote
- Select SmartCast from the list of inputs.

What you can do with SmartCast Home

- Stream high quality entertainment.
- Launch top tier apps directly from the home screen.
- Unlock your photos and videos by mirroring your laptop or mobile device onto your TV.
- Rearrange apps on your home screen just the way you like it.
- Works with Google Assistant and other popular voice assistants

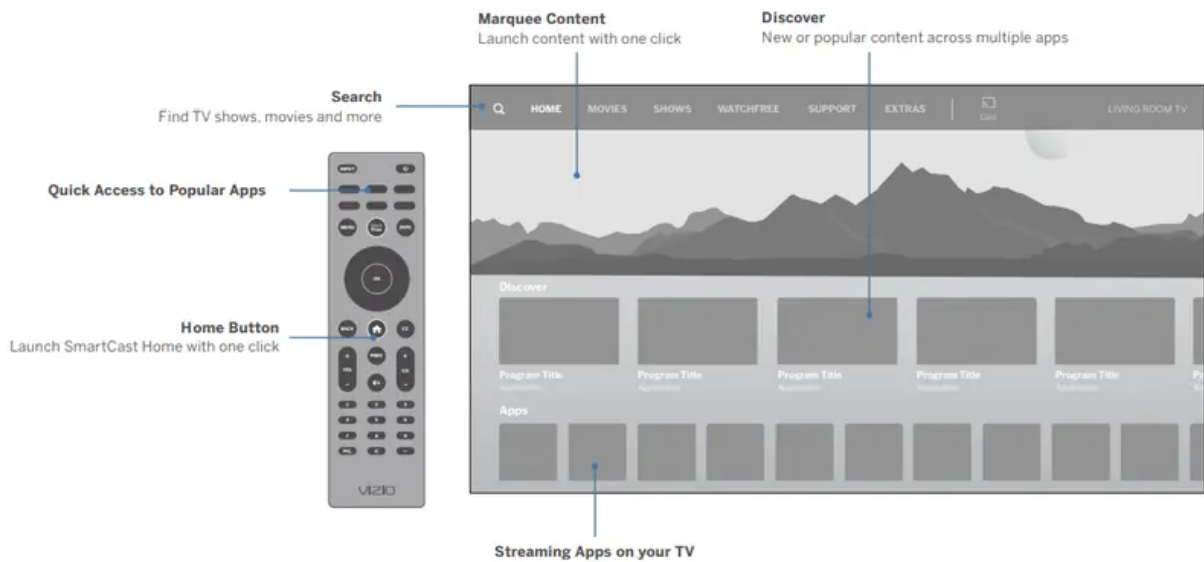

WatchFree™

What is WatchFree?


- VIZIO WatchFree takes your cord-cutting entertainment experience one step further! With the simple press of a button, enjoy free streaming TV with over 100 live TV channels to choose from – news, movies, sports, comedy, music and more. A built-in on-screen guide makes finding something to watch easier than ever.


And it's all FREE —no fees, no subscriptions, or logins

What you can do with WatchFree

- Stream over 100 live TV channels absolutely free – news, movies, sports, comedy, music and more.
- Navigate through channels, organized by genre, with an intuitive on-screen guide.
- Watch 1000's of free movies from major studios.
- Watch the best of internet TV.
- No logins, subscriptions or transactions fees.


How to Launch WatchFree: To launch and begin watching entertainment offered on WatchFree:

- Press the WatchFree button  on your remote. —or—
- Select WatchFree from the list of inputs.

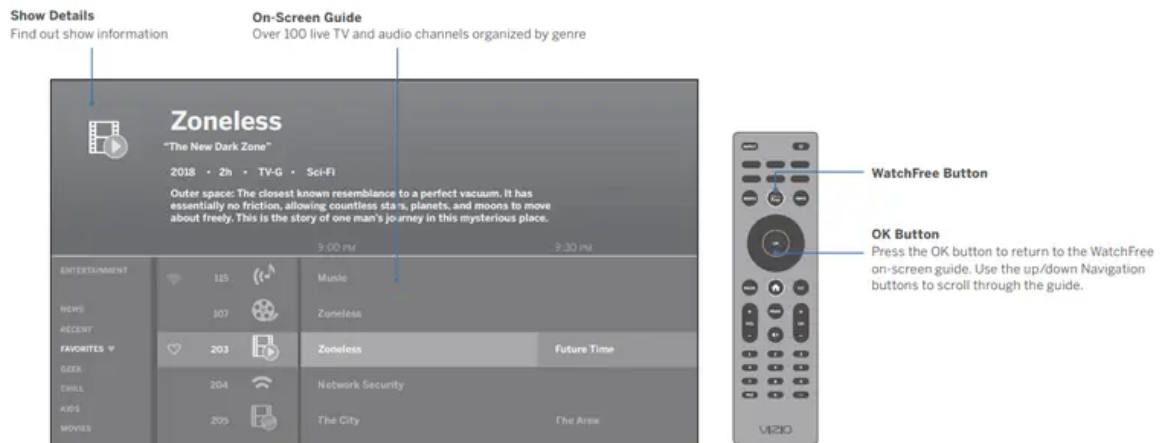

Playing USB Media

The USB Media Player allows you to connect a USB flash drive to your TV and play music, video, or photos.

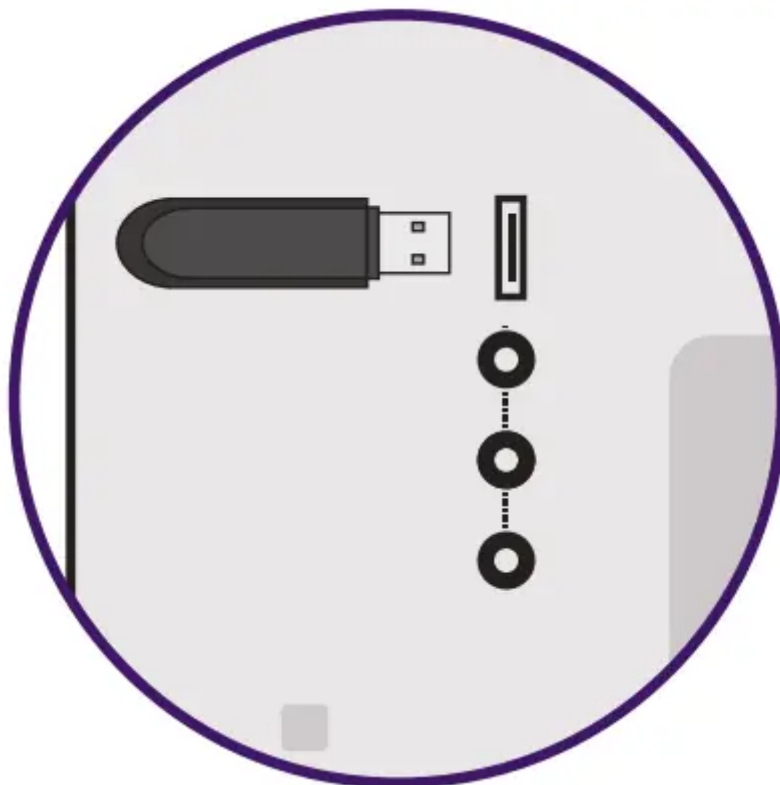

Preparing Your USB Drive to Play USB Media: To display USB media, you must first save your videos onto a USB flash drive:

- The USB flash drive must be formatted as FAT32.
- Files on the USB flash drive must end in a supported file extension (.mp3, .jpg, etc).

- The player is not designed to play media from external hard drives, MP3 players, cameras, or smartphones.


Displaying USB Media: To display your USB media:

1. Connect your USB flash drive to the USB port on the side of the TV.
2. The TV will recognize the USB. Use the Navigation Keys on the remote to select the content you want to play. —or—
3. Select USB from the bottom streaming icons on the SmartCast Home™ page.


Removing the USB Drive from the TV: To safely remove your USB flash drive from the TV:

1. Turn the TV off.
2. Disconnect your USB flash drive from the USB port on the side of the TV.


Playing USB Media: Music

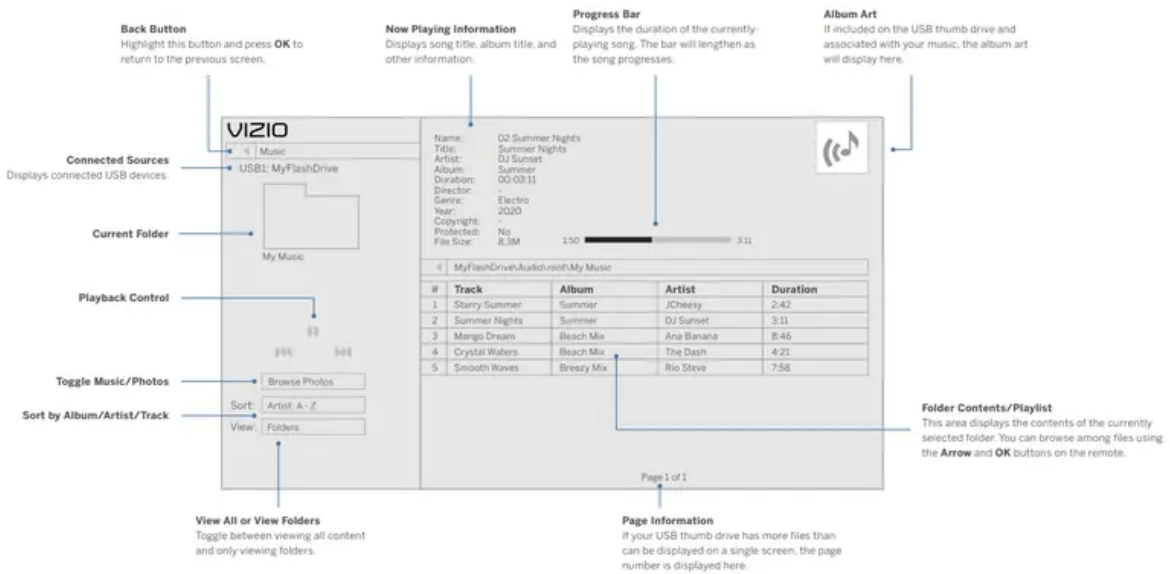

Playing USB Media: Video

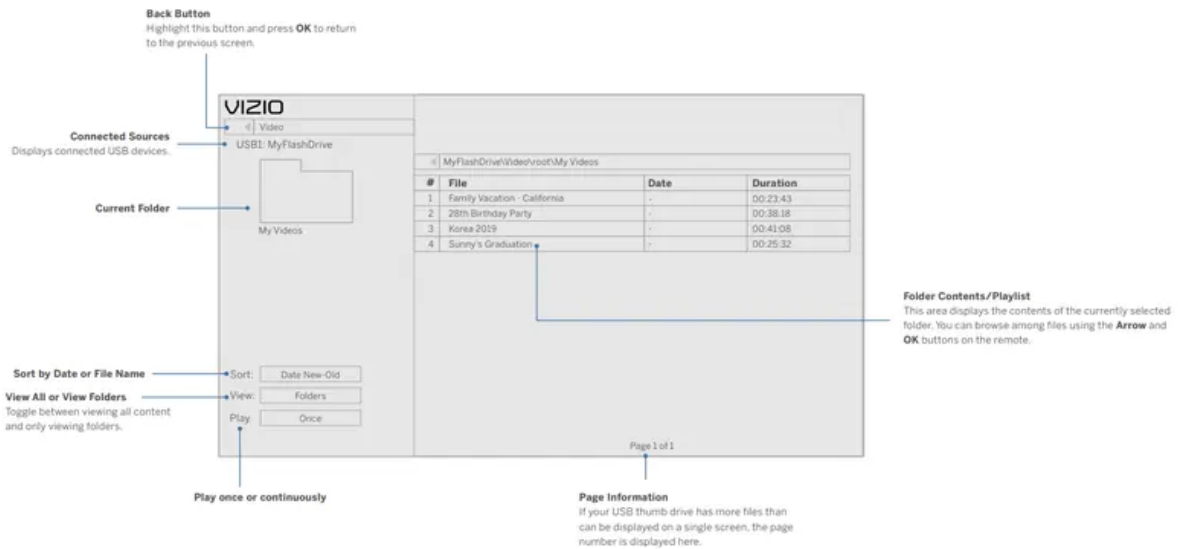

Playing USB Media: Photo

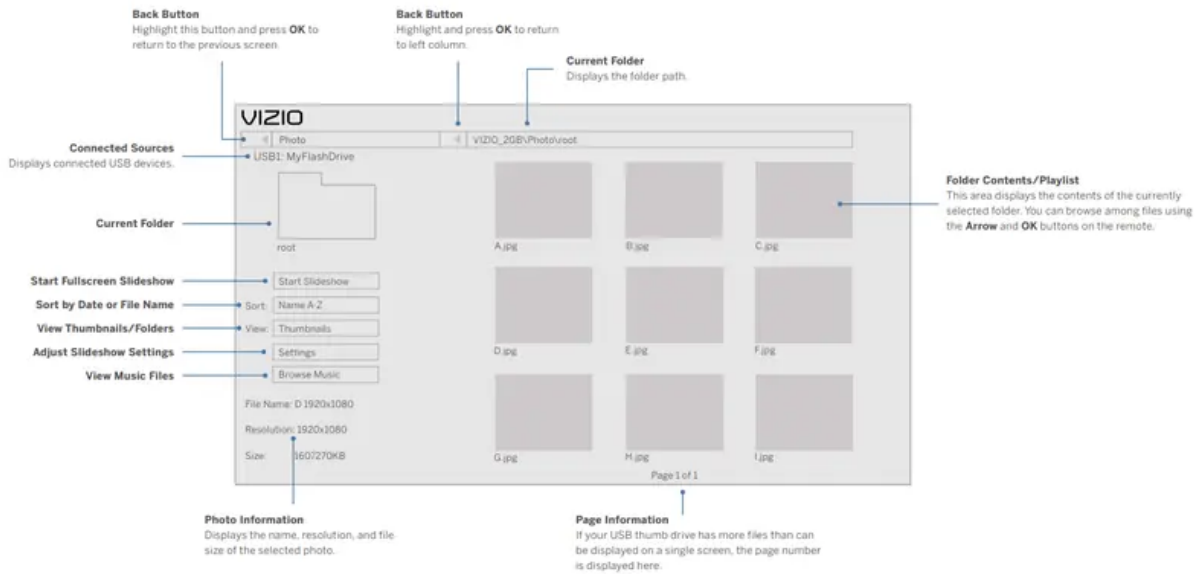

Troubleshooting

Help Topics

1. The remote is not responding .

- Make sure the batteries are properly inserted matching the - and + symbols.
- Replace the batteries with fresh ones.

2. The TV displays “No Signal .”

- Press INPUT button on the remote control to select a different input source.
- If you are using cable TV or antenna connected directly to the TV, scan for channels. See Scanning for TV Channels on page 16.

3. There is no power .

- Ensure the TV is plugged into a working electrical outlet.
- Ensure the power cable is securely attached to the TV.
- Press the Power/Standby button on the remote or on the back of the TV to turn the TV on.

4. The power is on, but there is no image on the screen .

- Ensure all cables are securely attached to the TV.
- Ensure all devices are connected correctly. Devices differ; see your device’s user manual for details.
- Adjust Brightness, Contrast, or Backlight. See Adjusting the Picture Settings on page 8.
- Press the INPUT button on the remote to select a different input source.

5. The sound is flat or dialog is not audible .

- Turn off Volume Leveling. See Adjusting the Audio Settings on page 14.

6. Where do I find information on the accessibility features of this product and other VIZIO products?

- Please visit vizio.com/accessibility,
- Email us at: Accessibility@vizio.com, or
- Give us a call at 1-877-698-4746.

7. How do I stream apps like Netflix to my VIZIO SmartCast® TV?

- Popular apps are located on the SmartCast Home™ screen, so you can simply navigate to the app row on your SmartCast TV to start streaming.
- You can also use Apple AirPlay 2 or Chromecast built-in™ to stream content from your device directly to your SmartCast TV. For more information, please visit: – VIZIO.com/Apple – VIZIO.com/Google

8. The colors on the TV don’t look right .

- Adjust the Color and Tint settings in the Picture menu. See Adjusting the Picture Settings on page 8. • Select a pre-set picture mode. VIZIO recommends selecting Calibrated.
- Check all cables to ensure they are securely attached.

9. The image quality is not good .

- For the best image quality, view high-definition programs using digital sources. Connect your devices with HDMI cables.
- If you are using an antenna, the signal strength of the channel may be low. Ensure your antenna is connected securely to the TV and move the antenna around the room or close to a window for the best signal.

10. The picture is distorted .

- Move the TV away from electrical appliances, cars, and fluorescent lights.
- Ensure all cables are securely attached.

11. The TV image does not cover the entire screen .

- If you are using TV, AV, or Component with 480i input, go to Menu > Picture > Picture Aspect.

12. The TV has pixels (dots) that are always dark .

- Your HD TV is precision-manufactured using an extremely high level of technology. However, sometimes pixels may not display correctly. These types of occurrences are inherent to this type of product and do not constitute a defective product.

13. The buttons on the remote aren't working .

- Ensure you are only pressing one button at a time.
- Point the remote directly at the TV when pressing a button.
- Replace the remote batteries with new ones. See Replacing the Batteries on page 5.

14. There is no sound .

- Press Volume Up on the remote control.
- Press the MUTE button on the remote to ensure mute is off.
- Check the audio settings. See Adjusting the Audio Settings on page 14.
- Check the audio connections of external devices (Blu-ray player, game console, cable/satellite box) that are connected to the TV.
- If you are using an antenna, the signal strength of the channel may be low. Ensure your antenna is connected securely to the TV and move the antenna around the room or close to a window for the best signal.
- Set eARC to Off and use ARC mode.

15. I see "noise" or static on the screen .

- When your TV's digital capabilities exceed a digital broadcast signal, the signal is up-converted (improved) to match your TV's display capabilities. This upconverting can sometimes cause irregularities in the image.

- If you are using an antenna, the signal strength of the channel may be low. Ensure your antenna is connected securely to the TV and move the antenna around the room or close to a window for the best signal.

16. When I change input source, the TV image changes size .

- The TV remembers the viewing mode on each input source. If the viewing mode on the new input source differs from the one on the input source you switch from, the difference may be noticeable.
- See Changing the Picture Aspect Ratio on page 9.

17. How do I download the VIZIO SmartCast Mobile™ App?

- Make sure your phone or tablet is connected to a Wi-Fi network. Open a browser on your phone or tablet.
- Navigate to vizio.com/smartcastapp and follow the on-screen instructions to download the VIZIO SmartCast Mobile™ App.

18. How do I change the Inputs?

- Press the INPUT button on the back of the TV to cycle through the Inputs.
- Press the INPUT button on the basic remote to cycle through the Inputs.
- Make sure the VIZIO SmartCast Mobile™ app is installed on your phone or tablet. Open the VIZIO SmartCast Mobile app. Tap on the Device list and select your TV. Tap on the Input key and select the Input of your choice.

19. How do I connect to my Wi-Fi network?

- On your TV remote, press the MENU button then go to Network > Select your Wi-Fi name > Enter password.
- Open the VIZIO SmartCast Mobile™ app on your phone or tablet. Tap on the Menu Tab > SmartCast Devices > Your TV/Device Name > Network
- Tap on the Settings icon > Network > Wireless Access Points. Select your Wi-Fi network from the list, enter the Wi-Fi password, and tap Connect.

20. How do I exit Demo Mode?

- Press and hold the INPUT button on the back of the TV to exit the demo mode.

21. How do I watch Cable/Antenna TV channels?

- If you subscribe to cable or satellite, simply connect an HDMI cable (not included) to the receiver.
- If you use external antennas to watch local broadcast channels, use a coaxial cable to connect.

22. Some of my Channels are missing .

- Press the MENU button on your TV remote and select the channels option. Then select Find Channels.
- Open the VIZIO SmartCast Mobile app on your phone or tablet.
- Click on: Menu Tab > SmartCast Devices > Your TV/Device Name > Channels > Find Channels.

23. How do I disable/enable Viewing Data?

- Press the MENU button on your remote and select ADMIN & PRIVACY. Then select Viewing Data to turn the feature on or off.

24. The television will not turn on using Alexa or Google Assistant .

- Ensure the television is in Quick Start Mode.
- Tap on Menu > System > Power Mode > Quick Start.

25. How do I know I am getting 4K resolution or HDR content such as Dolby Vision?

- As you are watching content on the television, press the INFO button on the remote or VIZIO SmartCast Mobile app. You will see the current resolution being displayed along with the version of video.
- HDR will show as a Dolby Vision icon, HDR10 or HLG.

Specifications

| | P65Q9-H1 | P65Q9-H61 | P75Q9-H1 | P75Q9-H61 |
|---------------------------------|--|--|--|--|
| Size | 65" | 65" | 75" | 75" |
| Viewable Area | 64.5" | 64.5" | 74.5" | 74.5" |
| PRODUCT DIMENSIONS | | | | |
| Dimensions w/ Stand | 57.01" x 35.14" x 11.81" (1448.08 x 892.52 x 300 mm) | 57.01" x 35.14" x 11.81" (1448.08 x 892.52 x 300 mm) | 65.76" x 40.26" x 13.39" (1670.4 x 1022.66 x 340 mm) | 65.76" x 40.26" x 13.39" (1670.4 x 1022.66 x 340 mm) |
| Dimensions w/o Stand | 57.01" x 32.74" x 2.72" (1448.08 x 831.62 x 69 mm) | 57.01" x 32.74" x 2.72" (1448.08 x 831.62 x 69 mm) | 65.76" x 37.59" x 2.65" (1670.4 x 954.66 x 67.3 mm) | 65.76" x 37.59" x 2.65" (1670.4 x 954.66 x 67.3 mm) |
| Weight w/ Stand | 55.12 lb (25 kg) | 55.12 lb (25 kg) | 75.34 lb (34.17 kg) | 75.34 lb (34.17 kg) |
| Weight w/o Stand | 54.28 lb (24.62 kg) | 54.28 lb (24.62 kg) | 74.37 lb (33.73 kg) | 74.37 lb (33.73 kg) |
| Mounting Screw Size | M6 | M6 | M8 | M8 |
| Hole Pattern | 400 mm x 400 mm | 400 mm x 400 mm | 400 mm x 400 mm | 400 mm x 400 mm |
| PICTURE QUALITY | | | | |
| Maximum Resolution | 3840 x 2160 (UHD) | 3840 x 2160 (UHD) | 3840 x 2160 (UHD) | 3840 x 2160 (UHD) |
| LCD Backlight | Full Array LED | Full Array LED | Full Array LED | Full Array LED |
| Dynamic Motion Rate | 240 | 240 | 240 | 240 |
| Cinemawide® Black Bar Detection | Yes | Yes | Yes | Yes |
| INPUTS / OUTPUTS | | | | |
| HDMI Inputs | 4 | 4 | 4 | 4 |
| Composite Video Inputs | 1 | 1 | 1 | 1 |
| Ethernet Input | 1 | 1 | 1 | 1 |
| RF Antenna Input | 1 | 1 | 1 | 1 |
| USB | 1 | 1 | 1 | 1 |
| Audio Output | HDMI eARC, Analog Stereo Out, Digital Optical | HDMI eARC, Analog Stereo Out, Digital Optical | HDMI eARC, Analog Stereo Out, Digital Optical | HDMI eARC, Analog Stereo Out, Digital Optical |
| OTHER | | | | |
| Remote Control Model | IR Remote | IR Remote | IR Remote | IR Remote |
| Power Consumption | 201.85W | 201.85W | 241.52W | 241.52W |
| Standby Power | <0.5W | <0.5W | <0.5W | <0.5W |
| Voltage | 120V | 120V | 120V | 120V |
| OSD Language | English, French, Spanish | English, French, Spanish | English, French, Spanish | English, French, Spanish |
| Certification | UL, cUL, FCC Class B, BETS-7/ICES-003 Class B, IC, HDMI (CEC, ARC) Dolby Audio, Dolby Vision | UL, cUL, FCC Class B, BETS-7/ICES-003 Class B, IC, HDMI (CEC, ARC) Dolby Audio, Dolby Vision | UL, cUL, FCC Class B, BETS-7/ICES-003 Class B, IC, HDMI (CEC, ARC) Dolby Audio, Dolby Vision | UL, cUL, FCC Class B, BETS-7/ICES-003 Class B, IC, HDMI (CEC, ARC) Dolby Audio, Dolby Vision |



Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)