


## FEATURES

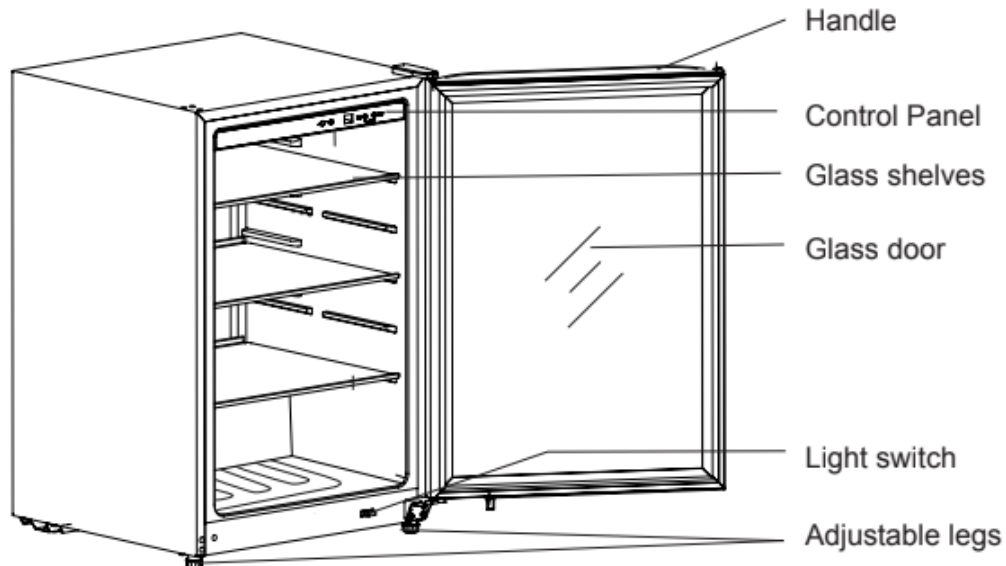


### Interior Light (Some models)

The light comes on automatically when the door is opened. The light can also be turned on and off by pressing the “Light” button on the control panel. Press the button twice to keep the light on when the door is closed.

### Adjustable Interior Shelves

Multi-position adjustable interior shelves can be moved to any position for larger or smaller packages. The shipping spacers that stabilize the shelves for shipping should be removed and discarded. The Beverage Center comes equipped with three glass shelves.

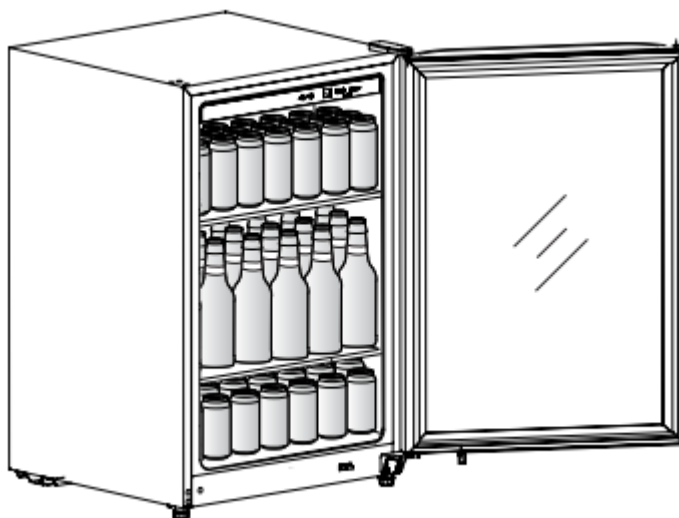

## ENERGY SAVING TIPS

- Install the Beverage Center in the coolest part of a dry and ventilated room, out of direct sunlight and away from heating ducts or registers. Do not place the Beverage Center next to heatproducing appliances such as a range, oven or dishwasher.
- Level the Beverage Center so the door close tightly.
- Do not over crowd the Beverage Center or block cold air vents. Doing so causes the Beverage Center to run longer and use more energy. Shelves should not be lined with aluminum foil, wax paper or paper toweling. Liners interfere with cold air circulation, making the Beverage Center less efficient.
- Wipe containers dry before placing them in the Beverage Center. This cuts down on moisture build-up inside the unit.
- Organize the Beverage Center to reduce door openings. Remove as many items as needed at one time and close the door as soon as possible.



## TEMPERATURE CONTROLS

### Cool Down Period

For best performance, allow 4 hours for the Beverage Center to cool down completely. The Beverage Center will run continuously for the first several hours.




### Temperature Control



- The Beverage Center can be operated by adjusting the temperature control buttons (+/-) to the various settings.
- The new desired temperature will flash on the display for a few seconds and then switch back to the actual temperature which will gradually change until set point is reached.
- Press the + button once to increase temperature 1° F/C.

- Press the - button once to decrease temperature 1° F/C.
- The temperature range MIN and MAX is 33° - 50°F (1° - 10°C).

### Temperature display

	This button turns the power ON and OFF.
	This button turns the light ON and OFF.
	This button toggles between Fahrenheit and Celsius temperatures.

- The default temperature for the Beverage Center is 41°F (5°C). The temperature after power failure will be the temperature set before the power failure.
- To prolong the life of compressor, please wait for at least 5 minutes before the unit is restarted after power failure.

### Failure display

- If “E” and “F” are displayed, please contact local service personnel for repair.
- If the temperature in the Beverage Center is too low, it will display “L”.
- If the temperature in the Beverage Center is too high, the screen will display “H” and will flash. Under this state, the buzzer will buzz for 30 seconds. One minute later, the buzzer will continue to buzz for the next 30 seconds. After three times, the alarm will not buzz any more. You can press any key to cancel sound alarm.
- Storing too many cans or bottles in the Beverage Center may cause the temperature in the Beverage Center to rise temporarily

## CARE AND CLEANING

### Cleaning the Beverage Center

- Before cleaning, turn the temperature control to OFF, unplug the Beverage Center and remove the bottles.
- Clean your Beverage Center once every two months.

**Inside:** Wash inside surfaces of the Beverage Center with a solution of two tablespoons of baking soda in one quart (1.136 liters) warm water. Rinse and dry. Wring excess water out of the sponge or cloth when cleaning in the area of the controls, or any electrical parts.

Wash the removable parts with the baking soda solution mentioned above, or mild detergent and warm water. Rinse and dry. Never use metallic scouring pads, brushes, abrasive cleaners, or alkaline solutions on any surface. Do not wash removable parts in a dishwasher.

**Outside:** Wash the cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

## Care of plastic parts

- Be sure and protect the door gasket. It should be kept clean at all times.
- If the plastic parts in the Beverage Center remain contaminated by oil (animal or vegetable) for a long period of time, they will age and crack easily. Please clean them on a regular basis.

## Vacation and Moving Tips

### Vacations:

If the Beverage Center will not be used for several months:

- Remove all bottles and unplug the power cord.
- Clean and dry the interior thoroughly.
- Leave the Beverage Center door open slightly, blocking it open if necessary, to prevent odor and mold growth.

### Moving:

When moving the Beverage Center, follow these guidelines to prevent damage:

- Disconnect the power cord plug from the wall outlet.
- Remove bottles and clean the Beverage Center.
- Secure all loose items by taping them securely in place to prevent damage.
- In a moving vehicle, secure the Beverage Center in an upright position to prevent movement. Also, protect the outside of the Beverage Center with a blanket or similar item.

**WARNING** If leaving the Beverage Center door open while on vacation, make certain that children cannot climb inside and become entrapped.

## BEFORE YOU CALL

1-800-944-9044 (United States)

1-800-265-8352 (Canada)

PROBLEM	CAUSE	CORRECTION
<b>BEVERAGE CENTER OPERATION</b>		
Beverage Center does not run.	<ul style="list-style-type: none"> <li>• Appliance is plugged into a circuit that has a ground fault interrupt.</li> <li>• Temperature control is in the OFF position.</li> <li>• Appliance may not be plugged in, or plug may be loose.</li> <li>• House fuse blown or tripped circuit breaker.</li> <li>• Power outage.</li> </ul>	<ul style="list-style-type: none"> <li>• Use another circuit. If you are unsure about the outlet, have it checked by a certified technician.</li> <li>• See Setting the Temperature Control section.</li> <li>• Ensure plug is tightly pushed into outlet.</li> <li>• Check/replace fuse with a 15 amp timedelay fuse. Reset circuit breaker.</li> <li>• Check house lights. Call local Electric Company.</li> </ul>



<p>Beverage Center runs too much or too long.</p>	<ul style="list-style-type: none"> <li>• Room or outside weather is hot.</li> <li>• Appliance has recently been disconnected for a period of time.</li> <li>• Door is opened too frequently or too long.</li> <li>• Door may be slightly open.</li> <li>• Temperature control is set too low.</li> <li>• Door gasket is dirty, worn, cracked, or poorly fitted.</li> </ul>	<ul style="list-style-type: none"> <li>• It's normal for the appliance to work harder under these conditions.</li> <li>• It takes 4 hours for the appliance to cool down completely.</li> <li>• Warm air entering the appliance causes it to run more. Open doors less often.</li> <li>• See "DOOR PROBLEMS" section.</li> <li>• Turn control knob to a warmer setting. Allow several hours for the temperature to stabilize.</li> <li>• Clean or change gasket. Leaks in the door seal will cause appliance to run longer in order to maintain desired temperature.</li> </ul>
<p>Interior temperature is too cold.</p>	<ul style="list-style-type: none"> <li>• Temperature control is set too low.</li> </ul>	<ul style="list-style-type: none"> <li>• Turn the control to a warmer setting. Allow several hours for the temperature to stabilize.</li> </ul>
<p>Interior temperature is too warm.</p>	<ul style="list-style-type: none"> <li>• Temperature control is set too warm.</li> <li>• Door is opened too frequently or too long.</li> <li>• Door may not be seating properly.</li> <li>• Large amounts of warm or hot food has been stored recently.</li> <li>• Appliance has recently been disconnected for a period of time.</li> </ul>	<ul style="list-style-type: none"> <li>• Turn control to a colder setting. Allow several hours for the temperature to stabilize.</li> <li>• Warm air entering the appliance causes it to run more. Open doors less often.</li> <li>• See "DOOR PROBLEMS" section.</li> <li>• Warm food will cause Beverage Center to run more until the desired temperature is reached.</li> </ul>



		<ul style="list-style-type: none"> <li>• It takes 4 hours for the appliance to cool down completely</li> </ul>
External surface temperature is warm.	<ul style="list-style-type: none"> <li>• The external walls can be as much as 30°F warmer than room temperature.</li> </ul>	<ul style="list-style-type: none"> <li>• This is normal while the compressor works to transfer heat from inside the cabinet.</li> </ul>
<b>SOUND AND NOISE</b>		
Louder sound levels when Beverage Center is on.	<ul style="list-style-type: none"> <li>• Modern Beverage Centers have increased storage capacity and more stable temperatures. They require a high efficiency compressor.</li> </ul>	<ul style="list-style-type: none"> <li>• This is normal. When the surrounding noise level is low, you might hear the compressor running while it cools the interior.</li> </ul>
Longer sound levels when compressor comes on.	<ul style="list-style-type: none"> <li>• Appliance operates at higher pressures during the start of the ON cycle.</li> </ul>	<ul style="list-style-type: none"> <li>• This is normal. Sound will level off or disappear as refrigerator continues to run.</li> </ul>
Fan runs when room temperature is below 45°.	<ul style="list-style-type: none"> <li>• Exterior thermostat has activated the heater or fan.</li> </ul>	<ul style="list-style-type: none"> <li>• This is normal.</li> </ul>
Popping or cracking sound when compressor comes on.	<ul style="list-style-type: none"> <li>• Metal parts undergo expansion and contraction, as in hot water pipes.</li> </ul>	<ul style="list-style-type: none"> <li>• This is normal. Sound will level off or disappear as Beverage Center continues to run.</li> </ul>
Boiling or gurgling sound, like water boiling.	<ul style="list-style-type: none"> <li>• Refrigerant is circulating throughout the system.</li> </ul>	<ul style="list-style-type: none"> <li>• This is normal.</li> </ul>
Vibrating or rattling noise.	<ul style="list-style-type: none"> <li>• Appliance is not level. It rocks on the floor when it is moved slightly.</li> </ul>	<ul style="list-style-type: none"> <li>• Level the unit. Refer to leveling instructions in the "Installation" section.</li> </ul>
Snapping sound.	<ul style="list-style-type: none"> <li>• Cold control turning the Beverage Center OFF and ON.</li> </ul>	<ul style="list-style-type: none"> <li>• This is normal.</li> </ul>
<b>WATER/MOISTURE/FROST INSIDE BEVERAGE CENTER</b>		



Moisture forms on inside walls.	<ul style="list-style-type: none"> <li>• Weather is hot and humid.</li> <li>• Door may not be seating properly.</li> <li>• Door is kept open too long, or opened too frequently.</li> </ul>	<ul style="list-style-type: none"> <li>• This is normal.</li> <li>• See “DOOR PROBLEMS” section.</li> <li>• Open the door less often.</li> </ul>
<b>WATER/MOISTURE/FROST OUTSIDE BEVERAGE CENTER</b>		
Moisture forms on outside of Beverage Center.	<ul style="list-style-type: none"> <li>• Door may not be seating properly, causing the cold air from inside the Beverage Center to meet warm moist air from outside.</li> </ul>	<ul style="list-style-type: none"> <li>• See “DOOR PROBLEMS” section.</li> </ul>
<b>ODOR IN BEVERAGE CENTER</b>		
Odors in Beverage Center.	<ul style="list-style-type: none"> <li>• Interior needs to be cleaned.</li> </ul>	<ul style="list-style-type: none"> <li>• Clean interior with sponge, warm water, and baking soda.</li> </ul>
<b>DOOR PROBLEMS</b>		
Door will not close.	<ul style="list-style-type: none"> <li>• Appliance is not level. It rocks on the floor when it is moved slightly.</li> </ul>	<ul style="list-style-type: none"> <li>• This condition may force the cabinet out of square and misalign the door. Refer to “Leveling” in the “Installation” section.</li> </ul>

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.