


Use and Care Griddle

8 Serving NonStick Electric Griddle

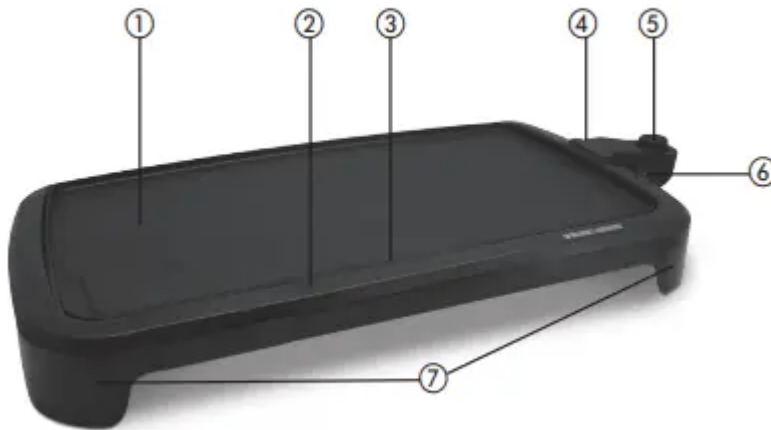

1. Nonstick cooking surface

† 2. Slide-out drip tray (Part #GD2011-01)

3. Excess grease drain

4. Probe receptacle

† 5. Click and Lock removable adjustable thermostat (Part #GD2011-02)

6. Temperature ready light

7. Cool-touch base

Note: † indicates consumer replaceable/removable parts

How to Use

This appliance is for household use only.

BEFORE FIRST USE

- Wash griddle in hot, soapy water. Rinse and dry thoroughly. DO NOT IMMERSE THE UNIT IN WATER UNLESS PROBE HAS BEEN REMOVED.

Caution: Probe receptacle must always be completely dry before use.

USING THE CLICK AND LOCK THERMOSTAT PROBE

This griddle comes with a removable thermostat probe that securely locks into place.



- To attach the probe, hold down the “Release” button, and move the “Lock” lever into the vertical, unlocked position. • Slide the probe into the probe receptacle on the griddle.
- To lock the thermostat, slide the “Lock” lever down to the horizontal position, until it clicks securely into place.
- To remove the probe, hold the “Release” button, and slide the “Lock” lever into the vertical, unlocked position. The probe can now be removed from the griddle.

TO OPERATE

1. Lock the thermostat probe into probe receptacle by following the instructions above in the “Using the Click and Lock Thermostat Probe” section of this manual, and plug the cord into a standard electrical outlet.
2. Turn the heat setting to the desired temperature. The signal light will come on to indicate the unit is heating.
3. When the signal light goes out, the unit is ready.
4. Signal light will cycle on and off during cooking as the unit operates to maintain the desired temperature.

Caution: Because some countertop finishes are more affected by heat than others, use care not to place griddle on surfaces where heat may cause a problem.

Caution: Griddle surface is hot during use

Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

1. Unplug, remove probe and allow the unit to COOL completely before cleaning.

2. Wipe probe with a damp cloth and dry thoroughly. DO NOT IMMERSE PROBE IN WATER.
3. Wash unit in hot, soapy water. DO NOT IMMERSE THE UNIT IN WATER UNLESS PROBE HAS BEEN REMOVED.
4. Do not use steel wool pads or other abrasive cleaners on the cooking surface as they may damage the non-stick coating. To remove cooked-on food, use a plastic bristle brush or nylon mesh pad.

Tips

1. To avoid damaging the nonstick surface, do not use sharp utensils or cut food on the cooking surface of the unit. Use silicone, heatresistant rubber or wooden utensils.
2. To keep foods from sticking, you may want to add oil to the cooking surface before each use or use a cooking spray

Troubleshooting

NEED HELP?

- For service, repair or any questions regarding your appliance, call the appropriate 800 number in front of this sheet. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

Q&A

1. Where can I buy a replacement drip tray for my B&D electric griddle?
 - To place an order for parts or accessories, please contact our Consumer Service Parts Center by phone at 1-800-738-0245, or you can order online at www.spectrumbrandsparts.com. If you need further assistance, please contact me at youropinionmatters@spectrumbrands.com and reference ID number 42313277 so that I may be able to better assist you.
2. What is the nonstick coating? Does it contain PFOA, PFAS, PFOS?
 - Our non-stick coating formulations are considered proprietary, but we're happy to share that they are stable, inert, non-reactive, non-toxic and are PFOA-free. If you need further assistance, I'd be happy to help! Please contact us at youropinionmatters@spectrumbrands.com and reference ID number 42204577 so that we may better assist you.

3. Is your Black and Decker GD2011B toxin free?

- We at Spectrum Home Appliances understand that there have been various reports and articles in recent months and years that raise concerns about Bisphenol A (BPA) in consumer products and the impact of such reports and articles on the purchase of certain products by consumers.
- In such reports and articles, the clear focus is on the potential hazards posed by the migration of BPA from food and beverage containers into food and beverages consumed by humans and by direct ingestion or mouthing of plastic items by infants and children. Specifically and by example, the draft NTP Brief on Bisphenol A (BPA) released by the National Toxicology Program of the National Institutes of Health report states, "the vast majority of bisphenol A exposure is through the diet ~ 99%"
- For products that specifically claim to be BPA-Free, the plastics and resin that comes into direct contact with food and beverage are made of Polypropylene material, silicone or other plastic materials, all of which are BPA free. Other parts of the product which do not come into contact with food or beverage may contain BPA in some of the plastics and resins that are used. For products that do not claim to be BPA-Free, we have insufficient information to support a BPA-Free claim at this time.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment. Or, call the appropriate toll-free number on the cover of this manual.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors. ○ Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to OFF, then remove plug from wall outlet.
- Do not use appliance for other than intended use.

This product is for household use only.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

ELECTRIC CORD

- a. A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c. If a long detachable power-supply cord or extension cord is used,
 1. The marked electrical rating of the detachable powersupply cord or extension cord should be at least as great as the electrical rating of the appliance,
 2. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
 3. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel; in the US, by an authorized service center.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.