 


WHAT'S IN THE BOX

I'm Rogue™, of course I come with accessories.



Rogue™ Robot Vacuum

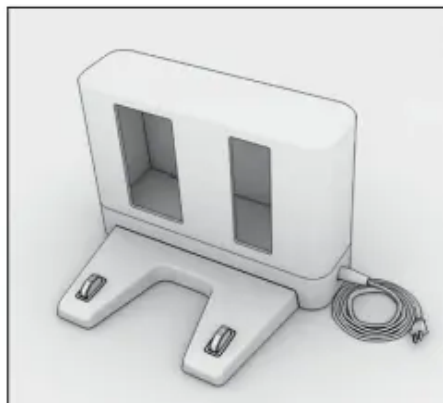

My Base (Docking Station)

 


 
2 Side Brushes*



Cleaning Tool

GETTING TO KNOW ROGUE™

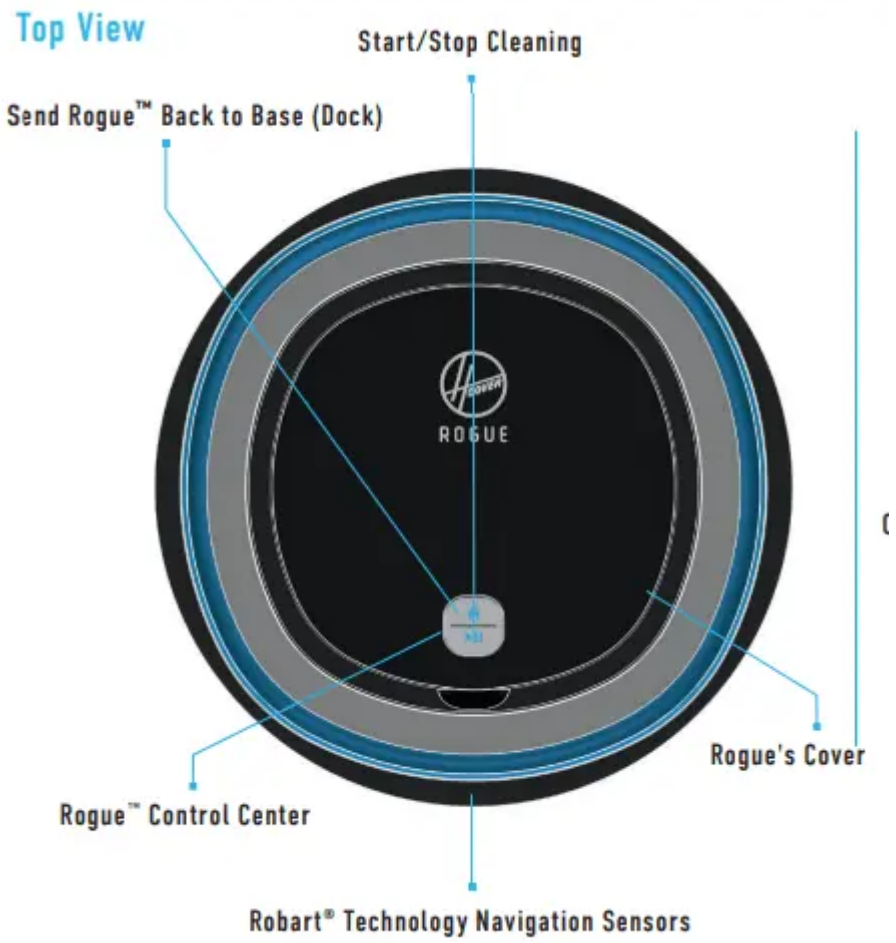

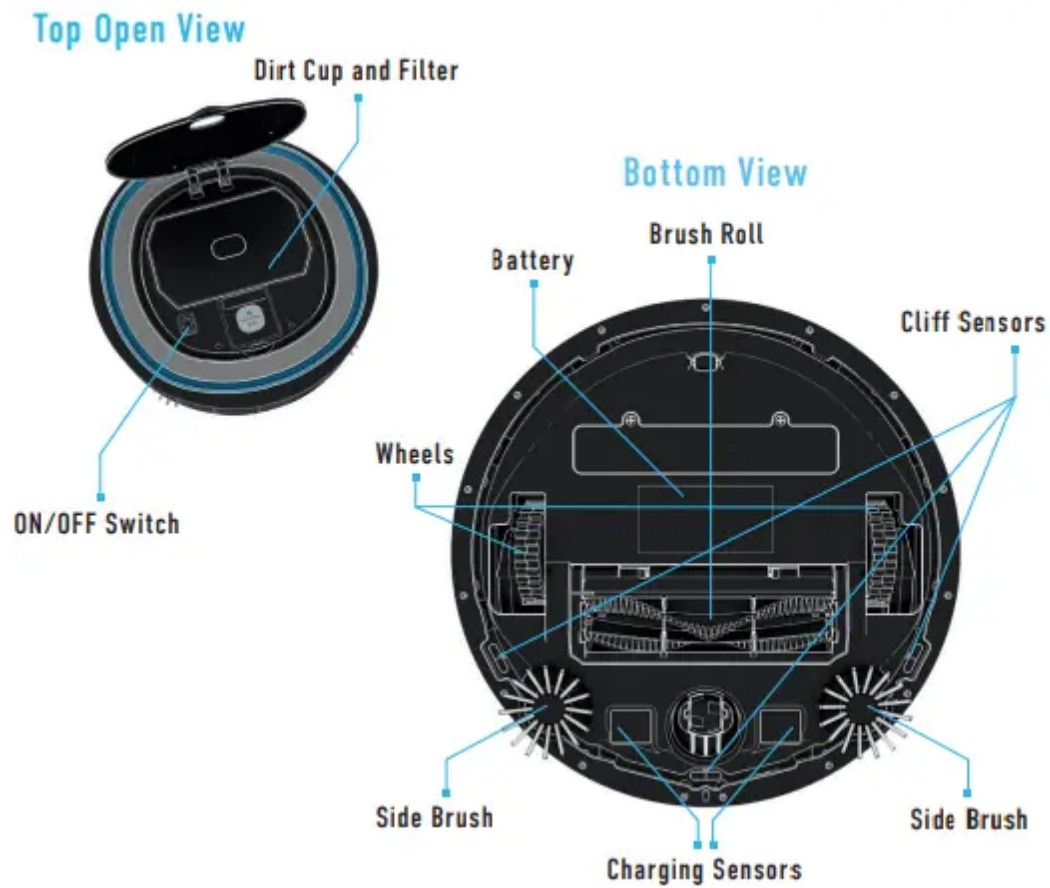

Rogue™ Control Center

These icons are located on my lid and will light up when active

Wi-Fi Connectivity



This blue Wi-Fi symbol will light up when you are connected to Wi-Fi through the Hoover Home App. If it's not lit, I'm not connected.

To set up a connection, turn to page 8.

Battery



This battery symbol lets you know my battery status. If you don't see it lit up, I have enough battery life. When it starts blinking, I'm going to head back to my base to recharge.

Dirt Cup Full



When you see this symbol, it means my dirt cup is full. Please make sure to empty it so I can continue cleaning. The light will disappear once you empty the dirt cup and press the ▶||.

Error



When you see this symbol flashing, I'm in trouble. It might be as simple as something stuck in my brush roll or it could be an internal error.

Turn to page 19 for some common errors I might encounter and how you can help me.

 
Robart® Technology with Memory Navigation

I utilize a high-tech laser to map and navigate your home because I'm highly intelligent. I will also remember your home's floor plan so you can customize how I clean (See SmartWall™ Technology on page 10).



SmartWall™ Technology


Through the Hoover Home App, you can designate rooms and areas as off limits but I don't know why you would want to.

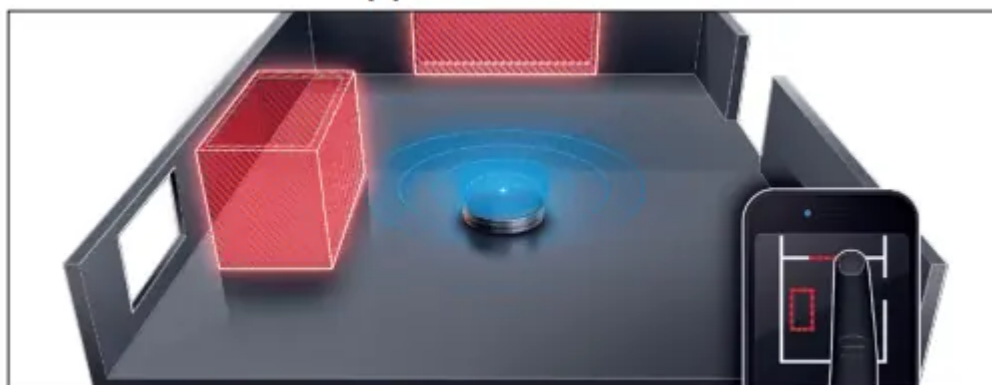

The ROBART logo is a registered trademark of Robart GmbH.

Voice Control

 I've got a pretty good relationship with Amazon Alexa* and Google Home Assistant*. If you own an Amazon Alexa product or a Google Home Assistant, you can use them to communicate with me. Download the skill set in the Amazon Alexa or Google Home App.

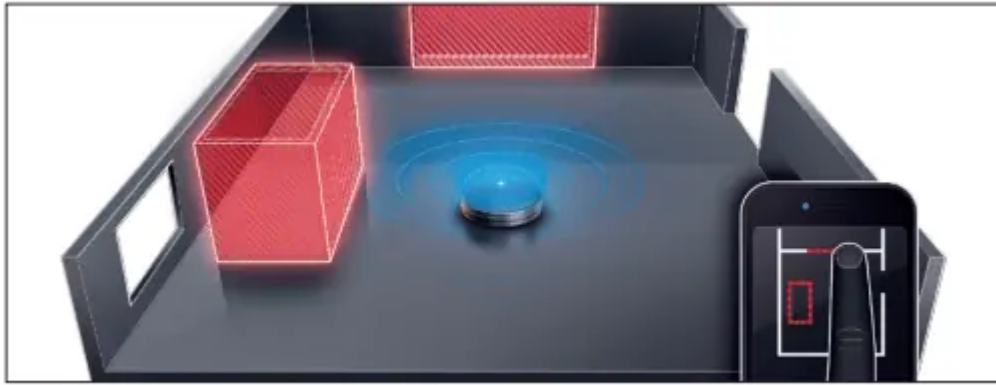


The ROBART logo is a registered trademark of Robart GmbH.

NOTE: The Hoover Home App is required to interact with Amazon Alexa and Google Home Assistant. Be on the look out for new skills/commands coming soon.

***Amazon Alexa and Google Home Assistant sold separately.**

 Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates. Google Home is a trademark of Google Inc.

OPERATING ROGUE™: CHARGING

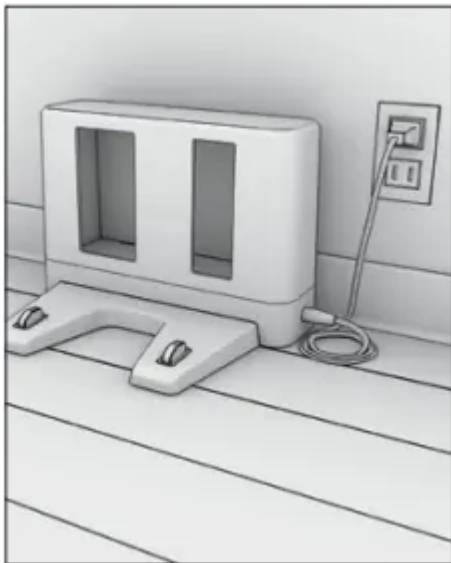

1

Find a good spot for my base. I would prefer to have 4 ft. on each side. Plug in the AC adaptor to the side of the dock and into a wall outlet.

2



switch.

 
To power me ON, open my lid and flip the power

3



To make sure I'm charged and ready to clean, manually place me on my base. I'll flash my charging light and give a beep to let you know I'm aligned correctly

4

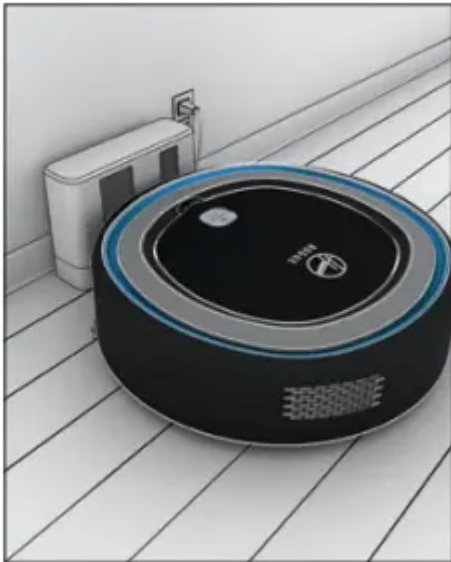

I only need about 3 hours to fully charge (impressive, right?). When I'm ready to go, my charging light will stop flashing.

TIP: I perform best if my base is set up on hard floor.

NOTE: I arrive with limited battery life (traveling can be exhausting). To get the most out of my first clean, I recommend charging me for approximately 3 hours.

5



 
After I complete cleaning missions, I will automatically make my way back to the base to recharge.


6



If I didn't complete my cleaning mission before my battery ran out, no worries! Once I am charged, I will automatically go back out to where I left off to finish cleaning.

OPERATING ROGUE™: CLEANING

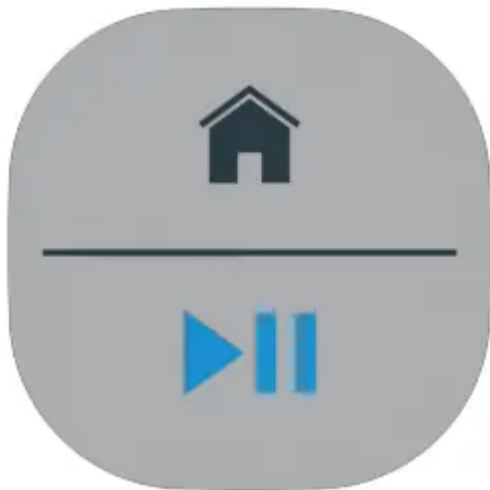



When you're ready to send me on a cleaning mission, press the  button. I'll beep and start up to let you know I've accepted the mission.



press the  button again.

 
If you want me to take a break or pause mid-cleaning,

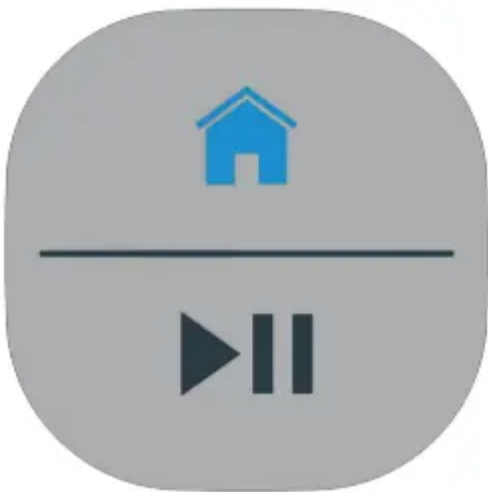

completely, press my  button and I'll start traveling back to my base.

If you want me to terminate the cleaning mission

FIRST CLEANING MISSION

During my first mission, I will go into Recon Mode and explore my new surroundings. Once I'm done with my Recon and mapping, I'll head back to my base. Download the Hoover Home App to see your floor plan or press  to send me out on a mission to clean your mapped home.

MAINTAINING ROGUE™

MAINTAINING ROGUE™: EMPTYING THE DIRT CUP

1



Lift my lid and push the button in the center to access my dirt cup (the dirt cup is that square container filled with all the dirt, dust and pet hair I just picked up for you).

2



Lift the lid upwards and remove all the dirt inside. I would prefer you did this after every cleaning mission.

3



My filter is attached to the inside of the dirt cup, this should be cleaned too. You can pull the tabs on the side of the filter to remove - the filter is rinsable to ensure extended filter life. **NOTE:** Please ensure the filter is completely dry before reinserting into Rogue™.

4



After you've emptied the dirt cup and cleaned the filter, reinsert into Rogue™ and firmly snap into place.

 
MAINTAINING ROGUE™: CLEANING/CHANGING THE SIDE BRUSHES

1



Remove any dirt, dust and pet hair from my side brush with the cleaning tool provided.

2

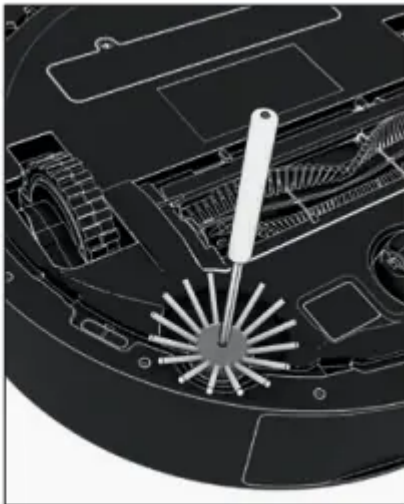

To change my side brushes, use a Philips head screwdriver to unscrew the screw in the middle of my side brush. Be careful it's small and easy to lose.

MAINTAINING ROGUE™: CLEANING/CHANGING THE BRUSH ROLL

1



Press the two blue tabs to remove my brush roll cover.

2



Lift out my brush roll to clean it or replace it.

3



Replace the cover by snapping it back into place.

 
MAINTAINING ROGUE™: CLEANING THE WHEELS

1



Clean my wheels regularly to remove any dirt, dust and pet hair by using the cleaning tool I came with. Please do this so I can move effectively on my cleaning missions.

MAINTAINING ROGUE™: CLEANING THE SENSORS

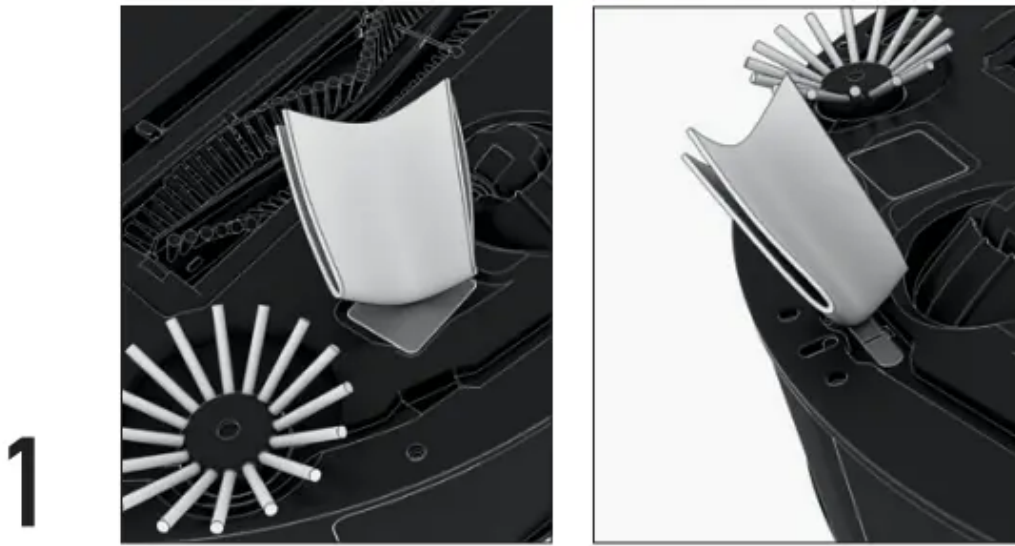

Use a clean, dry cloth to clean my sensors. This ensures I continue to run smoothly by being able to see.

TROUBLESHOOTING

Am I causing trouble?


Visit [Hoover.com](https://www.hoover.com) for FAQs and additional troubleshooting.

The Problem	The Cause	The Action
Error - Cliff Sensor	Cliff sensor is covered with dirt. Rogue™ is stuck at a drop-off.	See page 18 for instructions on cleaning the sensors. Move Rogue™ to another location.
Error - Main brush	Brush roll is stuck or not spinning properly.	Clean the brush roll of any dirt, lint or hair. See page 14 for instructions
Error - Suction motor	There is something blocking the suction path.	Remove brush roll and dirt cup (see pages 13 & 14 for instructions) and remove any obstructions.
Error - Critically low battery	Battery is too low and unable to return to docking station to recharge.	Manually place Rogue™ on the docking station to charge. See page 10 for instructions
Error - Wheel stuck	Wheel is stuck or not spinning properly.	Clean the wheels of any dirt, lint or hair. See page 18 for instructions.
Error - No Dust bin	Dirt cup is not installed or is installed incorrectly.	See page 16 for instructions.
Error - Unit picked up	Rogue™ is lifted off the ground or the wheel is elevated excessively.	Place unit back on the ground properly.
Error - Side brush	stuck Side brush is stuck or not spinning properly.	Clean the side brush off of any dirt, lint or hair. See page 14 for instructions.
Error - Electrical disconnection	Internal software connection was lost.	Factory reset. See page 20 for instructions.
Error - Firmware update failure	Connection was lost.	Ensure stable Wi-Fi connection and redownload the firmware from the Hoover Home App.
Error - Wi-Fi chip failure	Can't establish a connection.	Ensure Wi-Fi router is broadcasting 2.4Ghz (not 5Ghz).

Error - Robot stuck error	Rogue™ is stuck.	Manually move Rogue™.
Error - Bumper error	Something is obstructing the bumper.	Remove any obstruction in the bumper.

FACTORY RESET

Sometimes I might just need a hard reset. If nothing on the last page works to solve my issues, follow these instructions to reset. Be warned, this is a factory reset so it will erase everything!

- Press  button and hold for 10 seconds.
- All indicator lights will shut off for 1-2 seconds.
- Rogue™ will then reboot and all indicator lights will illuminate

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.