 


USER GUIDE 4-SLICE TOASTER OVEN

FEATURES

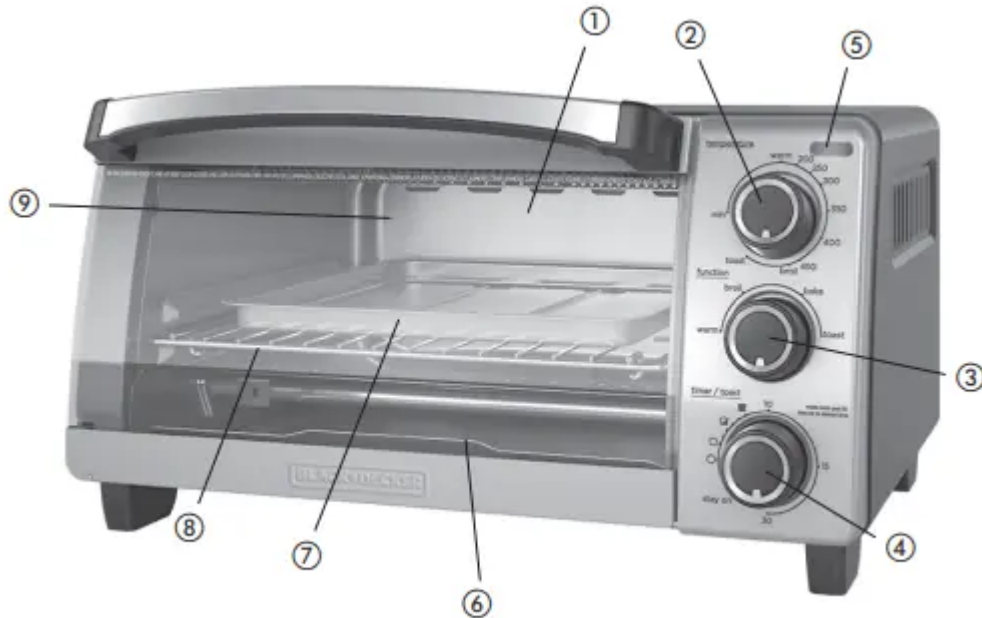

Product may vary slightly from what is illustrated.

 
1. Easy-view glass door
- † 2. Temperature selector knob (Part# TO1745-01)
- † 3. Cooking function selector knobs (Part# TO1745-02)
- † 4. Toast/timer selector knob (Part# TO1745-03)
5. Power indicator light
- † 6. Crumb tray (Part# TO1745-04)
- † 7. Bake pan/drip tray (Part# TO1745-05)
- † 8. Slide rack/broil rack (Part# TO1745-06)
9. Extra deep curved interior

Note: † indicates consumer replaceable/ removable parts

HOW TO USE

This product is for household use only.

Caution: Do not leave oven unattended when in operation. Food ignition may occur. If this happens, unplug unit but DO NOT open door. To reduce the risk of fire, keep oven interior completely clean and free of food residues, oil, grease and any other combustible materials.

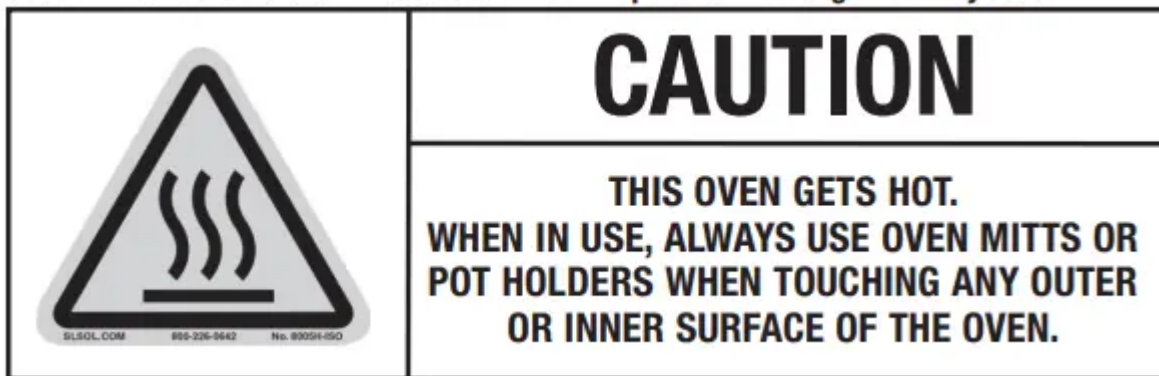

Caution: A fire may occur if the toaster oven is covered or touching flammable materials including curtains, draperies, walls and the like when in operation or after, when still hot. Do not place any of the following materials in the oven, on top of the oven, or in contact with the oven sides or bottom surfaces: paper, cardboard, plastic or the like.

GETTING STARTED

- Remove all packing material, any stickers, and the plastic band around the power plug.
- Please go to www.prodprotect.com/applica to register your warranty.
- Wash all removable parts as instructed in CARE AND CLEANING.
- Select a location where this unit is to be used, allowing enough space from back of the unit and the wall to allow heat to flow without damage to cabinets and walls.
- Plug unit into electrical outlet.

IMPORTANT INFORMATION ABOUT YOUR OVEN



- This oven gets hot. When in use, always use oven mitts or potholders when touching any outer or inner surface of the oven.
- During first few minutes of use you may notice smoke and a slight odor. This is normal and should cause no concern.
- You must set the timer or select STAY ON for the oven to function.

IMPORTANT: Be sure food or baking dish does not come within 1½ inches of the top heating elements.

 
IMPORTANT: Food should not extend beyond the edges of the bake pan/drip tray to avoid drippings from falling onto the heating elements.

TOASTING

It is not necessary to preheat the oven for toasting.

1. Set temperature selector knob to TOAST position. 
2. Set cooking FUNCTION selector knob to TOAST. 
3. Open oven door and insert slide rack.
4. Place items to be toasted directly on slide rack and close the door.
5. Turn toast shade selector knob to 10 and then turn back to desired toast shade.
6. The on indicator light comes on and remains on until toasting cycle is complete.
7. When toast cycle is complete, there will be an audible signal. The oven and the on indicator light will go off.
8. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the toast.
9. Unplug appliance when not in use.


For best results, place the bread in the locations shown:

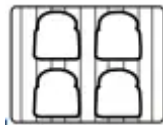

NOTE: You must set the toast shade selector knob as desired for the oven to begin toasting

NATURAL CONVECTION BAKING

 


NOTE: For best results, when baking or cooking, always preheat the oven for at least 10 minutes at the desired temperature setting.

1. Set temperature selector knob to the desired temperature.
2. Turn FUNCTION selector knob to BAKE. 
3. Turn TIMER selector knob to 10 and then turn back or forward to desired baking time, including preheat time. (Select STAY ON to bake longer than 30 minutes or to control cooking time yourself.)
4. The power indicator light comes on and remains on during the entire baking time.
5. The heating elements will cycle on and off to maintain even heat distribution.
6. Once oven has preheated, open oven door and insert food. Close oven door. **NOTE:** Use a metal, glass or ceramic baking dish placed on the slide rack
7. If using the oven timer, there will be an audible signal once the baking cycle is complete. The oven turns off and the light goes out. If not using the oven timer, turn the oven to once cooking cycle is complete.




8. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the cooked food.
9. Unplug appliance when not in use

BROILING

NOTE: When broiling, preheat oven for 10 minutes.

1. Set temperature selector knob to BROIL. 
2. Turn FUNCTION selector knob to BROIL. 
3. Open oven door and using the bake pan as a drip tray, insert it under the slide rack and place food directly on slide rack/broil rack.
4. Set the timer selector knob to 10 then turn back or forward to desired broiling time, including 5-minute preheat or to STAY ON . **NOTE:** You can cook your food 3 ways:
 - Use the bake pan/drip tray placed on the slide rack.
 - Place the bake pan/drip tray under the slide rack / broil rack .
 - Place the food directly on the slide rack / broil tray.
5. When finished broiling, the signal bell sounds. Turn the TOAST/TIMER selector to the position. The power indicator light goes off.
6. Using an oven mitt or pot holder, slide out broiling rack together with bake pan to remove food.
7. Unplug appliance when not in use.

KEEP WARM

1. Turn temperature selector knob to KEEP WARM. 
2. Turn function selector knob to keep KEEP WARM. 
3. Turn Toast/Timer selector knob past 10 and then turn back or forward to desired warming time. (Select Stay On  to control cooking time yourself.) **NOTE:** This feature is designed to keep already cooked foods warm after they have been cooked. This function should be used for short periods of time; to prevent food from drying out, cover with foil.
4. When cycle is complete, there will be an audible signal. The oven and the power ON indicator light will go off.
5. If not using the oven timer, turn the Toast/Timer selector knob to Off once cycle is complete.
6. Unplug appliance when not in use.

CARE AND CLEANING

This product contains no user serviceable parts. Refer service to qualified service personnel.

CLEANING

Important: Before cleaning any part, be sure the oven is off, unplugged, and cool.

1. Clean the glass door with a sponge, soft cloth or nylon pad and sudsy water. Do not use a spray glass cleaner.
2. To remove the slide rack, open the door, pull the rack forward and out. Wash the slide rack in soapy water or in a dishwasher. To remove stubborn spots, use a polyester or nylon pad.
3. Wash the bake pan in sudsy water. To minimize scratching, use a polyester or nylon pad.

CRUMB TRAY

1. Grasp handle and pull out tray.
2. Dispose of crumbs and wipe tray with a damp cloth; dry thoroughly before placing back in the oven.

EXTERIOR SURFACES

Wipe the top and exterior walls with a damp cloth or sponge. dry thoroughly.

COOKING CONTAINERS

Metal, ovenproof glass or ceramic bakeware without glass lids can be used in your oven. Follow manufacturer's instructions. Be sure the top edge of the container is at least 1½" (3.81 cm) away from the upper heating elements.

NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

Two-Year Limited Warranty (Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, the liability of Spectrum Brands, Inc. will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase. What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at www.prodprotect.com/applica, or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact Consumer Support at the toll-free number listed in the warranty section.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn timer control to OFF, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use extreme caution when removing tray or disposing of hot grease.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Oversized foods or metal utensils must not be inserted in a toaster oven, as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material including curtains, draperies, walls and the like, when in operation. Do not store any item on top of unit when in operation.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any material, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not cover crumb tray or any part of this oven with metal foil. This will cause overheating of the oven.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.