


About your refrigerator – Ice & Water


RX611DUX

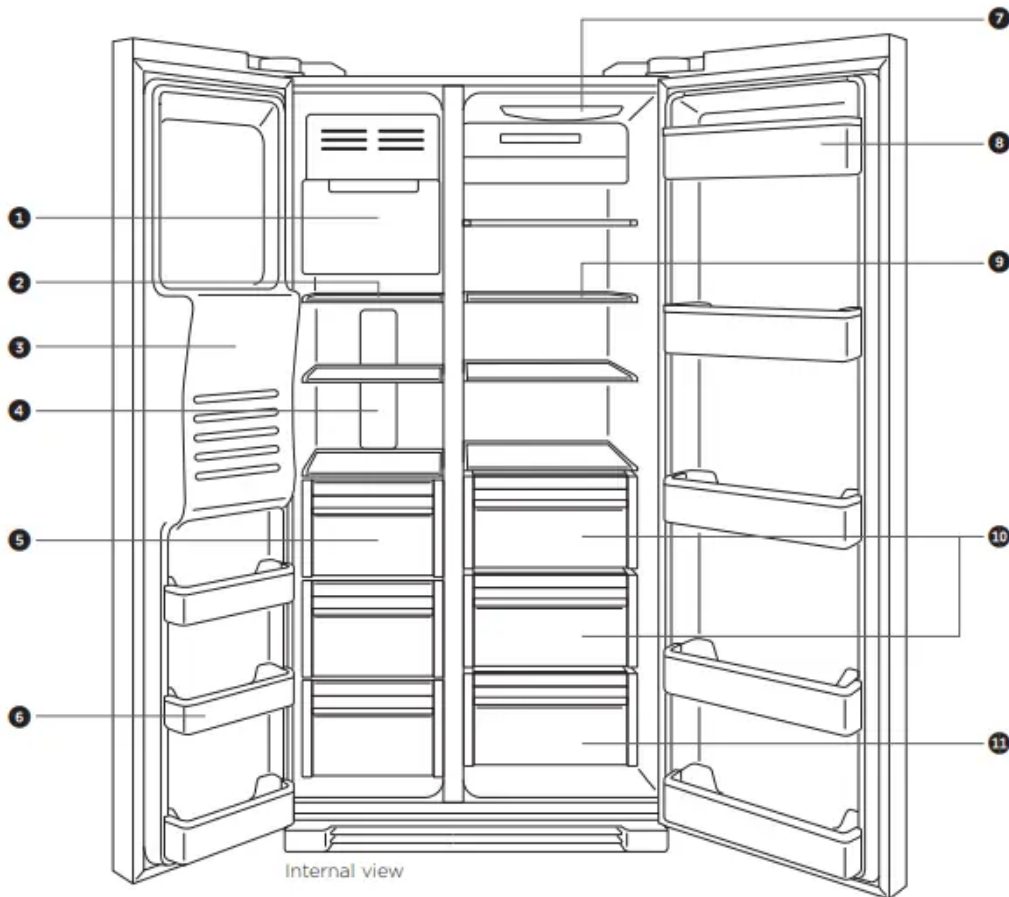

- ① Ice maker/ice box
- ② Freezer main shelves
- ③ Ice & water dispenser
- ④ Freezer light
- ⑤ Freezer drawers
- ⑥ Freezer door shelves
- ⑦ Fridge light
- ⑧ Fridge door shelves
- ⑨ Fridge main shelves
- ⑩ Vegetable drawers
- ⑪ Fridge drawer

About your refrigerator – NON Ice & Water

RX628DX and RX628DW

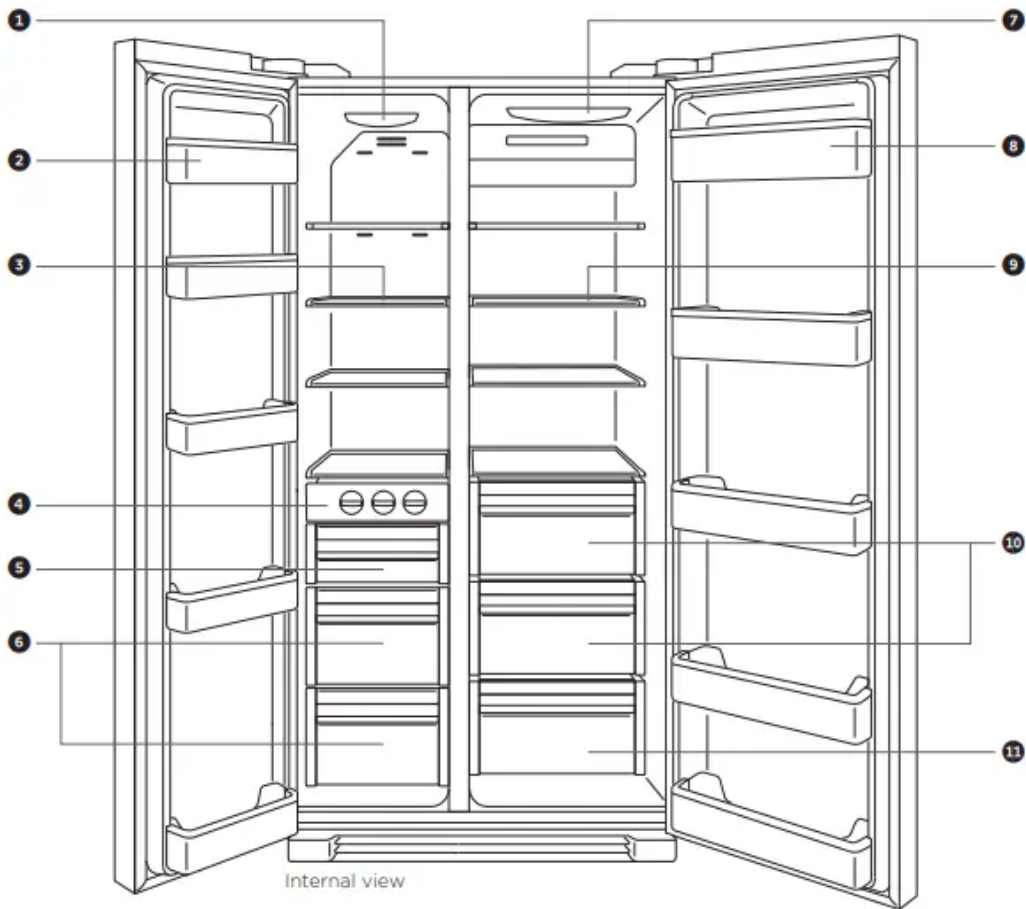


- ① Freezer light
- ② Freezer door shelves
- ③ Freezer main shelves
- ④ Ice trays
- ⑤ Ice box
- ⑥ Freezer drawers
- ⑦ Fridge light
- ⑧ Fridge door shelves
- ⑨ Fridge main shelves
- ⑩ Vegetable drawers
- ⑪ Fridge drawer



Operating instructions – Ice & Water Control panel

Ice & water control panel

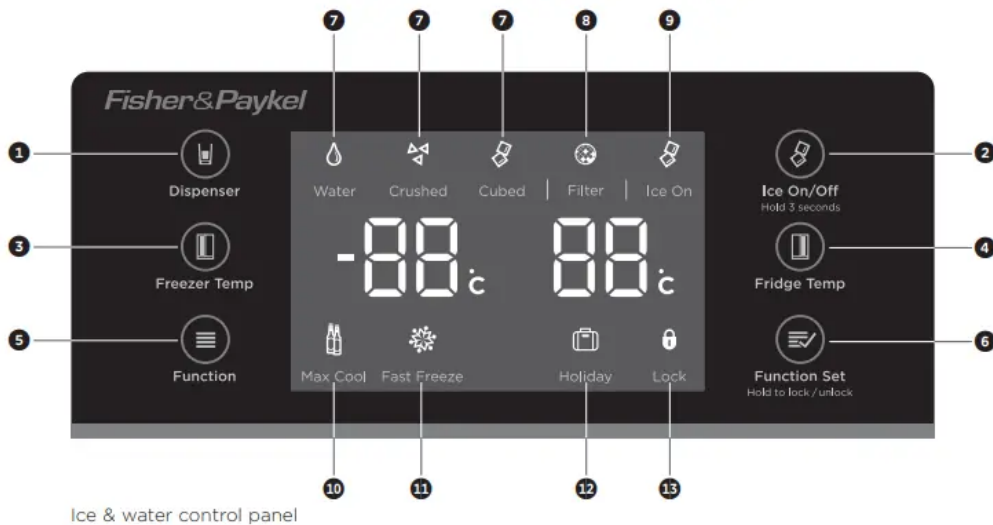


- ① Water and ice dispenser button
- ② Ice maker on/off button
- ③ Freezer temperature button
- ④ Fridge temperature button
- ⑤ Function select button
- ⑥ Function set button
- ⑦ Dispenser status icons
- ⑧ Filter change status icon
- ⑨ Ice maker on status icon
- ⑩ Max Cool icon
- ⑪ Fast Freeze icon
- ⑫ Holiday icon
- ⑬ Lock icon


Lock function


This feature will lock the temperature and function settings preventing these from being changed. This is useful when cleaning your refrigerator. When locked, the Lock icon will blink and a beep will sound.

To lock

Press and hold Function Set  for 3 seconds. The Lock icon will appear and the refrigerator settings will be locked.

To unlock

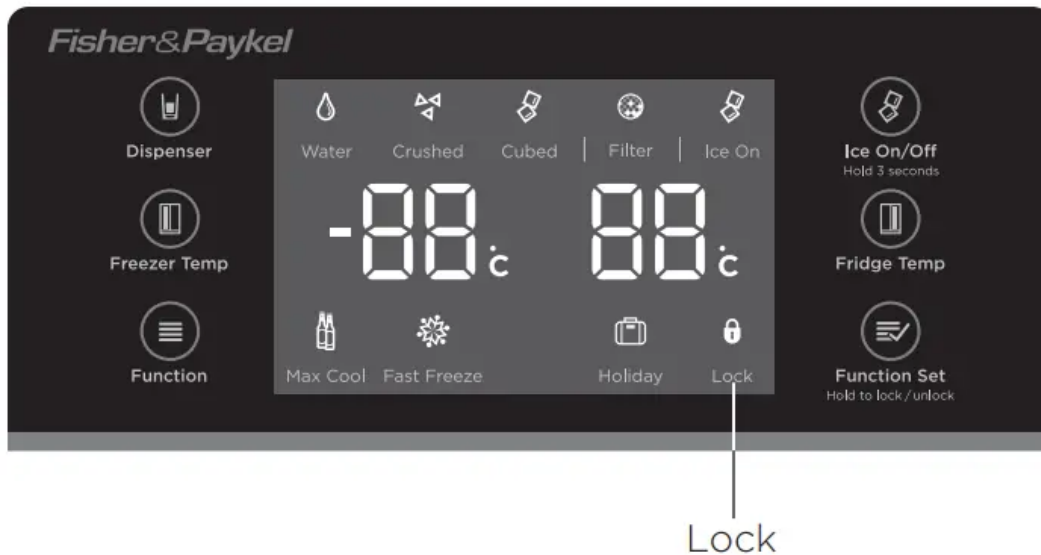

Press and hold Function Set  for 3 seconds. The Lock icon will turn off and the refrigerator settings will be unlocked.





Holiday function

This feature allows you to leave the fridge section unused while the freezer section operates as normal. When in this function, the fridge temperature will be automatically set to 17°C.

To turn on

- 1 Press Function  until the Holiday icon is selected.
- 2 Press Function Set , the Holiday function will be activated.

To turn off

- 1 Press Function  until the Holiday icon is selected.
- 2 Press Function Set , the Holiday icon will turn off. Holiday function is now deactivated.





Max Cool



This function is designed to chill food quickly to retain freshness and quality. Use this feature before putting large quantities of food into the fridge compartment.


The Max Cool function will automatically deactivate once the fridge compartment has reached the set temperature.

To turn on

- 1 Press Function  until the Max Cool icon is selected.
- 2 Press Function Set  , the Max Cool function will activate.

To turn off, before automatic deactivation

- 1 Press Function  until the Max Cool icon is selected.
- 2 Press Function Set  , the Max Cool icon will turn off. The Max Cool function is now deactivated.

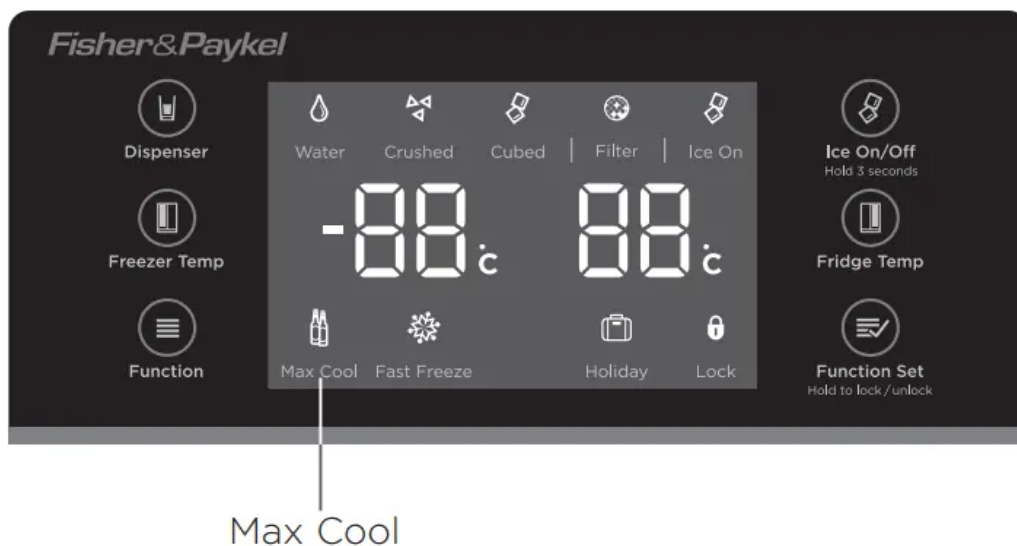



Fast Freeze

This function is designed to freeze food quickly to ensure freshness, texture and taste are retained during the freezing process.

The Fast Freeze function will automatically deactivate after a set time period.


Use this feature before putting large quantities of food into the freezer (for example after food shopping). For best results we recommend that the Fast Freeze function be turned on 12 hours before food is placed into the freezer.


To turn on

- 1 Press Function  until the Fast Freeze icon is selected.
- 2 Press Function Set  , the Fast Freeze function will activate.


To turn off, before automatic deactivation

- 1 Press Function  until the Fast Freeze icon is selected.

2 Press Function Set  , the Fast Freeze icon will turn off. The Fast Freeze function is now deactivated.

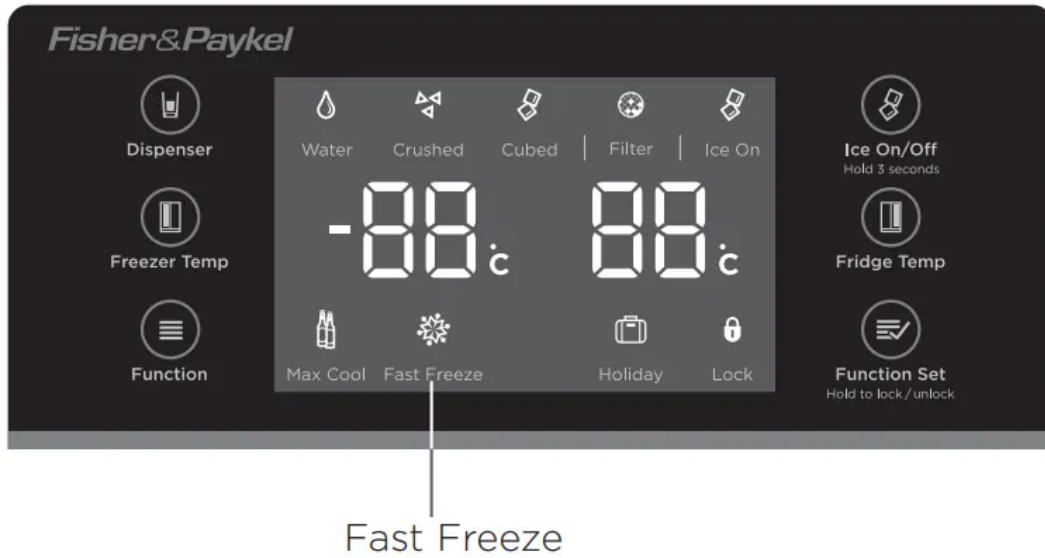


Adjusting the fridge temperature.


1 Press . The fridge temperature display will start blinking, indicating that the fridge is in the temperature setting mode.


2 Press  to scroll through the fridge temperature range from 9°C to 1°C.

When the desired temperature is displayed, wait 5 seconds. The blinking will stop and the temperature will be set. Alternatively press any other button on the control panel within 5 seconds to set the temperature.

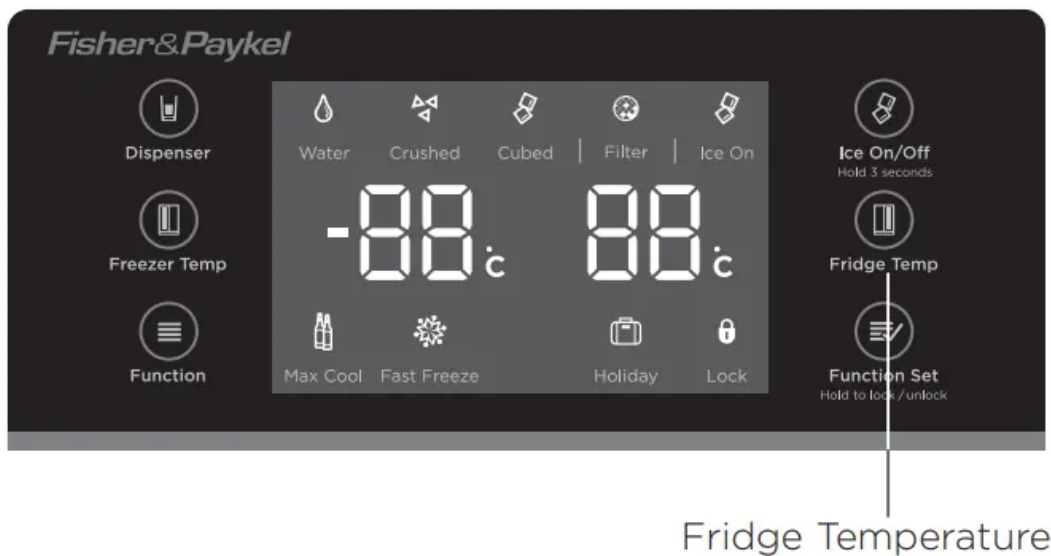

Adjusting the freezer temperature

1 Press . The freezer temperature display will start blinking, indicating that the freezer is in the temperature setting mode.


2 Press  to scroll through the freezer temperature range from -14°C to -24°C.


When the desired temperature is displayed, wait 5 seconds. The blinking will stop and the temperature will be set. Alternatively press any other button on the control panel within 5 seconds to set the temperature.



Freezer Temperature

Dispenser button


Press  to scroll through dispensing options: water, crushed ice or cubed ice. Once an icon is illuminated the dispensing mode will change to the function selected.

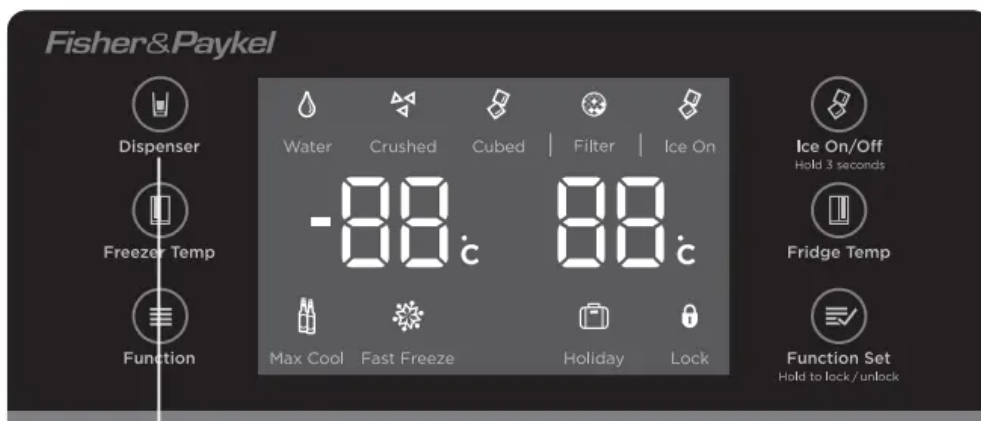


Dispenser

Ice On/Off

To turn on

Press and hold  for three seconds. The Ice On icon will turn on, indicating that the ice maker is now functioning.

To turn off

Press and hold  for three seconds. The icon will turn off, indicating that the ice maker is now off.



Non Ice & Water control panel




Non Ice & Water control panel

- | | |
|------------------------------|-----------------------------|
| ① Lock button | ④ Fridge temperature button |
| ② Fast Freeze button | ⑤ Max Cool button |
| ③ Freezer temperature button | ⑥ Holiday button |


Lock


This feature will lock the temperature and function settings, preventing these from being changed. This is useful when cleaning your refrigerator. When locked, the Lock icon will blink and a beep will sound.

To turn on

Press and hold  for 3 seconds, a white LED will turn on above Lock icon. The refrigerator settings will be locked.

To turn off

Press and hold  for 3 seconds, the LED above the Lock icon LED will turn off. The refrigerator settings will be unlocked.

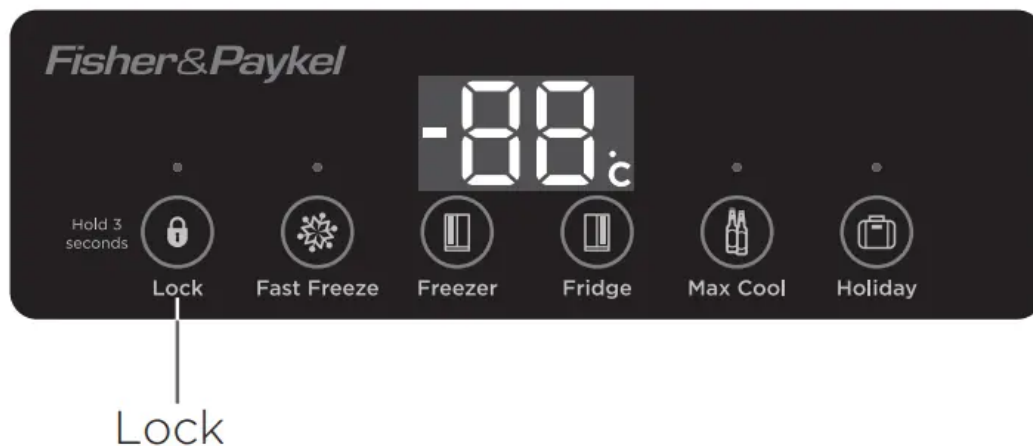


Holiday

This feature allows you to leave the fridge section unused while the freezer section operates as normal. When in this function, the fridge temperature will be automatically set to 17°C.

To turn on

Press , a white LED will turn on above the Holiday icon. The Holiday function is now activated.

To turn off

Press . The LED above the Holiday icon will turn off. The Holiday function is now deactivated.




Max Cool


This function is to chill food quickly to retain freshness and quality. Use this feature before putting large quantities of food into the fridge compartment.


The Max Cool function will automatically deactivate once the fridge compartment has reached the set temperature.

To turn on

Press . A white LED will turn on above the Max Cool icon. The Max Cool function is now activated.

To turn off, before automatic deactivation

Press . The LED above the Max Cool icon will turn off. The Max Cool function is now deactivated.

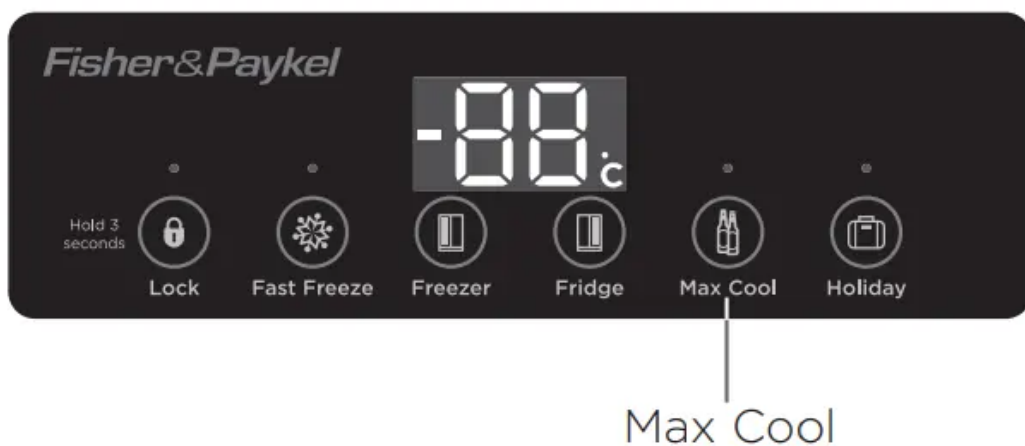


Fast Freeze

This function is designed to freeze food quickly to ensure freshness, texture and taste are retained during the freezing process.


The Fast Freeze function will automatically deactivate after a set time duration.

Use this feature before putting large quantities of food in to the freezer (for example after food shopping). For best results we recommend that the Fast Freeze function be turned on 12 hours before food is placed into the freezer.

To turn on


Press  , a white LED will turn on above the Fast Freeze icon. The Fast Freeze function is now activated.


To turn off, before automatic deactivation

Press  . The LED above the Fast Freeze icon will turn off. The Fast Freeze function is now deactivated.



Adjusting the fridge temperature

1 Press  . The fridge temperature display will start blinking, indicating that the fridge is in the temperature setting mode.


2 Press  to scroll through the fridge temperature range from 9°C to 1°C.


When the desired temperature is displayed, wait 5 seconds. The blinking will stop and the temperature will be set. Alternatively press any other button on the control panel within 5 seconds to set the temperature.



Fridge Temperature

Adjusting the freezer temperature

1 Press . The Freezer temperature display will start blinking, indicating that the freezer section is in the temperature setting mode.

2 Press  to scroll through the freezer temperature range from -14°C to -24°C.

When the desired temperature is displayed, wait 5 seconds. The blinking will stop and the temperature will be set. Alternatively press any other button on the control panel within 5 seconds to set the temperature.



Freezer Temperature

Using your water dispenser / Ice maker – Ice & Water

First use of the ice maker/water dispenser

- Check your refrigerator is switched on and has been cooling for at least 2 hours before use (refer to page 21 – The temperature of your refrigerator and freezer).
- Check that the water isolation tap has been connected and turned on.


- Press dispenser pad and discard the first 3 L of water, stopping intermittently to remove trapped air in the system. Failure to do this will result in excessive dripping from your dispenser. This will make sure that the pipes are cleared. If in doubt, keep re-using the dispenser until the water runs clear.
- Please discard the first few batches of ice after start up.


Note: the first time the water dispenser is used, there will be a 1 – 2 minute delay while the tank fills, before water is dispensed.

Storing ice for extended periods

Storing ice for long periods of time can effect its appearance and odour. We recommend that you dispose of any ice which has been stored for extended periods and remove and clean the icebox. Allow the ice box to dry thoroughly and cool down before replacing into the appliance to prevent ice from sticking to the bin.

Water filter

The Filter icon  on the control panel will appear when the filter needs replacing.

- To maintain water quality we recommend the water filter be replaced every 6 months. Replace the water filter as per manufacturers instructions or follow instructions below.
- After changing, press the Function button  3 seconds, the Filter icon will disappear and the filter timer will reset.
- Replacement cartridges are available from your Fisher & Paykel Service Agent (Kemflo Aicro filter part number 0060823485).

To replace the water filter

- Turn off the water supply.
- Remove the locking key at one end of the filter and then disconnect the water tube. Repeat on the other end of the filter.
- To fit the new filter insert the water tube at the inlet end of the filter, secure with locking clip and flush 3 L of water through the filter. Note the flow direction on the filter (see page 13). Check for leaks.
- Turn off water supply and connect water tube to the outlet end of the filter, secure with locking clip.

Removing and replacing the ice box

To remove the icebox, lift the box and then pull towards you, releasing the unit (Fig. 11).

Note: water moisture may have condensed and frozen the icebox in place.

When replacing the ice bin, if it does not fit easily, remove the box and turn the cam mechanism 90° clockwise (Fig. 12). Reinstall the icebox, making sure that the catch on the tray fits into the shelf slot.

If the ice maker does not work properly

The volume of the icebox equals the quantity of ice cubes, which the appliance can make in one day. Occasionally a small number of ice cubes may remain inside the box. If the ice gets stuck, this will result in abnormal operation of the ice cube maker. To avoid this problem, remove the icebox and rearrange the ice cubes, and remove the ice cubes which cannot be separated. You may hear ice being dropped into the storage compartment. This is normal.



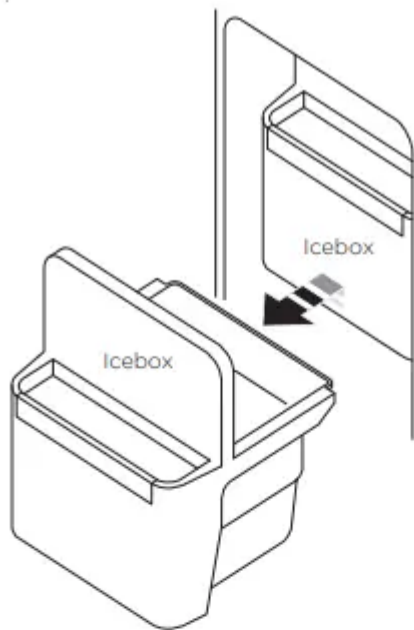


Fig.11 Removing icebox

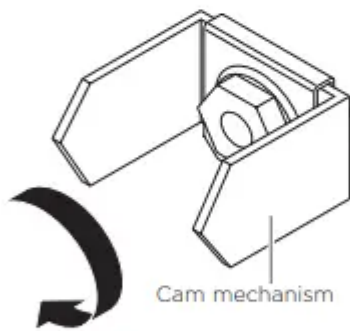


Fig.12 Rotating cam mechanism

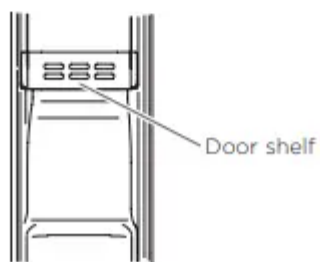


Fig.13 Installation of extra door shelf

Important!

- Always keep the ice cube outlet clean and clear of obstructions.
- Turning the ice maker off and removing the icebox enables extra space for food storage. Install the additional door shelf at the position above the inlet on the freezer door (Fig. 13).

- Avoid contact with the moving parts of the ice maker and do not place your fingers on the automatic ice making mechanism while the refrigerator is in operation.
- Do not use ice cubes which have become discoloured, usually appearing a greenish blue. If discolouration is observed, contact your Fisher & Paykel service agent.
- Ensure the ice maker is connected to the filter and to a potable water supply.
- Installation of the water connection must be completed by a qualified service technician or qualified plumber.

Special Features


Fruit and vegetable bins

The fruit and vegetable bin provides a humid environment for your produce ensuring moisture and nutrients are retained, and your fruit and vegetables are kept fresher for longer.

To remove the bin, pull it out until it stops, then lift and continue to slide the bin until it is fully extended.

Fruit and vegetable bin humidity slide

The bin has a humidity control slide that can be adjusted to the fruit or vegetable setting depending on what is being stored in the bins.

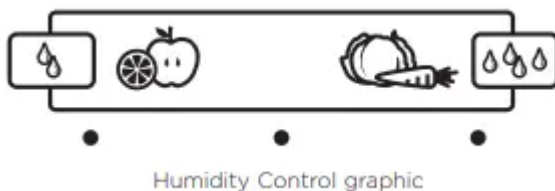

Humidity Control graphic

- If you are storing fruit, set the humidity slide to the fruit setting (left side).
- If you are storing vegetables, set the humidity slide to the vegetable setting (right side).
- If you are storing a mixture of fruit and vegetables, position the humidity slide in the centre.

Door alarms

If the refrigerator or freezer door is left open the alarm will beep at regular intervals to remind you to close the door.

Fault alarms

In the unlikely event of a fault, a fault code will be displayed on the control panel. Please take note of the fault code and contact our Customer Care Centre. Contact details are in the back of the book.

Water dispenser (Ice & Water models only)

The water dispenser is located on the front of the small door. When pressing the dispenser pad, the selection chosen on the control panel will dispense (water, cubed ice or crushed ice).

Drip tray (Ice & Water models only)

The tray at the bottom of the dispenser is designed to collect small spills. It has been designed to be removed for cleaning purposes. It does not drain; to empty remove the drip tray and wipe up overflow.

CLEANING CARE – INTERIOR

Interior


- It is important to keep the interior of the refrigerator and freezer clean to help prevent food from becoming contaminated during storage.
- The amount and types of food stored determines how often cleaning should be carried out (ideally once every 1 to 2 weeks) in the refrigerator.
- Remove the shelves, door shelves and bins and rinse these parts in a mixture of warm water and liquid dishwashing detergent. Rinse and dry the shelves and bins thoroughly before replacing them into the refrigerator.
- Wipe over the interior surfaces with a mixture of warm water and liquid dishwashing detergent or baking soda dissolved in warm water (add 1 tsp of baking soda to each 500 mls of water). Rinse with clean water.
- To help remove “old stale refrigerator” smells add a few drops of vanilla essence or vinegar to the water before cleaning.
- Do not use harsh, abrasive cloths or cleaners or highly perfumed, strong smelling cleaners or solvents on any part of the refrigerator as they can cause damage.

Glass shelves

Clean with warm water and detergent or a glass cleaner. If cleaning the shelves without removing from the cabinet, use only warm water and detergent as a glass cleaner can damage the plastic components of your refrigerator.

To remove the shelf, tilt the front upwards so that the restraining pegs are clear of the side guides and pull towards you. Keep the shelf tilted to allow the retaining stops to clear the side guides.

When repositioning, make sure the shelf is pushed back fully and the retaining stops have located securely.

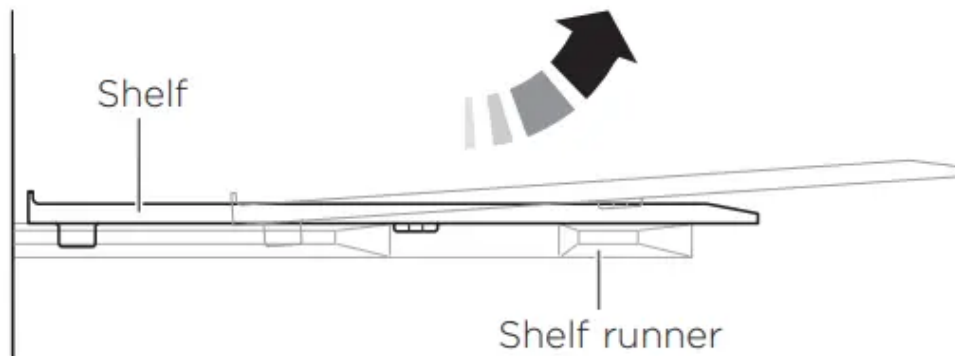

Removing fridge shelf

CLEANING CARE – EXTERIOR

Exterior

Stainless exterior doors

- It is important when cleaning the exterior door surface of your refrigerator, to only use liquid dishwashing detergent dissolved in warm water and a soft cloth.
- Dry the door with a clean, lint free cloth.
- The use of any abrasive or stainless steel cleaners and solvents will damage the door surface.

Other exterior surfaces

- Clean all other exterior surfaces with a mix of warm water and liquid dishwashing detergent, and a soft cloth.
- If necessary, clean the magnetic door gasket and the centre door gaskets with an old toothbrush, warm water and liquid dishwashing detergent.

Water dispenser pad (Ice & Water models only)

Clean the dispenser pad and drip tray with a mixture of warm water and a mild detergent. Dry thoroughly

Troubleshooting

All models

Appliance does not operate.

- No electricity at power outlet.
 - Check that the plug is correctly connected and power switched on.

- Check another appliance at the same outlet.
- Check house fuse.

Light not working.

- Light not functioning.
 - The LED light cannot be serviced by the user. Contact your Fisher & Paykel Dealer or Fisher & Paykel Authorised Repairer.
- Refrigerator not working.
 - Check refrigerator is turned on at wall.

Motor operates for long periods.

- Hot weather.
 - Minimise door openings to allow temperature to stabilise.
- Frequent door openings.
 - Minimise door openings to allow temperature to stabilise.
- Large amount of food recently added.
 - Minimise door openings to allow temperature to stabilise.
- Temperature control set too low.
 - See 'Operating Instructions' section
- Doors not sealing properly.
 - Check that cabinet is level and gasket seals are clean.

Storage compartments too warm.

- Temperature setting not correct.
 - See 'Operating Instructions' section
- Frequent door openings.
 - Minimise door openings to allow temperature to stabilise.
- Large amount of food recently added.
 - Minimise door openings to allow temperature to stabilise.

Food freezing in the fridge compartment.

- Temperature setting not correct.
 - See 'Operating Instructions' section
- Food placed directly in front of air outlets.
 - Move chill sensitive foods away from the centre back of the shelves.

Unfamiliar noises.

- Cabinet not stable or level.
 - See 'Installation Instructions'
- Freezer is defrosting.
 - See 'Installation Instructions'

Water in the vegetable bins.

- Condensation is formed by the water produced by fruit and vegetables.
 - A small amount of condensation is beneficial for fruit and vegetable storage.
 - Wipe out water with a cloth.

Exterior of cabinet is warm.

- This is normal.

Condensation on outside of refrigerator/ freezer.

- Not unusual during periods of high humidity.
 - Wipe dry.

Condensation inside fridge compartment.

- Frequent or long door openings.
 - Minimise door openings.
- Door gasket leaking.
 - Check that gasket is sitting flat and sealing tightly.
- Not unusual during periods of high humidity.
 - Wipe dry.

Door handles out of alignment.

- With time and usage, movement may occur.
 - See 'Installation instructions' – 'Stability instructions'.

Tray/bin does not slide in and out evenly.

- Packaging trapped.
 - Check to ensure no food or packaging is trapped behind the tray/bin.

Taste of odour in ice cubes.

- Transfer of odour/taste from strong smelling foods.
 - Wrap or cover strong smelling foods.

Excessive gasket noise.

- May be due to a build up of dirt and/or grime.
 - Clean gasket and apply Armorall.

Door not closing.

- An obstruction is blocking door closing.
 - Move obstruction.

Ice & Water models only

Automatic ice maker does not work.

- Ice maker has not been turned on.
 - Switch on ice maker.
- Water supply turned off or not connected.
 - Connect water supply.
- Freezer compartment not working.
 - Contact Customer Care.
- Water pressure too low.
 - Check water pressure.
- Water line kinked/squashed.
 - Check water line for kinks/squashing.
- Filter clogged.
 - Water filter may need replacing.
- Ice cubes stick in ice bin.
 - Remove ice bin, loosen cubes and remove clumped ice. Refit ice box.

Ice cubes have odour/taste.

- Unsealed packages may be transmitting odour/taste.
 - Old cubes need to be discarded.
 - Ensure food packaging is sealed.
 - Interior of freezer needs cleaning.
 - Ice storage bin needs to be emptied and washed.
 - Clean refrigerator.

- Poor taste from incoming water.
 - Filter may need changing.
 - A new filter may need to be installed.

Slow ice cube freezing.

- Door may have been left ajar.
 - Close door.
- Freezer compartment too warm.
 - Turn temperature to a colder setting

Wet ice/ ice clumping.

- Low water pressure.
 - Check water pressure.
- Filter blocked.
 - Replace filter.
- Long freezer door openings.
 - Gently tap ice to unstick or, if large clumps occur, empty ice bin and make new ice.
- High ambient temperature.
 - Gently tap ice to unstick or, if large clumps occur, empty ice bin and make new ice.
- Ice bin left out of freezer compartment for a length of time.
 - Gently tap ice to unstick or, if large clumps occur, empty ice bin and make new ice.
- Ice will stick together over time.
 - Gently tap ice to unstick or, if large clumps occur, empty ice bin and make new ice.

Water has poor taste/odour.

- Refrigerator not used for an extended period.
 - Dispense 10 L of water so fresh water supply is replenished.
- Water dispenser does not work.
 - Water supply turned off or not connected.

- Turn water on.
 - Press dispenser for 1 minute to remove trapped air from water line and to fill the water system.
- Supply line may be blocked.
 - Check supply for kinks or leaks.
- On first installation there may be air in water system.
 - To remove air, run 3 L of water through the dispenser.
- Filter may be blocked and need replacing.
 - Replace filter (see back of this booklet for Customer Care contact details).
- Water frozen in tank.
 - Increase temperature to a warmer setting in fresh food compartment and freezer.

Water in first glass is warm.

- Water dispenser not used for extended period.
 - Discard first glass of water dispensed.
- Tank capacity used recently.
 - Allow water time to cool.

Drips overflow drip-shelf.

- Air trapped in tank.
 - Flush 3 L water through dispenser, stopping intermittently.
- New filter installed.
 - Flush 10 L water through filter and then 3 L through dispenser.

Water flow rate has slowed down.

- Filter cartridge is restricted.
 - Replace filter as soon as possible .

Ice buildup inside freezer compartment.

- Freezer door not closing tightly.
 - Arrange items in freezer so door can close tightly.
 - Check and clean door gasket seal.



Ice maker sounds.

- Normal ice maker operation.
 - Refer to refrigerator sounds.

Small or large ice cubes.

- Insufficient or excessive water pressure.
 - Check water pressure.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.