


This is User Manual of Microwave Oven

## FEATURES OF THE OVEN

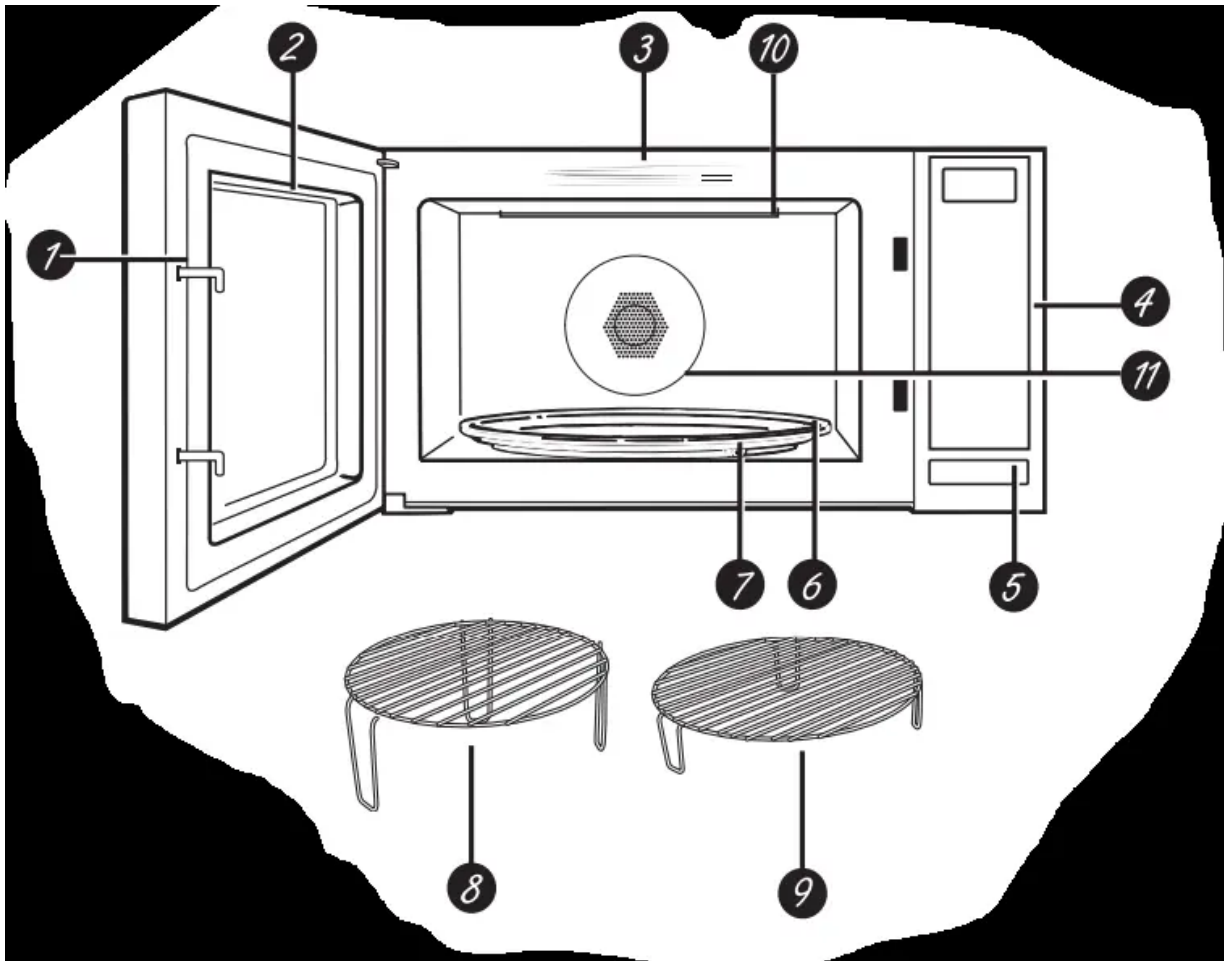

1. Door Latches.
2. Window with Metal Shield. Screen allows cooking to be viewed while keeping microwaves confined in the oven.
3. Convenience Guide.
4. Control Panel Display.
5. Door Latch Release. Press latch release to open door.
6. Removable Turntable. Turntable and support must be in place when using the oven. The turntable may be removed for cleaning.
7. Removable Turntable Support. The turntable support must be in place when using the oven.
8. Tall Rack
9. Short Rack
10. Broiler Element
11. Convection Element

## Controls

You can microwave by time or with the convenience features. Not all features on all models.

Profile Model			Café Model		
Popcorn	Warm	Mute	Warm		Mute
Beverage	Sensor Cook	Auto Defrost	Beverage	Auto Bake	Auto Roast
Conv Bake	Broil	Conv Roast	Popcorn	Sensor Cook	Auto Defrost
Cook Time	Add 30 Sec	Power Level	Conv Bake	Broil	Conv Roast
<b>1</b> 170° F	<b>2</b> 250° F	<b>3</b> 275° F	<b>1</b> 170° F	<b>2</b> 250° F	<b>3</b> 275° F
<b>4</b> 300° F	<b>5</b> 325° F	<b>6</b> 350° F	<b>4</b> 300° F	<b>5</b> 325° F	<b>6</b> 350° F
<b>7</b> 375° F	<b>8</b> 400° F	<b>9</b> 425° F	<b>7</b> 375° F	<b>8</b> 400° F	<b>9</b> 425° F
Set Clock	<b>0</b>	Timer On/Off	Set Clock	<b>0</b>	Timer On/Off
Cancel Off		Start Pause	Cancel Off		Start Pause
Control Lock Hold 3 Sec			Control Lock Hold 3 Sec		



# COOKING CONTROLS



COOK TIME	Press pad to enter the desired time cook.
ADD 30 SEC	Starts the microwave in increments of 30 seconds.
POWER LEVEL	Display the power level setting for each cycle. Can be manually adjusted.
SET CLOCK	Press pad to set clock: factory setting is a 12 hour clock display.
START/PAUSE	Starts every function.
CANCEL/OFF	Cancels current selection or turns off the selection.
MUTE	Turns off the end of cycle notification and all microwave alerts.
TIMER/ON/OFF	Can be set for up to 99 minutes and 99 seconds.
EXPRESS COOK	Starts the microwave oven with preset amount of time.
TEMPERATURE PRESETS	Automatically sets the cook temperature to the preset temperature labelled on the
<b>Microwave Cooking Features</b>	
SENSOR COOK	A sensor in the microwave cavity detects humidity released from the food as it heats and adjusts the cook time accordingly.
POPCORN	Cooks based on user selection of bag size.
BEVERAGE	Cooks based on user selection of beverage size.
AUTO DEFROST	Defrosts based on user selection of food and weight.
<b>Convection Features</b>	

CONVECTION BAKE	Circulates hot air through the microwave oven cavity with a fan for baking performance.
AUTO BAKE	Provides suggested cooking times and temperatures for selected food type. Cafe m only
CONVECTION ROAST	Circulates hot air and microwaves through the microwave oven cavity with a fan for roasting performance.
AUTO ROAST	Provides suggested cooking time and temperature for selected food type. Cafe m only
WARM <b>Broil Feature</b>	Maintain a temperature between 170-190 degrees for a maximum time of 90 minutes.
BROIL	Uses a thermal element to quickly grill/broil foods.

## BASIC FEATURES

### Cook Time

Allows you to microwave for any time up to 99 minutes and 99 seconds.

## Cook Time

You may open the door during Cook Time to check the food. Close the door and press START/PAUSE to resume cooking.

**Power level 10 (HIGH)** is automatically set, but you may change it for more flexibility.

1. Press the COOK TIME button.
2. Enter cooking time.
3. Change Power Level if you don't want full power.  
(Press POWER LEVEL. Enter power level 1-10.)
4. Press the COOK TIME button again to set a second cook time (if desired) that will be executed after the first cook time expires.
5. Change Power Level for second cook time if you don't want full power. (Press POWER LEVEL. Enter power level 1-10.)
6. Press the START/PAUSE button to start cooking.

### Express Cook

This is a quick way to set cooking time for 1-5 minutes.



Pressing number pad buttons 1 through 6 will activate Express Cook, and food will be cooked on microwave mode for a time of 1-6 minutes, depending on what number was pressed (1 = 1 minutes, 2 = 2 minutes, etc.).

### Add 30 Sec

It will add 30 seconds to the time counting down each time the pad is pressed. Each touch will add 30 seconds, up to 99 minutes and 99 seconds. The oven will start immediately when pressed.

### Changing the Power Level

The power level may be entered or changed before entering the time for Cook Time.

1. Press COOK TIME.

2. Enter cooking time.
3. Press POWER LEVEL to select power level.
4. Press START.

Variable power levels add flexibility to microwave cooking. The power levels on the microwave oven can be compared to the surface units on a range. Each power level gives you microwave energy a certain percent of the time. Power level 7 is microwave energy 70% of the time. Power level 3 is energy 30% of the time. Most cooking will be done on HI which gives you 100% power. HI power level will cook faster but food may need more frequent stirring, rotating or turning over. A lower setting will cook more evenly and need less stirring or rotating of the food. Some foods may have better flavor, texture or appearance if one of the lower settings is used. Use a lower power level when cooking foods that have a tendency to boil over, such as scalloped potatoes.

Rest periods (when the microwave energy cycles off) give time for the food to “equalize” or transfer heat to the inside of the food. An example of this is shown with power level 3—the defrost cycle. If microwave energy did not cycle off, the outside of the food would cook before the inside was defrosted. Here are some examples of uses for various power levels:

**HI:** Fish, bacon, vegetables, boiling liquids.

**Med-High 7:** Gentle cooking of meat and poultry; baking casseroles and reheating.

**Medium 5:** Slow cooking and tenderizing for stews and less tender cuts of meat.

**Low 2 or 3:** Defrosting; simmering; delicate sauces.

**Warm 1:** Keeping food warm; softening butter.

<p><b>Set Clock</b></p> <p>Press pad to set clock. Factory setting is a 12 hour clock display</p>	
<p><b>Start/Pause</b></p> <p>Starts every function. This pad will also resume the function if cycle is stopped in the middle of operation. Will also stop function if selected in the middle of an operation.</p>	
<p><b>Cancel/Off</b></p> <p>Cancels current selection or turns off the selection</p>	
<p><b>Insert Food Reminder</b></p> <p>A reminder will show on the display if the user tries to start the cooking cycle without placing food inside the microwave oven within 5 minutes prior to starting the cooking cycle.</p>	
<p><b>Mute</b></p> <p>Turn off the end of cycle notification and all microwave alerts.</p>	
<p><b>Timer On/Off</b></p> <p>The timer does not start or stop the microwave. Can be set for up to 99 min and 99 seconds. Microwave/cooking cycles can be in operation while timer is on.</p>	
<p><b>Temperature Presets</b></p> <p>Pressing and holding number pad buttons 1 through 9 during a Convection Bake or Convection Roast mode will activate the Temperature Presets and the temperature will be set to the temperature displayed below the button pushed.</p>	
<p><b>Cooking Complete Reminder</b></p> <p>To remind you that you have food in the oven, the oven will display “Food is ready” and beep once a minute until you either open the oven door or press the CANCEL/ OFF button.</p>	



# MICROWAVE COOKING FEATURES

## Humidity Sensor

The Sensor Features detect the increasing humidity released during cooking. The oven automatically adjusts the cooking time to various types and amounts of food.

Do not use the Sensor Features twice in succession on the same food portion—it may result in severely overcooked or burnt food. If food is undercooked after the countdown, use Time Cook for additional cooking time.

- The proper containers and covers are essential for best sensor cooking.
- Always use microwave-safe containers and cover them with lids or vented plastic wrap. Never use tight sealing plastic containers—they can prevent steam from escaping and cause food to overcook.
- Be sure the outside of the cooking containers and the inside of the microwave oven are dry before placing food in the oven. Beads of moisture turning into steam can mislead the sensor.



Covered

Vented



Dry off dishes so they don't mislead the sensor.

## Sensor Cook

To use the Sensor Cook feature:

1. Press the SENSOR COOK button to select Food code.
2. Press START.

Food	Press pad this number of times	Weight/Portion
Potato	1	1-4 Pcs, 8-10 Oz./Pcs
Fresh Vegetables	2	1-4 Cup, 250 ml/Cup
Frozen Vegetables	3	1-4 Cup, 240 ml/Cup
Ground Meat	4	4-32 Oz.
Fish	5	4-24 Oz.

Sensor Cook

## Popcorn

To use the Popcorn feature:

1. Press the POPCORN button until bag size appears.

Press pad this number of times	Popcorn Weight
1	1.75 Oz
2	3.0 Oz
3	3.5 Oz

2. Press START.

## Popcorn

Use only with prepackaged microwave popcorn weighing 1.75, 3.0 to 3.5 ounces.

## Beverage

To use the Beverage feature:

1. Press BEVERAGE button until size appears.

Press pad this number of times	Size of Beverage
1	4 Oz.
2	8 Oz.
3	12 Oz.

2. Press START.

## Beverage

## Auto Defrost

To use the Auto Defrost feature:

1. Press the AUTO DEFROST button to select Food code
2. Enter weight.
3. Press START.

Food	Press pad this number of times	Weight/Portion
Meat	1	0.1 - 6.0 lbs.
Poultry	2	0.1 - 6.0 lbs.
Fish	3	0.1 - 6.0 lbs.

## Auto Defrost

## CONVECTION FEATURES

Convection cooking uses a heating element to raise the temperature of the air inside the oven. Any oven temperature from 170°F to 425°F may be set. A fan gently circulates this heated air throughout the oven, over and around the food, producing golden brown exteriors and rich, moist interiors.

Because the heated air is kept constantly moving, not permitting a layer of cooler air to develop around the food, some foods cook faster than in regular oven cooking.

### For Best Results...

- The rack is required for good air circulation and even browning.
- Always use the provided racks when convection cooking.
- We recommend the tall rack for cookies and the short rack for cakes, pizza, biscuits and pies. Do not use both racks at once.

### Convection Bake

To use the Convection Bake feature:

1. Press the CONVECTION BAKE button.
2. Enter the temperature.
3. Press START.
4. If desired, a cook time may be set by pressing the COOK TIME button. This can be done before or after preheat.
5. Wait for preheat tone, then insert food.
6. Press START.
7. The current oven temperature (during preheat) or the set oven temperature (after preheat) can be recalled at any time by pressing POWER LEVEL.

### Auto Bake (Café Model only)

To use the Auto Bake feature:

1. Press the AUTO BAKE button to select Food code.
2. Enter weight or portion for French Fries menu only (other menu's weight/portion already set).
3. Press START.
4. Wait for preheat tone then insert food.
5. Press START.
6. A default time and temperature will be set based on the food selection, but it can be changed at any time.

<b>Food</b>	<b>Press pad this number of times</b>	<b>Weight/Portion</b>
Frozen Pizza	1	10 Oz.
Muffins	2	6 Pcs, 85g/Pcs
Biscuit/Dinner Roll/Bread Stick	3	7 Oz.
Frozen French Fries	4	4-16 Oz.

## **Warm**

To use the Warm feature:

1. Press the WARM button once to warm food on low.
2. Press the WARM button twice to warm food on high.
3. Press START.

## **Convection Roast**

To use the Convection Roast feature:

1. Press the CONVECTION ROAST button.
2. Enter the temperature.
3. Press START.
4. If desired, a cook time may be set by pressing the COOK TIME button. This can be done before or after preheat.
5. Wait for preheat tone, then insert food.
6. Press START.
7. The current oven temperature (during preheat) or the set oven temperature (after preheat) can be recalled at any time by pressing POWER LEVEL.

<b>Food</b>	<b>Press pad this number of times</b>	<b>Weight/Portion</b>
Beef	1	2.0 - 4.0 lbs.
Whole Chicken	2	2.5 - 6.0 lbs.
Turkey Breast	3	3.0 - 6.0 lbs.
Pork	4	2.0 - 4.0 lbs.

## **Broil Features**

### **Broil**

To use the Broil feature:

1. Press the Broil button.
2. Enter the cooking time.
3. Press START.

## COOKWARE TIPS

### Convection Bake Cooking or Warming

Metal Pans are recommended for all types of baked products, but especially where browning or crusting is important.

Dark or dull finish metal pans are best for breads and pies because they absorb heat and produce crisper crust.

Shiny aluminum pans are better for cakes, cookies or muffins because these pans reflect heat and help produce a light tender crust.

Glass or Glass-Ceramic casserole or baking dishes are best suited for egg and cheese recipes due to the cleanability of glass.

### Convection Roast Cooking

**Glass or Glass-Ceramic** baking containers are recommended. Be sure not to use items with metal trim as it may cause arcing (sparking) with oven wall or oven shelf, damaging the cookware, the shelf or the oven.

**Heat-Resistant Plastic** microwave cookware (safe to 450°F) may be used, but it is not recommended for foods requiring crusting or all-around browning, because the plastic is a poor conductor of heat.

Cookware	Microwave	Convection Bake or Warm	Convection Roast
Heat-Resistant Glass, Glass-Ceramic (Pyrex®, Fire King®, Corning Ware®, etc.)	Yes	Yes	Yes
Metal	No	Yes	No
Non Heat-Resistant Glass	No	No	No
Microwave-Safe Plastics	Yes	No	Yes*
Plastic Films and Wraps	Yes	No	No
Paper Products	Yes	No	No
Straw, Wicker and Wood	Yes	No	No

\*Use only microwave cookware that is safe to 450°F.

# CARE AND CLEANING

## Inside

- **Walls, Floor, Inside Window, Metal and Plastic Parts on the Door**

- Some spatters can be removed with a paper towel, others may require a damp cloth. Remove greasy spatters with a sudsy cloth, then rinse with a damp cloth. Do not use abrasive cleaners or sharp utensils on oven walls.
- To clean the surface of the door and the surface of the oven that come together upon closing, use only mild, non-abrasive soaps or detergents using a sponge or soft cloth. Rinse with a damp cloth and dry.
- Never use a commercial oven cleaner on any part of your microwave.

- **Removable Turntable and Turntable Support**

- To prevent breakage, do not place the turntable into water just after cooking. Wash it carefully in warm, sudsy water or in the dishwasher. The turntable and support can be broken if dropped. Remember, do not operate the oven without the turntable and support in place.

## Outside

**Do not use cleaners containing ammonia or alcohol on the microwave oven. Ammonia or alcohol can damage the appearance of the microwave.**

- **Case**

- Clean the outside of the microwave with a sudsy cloth. Rinse with a damp cloth and then dry. Wipe the window clean with a damp cloth.

- **Control Panel and Door**

- Wipe with a damp cloth. Dry thoroughly. Do not use cleaning sprays, large amounts of soap and water, abrasives or sharp objects on the panel—they can damage it. Some paper towels can also scratch the control panel.

- **Door Surface**

- It is important to keep the area clean where the door seals against the microwave. Use only mild, nonabrasive detergents applied with a clean sponge or soft cloth. Rinse well.

- **Power Cord**

- If the cord becomes soiled, unplug and wash with a damp cloth. For stubborn spots, sudsy water may be used, but be certain to rinse with a damp cloth and dry thoroughly before plugging cord into outlet.

## **Stainless Steel**

**Do not use a steel-wool pad; it will scratch the surface.**

To clean stainless steel surfaces, use a hot, damp cloth with a mild detergent suitable for stainless steel surfaces. Use a clean, hot, damp cloth to remove soap. Dry with a dry, clean cloth.

Apply cleaner with a damp sponge. Use a clean, hot, damp cloth to remove cleaner. Dry with a dry, clean cloth. Always scrub lightly in the direction of the grain.

After cleaning, use a stainless-steel polish, such as Stainless Steel Magic®, Revere Copper and Stainless Steel Cleaner® or Weno! All Purpose Metal Polish®. Follow the product instructions for cleaning the stainlesssteel surface.

## MICROWAVE TERMS

<b><i>Term</i></b>	<b><i>Definition</i></b>
<b><i>Arcing</i></b>	<p>Arcing is the microwave term for sparks in the oven. Arcing is caused by:</p> <ul style="list-style-type: none"><li>• the metal shelf being installed incorrectly and touching the microwave walls</li><li>• metal or foil touching the side of the oven.</li><li>• foil that is not molded to food (upturned edges act like antennas).</li><li>• metal such as twist-ties, poultry pins, gold-rimmed dishes.</li><li>• recycled paper towels containing small metal pieces.</li><li>• the turntable ring support being installed incorrectly</li></ul>
<b><i>Covering</i></b>	<p>Covers hold in moisture, allow for more even heating and reduce cooking time. Venting plastic wrap or covering with wax paper allows excess steam to escape.</p>
<b><i>Shielding</i></b>	<p>In a regular oven, you shield chicken breasts or baked foods to prevent over-browning. When microwaving, you use small strips of foil to shield thin parts, such as the tips of wings and legs on poultry, which would cook before larger parts.</p>
<b><i>Standing Time</i></b>	<p>When you cook with regular ovens, foods such as roasts or cakes are allowed to stand to finish cooking or to set. Standing time is especially important in microwave cooking. Note that a microwaved cake is not placed on a cooling rack.</p>
<b><i>Venting</i></b>	<p>After covering a dish with plastic wrap, you vent the plastic wrap by turning back one corner so excess steam can escape.</p>

## TROUBLESHOOTING

### Things That Are Normal With Your Microwave Oven

Steam or vapor escaping from around the door.

Light reflection around door or outer case.

Dimming oven light and change in the blower sound at power levels other than high.

Dull thumping sound while oven is operating.

TV-radio interference might be noticed while using the microwave. Similar to the interference caused by other small appliances, it does not indicate a problem with the microwave. Plug the microwave into a different electrical circuit, move the radio or TV as far away from the microwave as possible or check the position and signal of the TV/radio antenna.

### **Oven will not start**

- A fuse in your home may be blown or the circuit breaker tripped.
  - Replace fuse or reset circuit breaker.
- Power surge.
  - Unplug the microwave oven, then plug it back in.
- Plug not fully inserted into wall outlet
  - Make sure the 3-prong plug on the oven is fully inserted into wall outlet.
- Door not securely closed.
  - Open the door and close securely.

### **Control panel lighted, yet oven will not start**

- Door not securely closed.
  - Open the door and close securely.
- START button not pressed after entering cooking selection.
  - Press START
- Another selection entered already in oven and OFF/CLEAR button not pressed to cancel it.
  - Press OFF/CLEAR
- Cooking time not entered after pressing TIME COOK
  - Make sure you have entered cooking time after pressing TIME COOK.
- OFF/CLEAR was pressed accidentally.
  - Reset cooking program and press START.
- Food weight not entered after selecting AUTO DEFROST.
  - Make sure you have entered food weight after selecting AUTO DEFROST
- Food type not entered after pressing COOK.
  - Make sure you have entered a food type

## **CONTROL LOCKED appears on display**

- The control has been locked.
  - Press and hold OFF/CLEAR for about 3 seconds to unlock the control.

## **HOT appears on display**

- The temperature inside the oven is greater than 200°F.
  - This is normal.
- One of the sensor cooking pads was pressed when the temperature inside the oven was greater than 200°F.
  - These features will not operate when the oven is hot

### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.