 


User Guide Hoover FH13000 Spot Cleaner

Carton Contents

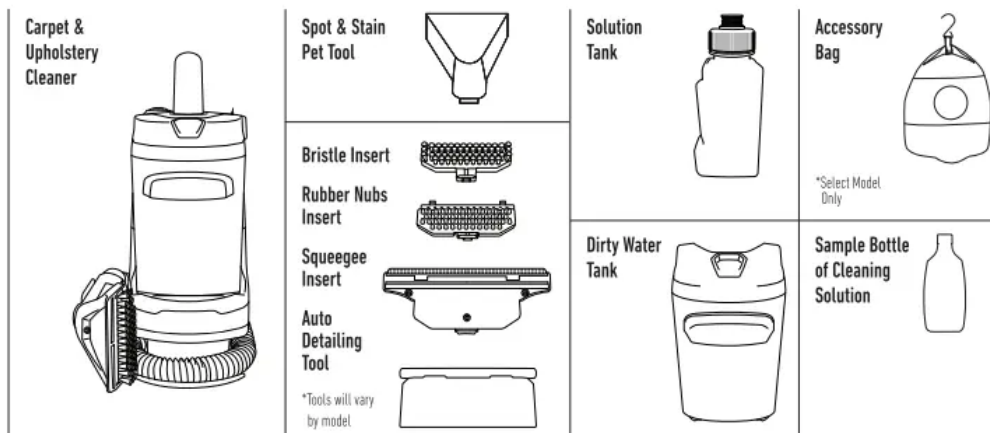

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

READ ALL SAFETY WARNINGS AND INSTRUCTIONS BEFORE USING THIS PRODUCT.

 
WARNING: when using an electrical product, basic precautions should always be followed to avoid electric shock, fire, and/or serious injury, including the following:

- Fully assemble product prior to use.
- Operate cleaner only at voltage specified on data plate on bottom of cleaner.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before cleaning or servicing
- Do not expose to rain, store indoors.
- Do not immerse. Use only on surfaces moistened by cleaning process.
- To Reduce the Risk of Fire and Electric Shock due to internal component damage, use only HOOVER Cleaning Fluids intended for use with this appliance. See the Cleaning Fluid section (page 8) of this manual.
- Do not allow to be used as a toy. Not intended for use by children age 12 and under.
- Close supervision is necessary when used by or near children. To avoid injury or damage, keep children away from product, and do not allow children to place fingers or other objects into any openings.
- Use only as described in this manual. Use only manufacturer's recommended attachments and products.

- Do not use product with damaged cord or plug. If product is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, call customer service at 1-800-944-9200 prior to continuing use
- Do not pull or carry by cord. Use cord as a handle. Close @ door on cord, or pull cord around sharp edges or corners. Do not place product on cord. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or fine wood sandings, or use in areas where they may be present
- Connect to a properly grounded outlet only. See Grounding Instructions.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters and tanks in place
- Do not clean over floor electrical outlets.
- Put product away after use to prevent tripping accidents



Product Guide

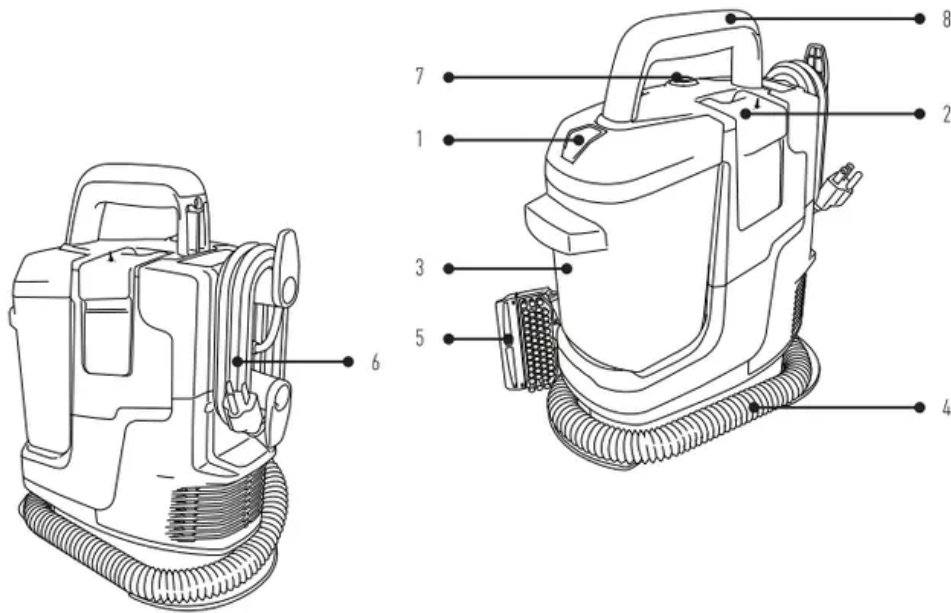

Tank Release Button

Solution Tank

Dirty Water Tank

Cleaning Hose

Spot & Stain Pet Tool

Power Cord

Power Button

 
Carry Handle

Before You Begin Cleaning

- Don't use the carpet cleaner as a dry Move furniture out of area to be vacuum cleaner. cleaned. Place aluminum foil or wax paper under legs of furniture too heavy to move to prevent wood finishes from staining carpet. Pin up furniture skirts and draperies.
- Use your HOOVER' portable carpet cleaner only if upholstery fabric is marked with a "W" (for "wet" clean) or "SIW" (for "solvent/dry" or "wet clean). Don't clean fabric marked "S" ("solvent/dry" clean only)
- Test for colorfastness in a small, hidden area. Gently rub surface with a dampened white cloth. Wait ten minutes and check for color removal or bleed with @ white paper towel.
- Wrap cord around the cord hooks for convenient storage. Attach the plug end to the cord
- For fast cord release. simply turn upper cord wrap downward.

Getting Started With Your PowerDash" Spot Cleaner

1. Remove Solution Tank from the side of the unit.

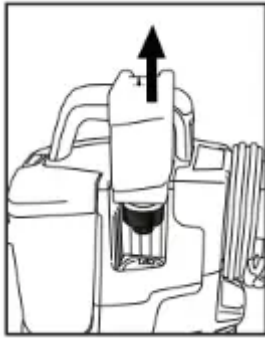


2. Remove the cap from the tank.




3. Add HOOVER cleaning solution to the Solution fill line.



 4. Replace and Tighten cap. Slide the Tank back into the unit to secure the tank.

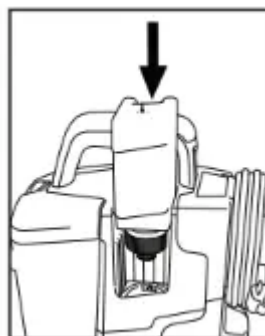

 5. Unwrap hose from unit. Select preferred tool and make sure it is attached securely.

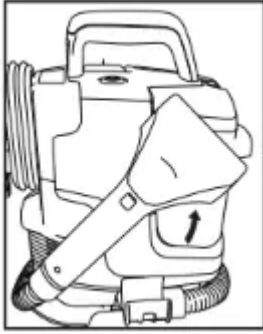

Cleaning Fluid:

 
SEE THE HOOVER'S SOLUTIONS GUIDE insert or visit Hoover.com/cleaning-solutions.

CAUTION: Not to be used for grooming a pet.


CAUTION: Do not use this extractor on HARD FLOORS UNLESS YOU HAVE THE PROPER HARD FLOOR ATTACHMENT, USING THIS PRODUCT ON HARD FLOORS MAY SCRATCH OR DAMAGE YOUR FLOOR.

How to Clean Carpets with your PowerDash Spot Cleaner


1. Plug power cord into electrical outlet.

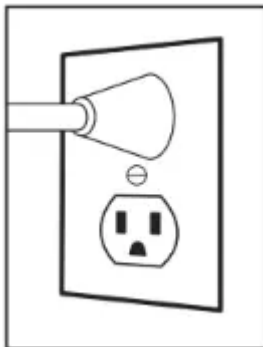

 2. Press Red Button on top of unit to turn ON.

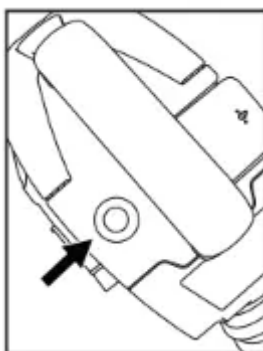

 3. Spray a generous amount of cleaning solution over the soiled area by pressing the trigger behind the tool and scrub the stain in a back and forth motion.

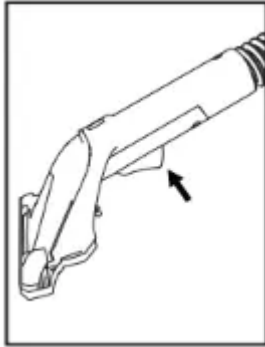

4. To lift the stain, suction up the dirt and cleaning solution by applying downward pressure on the front of the cleaning tool and pulling towards you. Repeat as needed



** Follow these steps for best results*

For best results, pretreat stains with a HOOVER spot treatment (see HOOVER Cleaning Solution Guide) to help loosen and remove even the most stubborn stains.

Distribute a generous amount of pretreat spray on spot, stain, or high traffic area.

Always follow specific directions found on solution label.

Wait 5-10 minutes before using machine.

IMPORTANT:

For full suction, it is important that the Dirty Water Tank is properly secured before cleaning.

CAUTION: Do not clean over floor electrical outlets. Water will drip from the tool after use and may puddle. To avoid damage to wood and laminate flooring and to avoid potential slip hazard, after use (a) do not leave the product on wood and laminate surfaces and move to a hard surface and (b) place unit on an absorbent material (such as a towel) to soak up drips.

Continue using dry strokes until little water is visible passing through the nozzle.

For best results. HOOVER recommends rinsing carpet with water only. This removes residual carpet cleaning solution. Fill Solution Tank with water and repeat. For heavily soiled areas. repeat. Avoid saturating carpet.

 
NOTE: Empty Dirty Water Tank when the motor sound becomes higher pitched and there is a loss in suction (see “Automatic shut-off”). You will also see the float rise and shut off suction at the same time.

Keeping your PowerDash Spot

This product contains no serviceable parts.

If appliance is not working as it should. has been dropped. damaged. left outdoors. or dropped into water. call customer service at 1-800-944-9200 prior to continuing use.


1. Empty Dirty Water Tank. Press TANK RELEASE button then lift lid off for emptying and rinsing. Clean water will help remove dirt & debris from the tank. Let Air Dry before reinstalling.

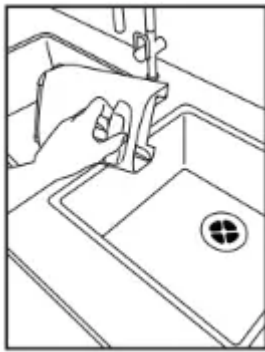


2. Rinse hand Tool under faucet. Remove nozzle cover by pressing release button on top.



 
3. Remove Insert and rinse under faucet.

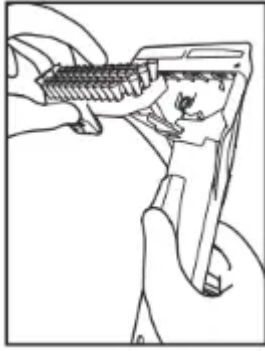

 
4. Clean out Debris from red screen after every use for best performance.

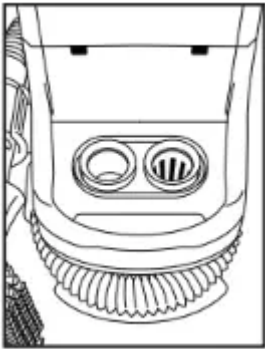

 5. Empty Solution Tank and let air dry.

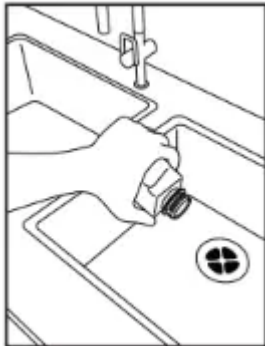

 6. You can remove and access the hose for cleaning, by removing the three screws on the bottom of the carpet cleaner. Once removed you will slide the piece away from the unit.

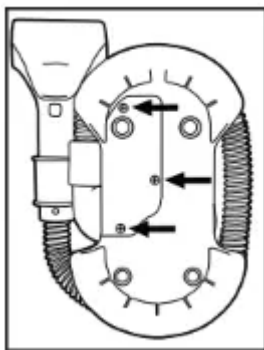

WARNING: To reduce the risk of personal injury ~ Unplug before cleaning or servicing

Thermal Protection

A thermal protector has been designed into your cleaner to protect it from overheating. When the thermal protector activates the cleaner will stop running.

If this happens proceed as follows:

1. Turn cleaner OFF and unplug it from the electrical outlet.
2. Empty dirty water tank.
3. Inspect for any obstructions. Clear obstructions if present.
4. When cleaner is unplugged and motor cools for 30 minutes. the thermal protector will deactivate and cleaning may continue.

If the thermal protector continues to activate after following the above steps. your cleaner needs servicing.

CORD STORAGE

Wrap the power cord around the cord hooks for convenient storage. Attach the plug end to the cord.

LUBRICATION

The motor is equipped with bearings which contain sufficient lubrication for their lifetime.

The addition of lubricant could cause damage. Do not add lubricant to motor bearings.

Need Help?

If you need further assistance:

If your product needs servicing within the warranty period. please contact Customer Service at 1-800-944-9200; Mon-Fri 7 am-6 pm EST. Always identify your carpet washer by the complete model number when requesting information or ordering parts. (The model number of the carpet washer is located on the data plate).

PLEASE DO NOT RETURN THIS CLEANER TO THE STORE.

QUESTIONS OR CONCERNS?

Contact Us: 1-800-944-9200

If you have any questions or. visit Hoover.com or connect with us:

Twitter: [@HooverUSA](https://twitter.com/HooverUSA)

Facebook: facebook.com/h Hoover

Do not return to store. See back of product for model number.

Troubleshooting

Cleaner won't run

POSSIBLE CAUSE

1. Power cord not firmly plugged into outlet.
2. Blown fuse or tripped breaker.
3. Needs service

POSSIBLE SOLUTION

1. Plug unit in firmly
2. Check fuse or breaker in home. Replace fuse/reset breaker in home

Cleaner won't pick up or low

POSSIBLE CAUSE

1. Dirty Water Tank is not installed correctly.
2. Dirty Water Tank is full.
3. Dirty Water Tank is clogged.
4. Air path is clogged.

POSSIBLE SOLUTION

1. Review Placing Dirty Water Tank in base of cleaner.
2. Empty Dirty Water Tank.
3. Clean Dirty Water Tank.
4. Remove Hose and Flush out with Clean Water.

Water escaping from Cleaner

POSSIBLE CAUSE

1. Dirty Water Tank is full.
2. Dirty Water tank is not installed correctly.
3. Solution Tank not installed properly.

POSSIBLE SOLUTION

1. Empty Dirty Water Tank.
2. Review Placing Dirty Water Tank in base of cleaner.
3. Review Solution Tank Installation.

Cleaner won't dispense

POSSIBLE CAUSE

1. Solution Tank is empty.
2. Solution Tank not installed properly.
3. Needs service.

POSSIBLE SOLUTION

1. Fill Solution Tank.
2. Review Solution Tank Installation.
3. Visit our website at www.hoover.com or call 1-800-944-9200.

Hose nozzle will not spray after filling the Clean Water Tank or Detergent Container.

POSSIBLE CAUSE

1. Air is trapped in the pump and hose.

POSSIBLE SOLUTION

1. Turn on the cleaner. If hose does not spray, prime the pump by lowering the hose down to the floor and hold the trigger for up to 1 minute.

Motor noise becomes high-pitched

POSSIBLE CAUSE

1. Dirty Water Tank is full.
2. Dirty Water Tank is clogged.
3. Air path is clogged.
4. The float in the Dirty Water Tank has been activated.

POSSIBLE SOLUTION

1. Empty Dirty Water Tank.
2. Clean the Dirty Water Tank.
3. Unclog air path.
4. Review Emptying & Cleaning the Dirty Water Tank.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

