


4 SLICE TOASTER

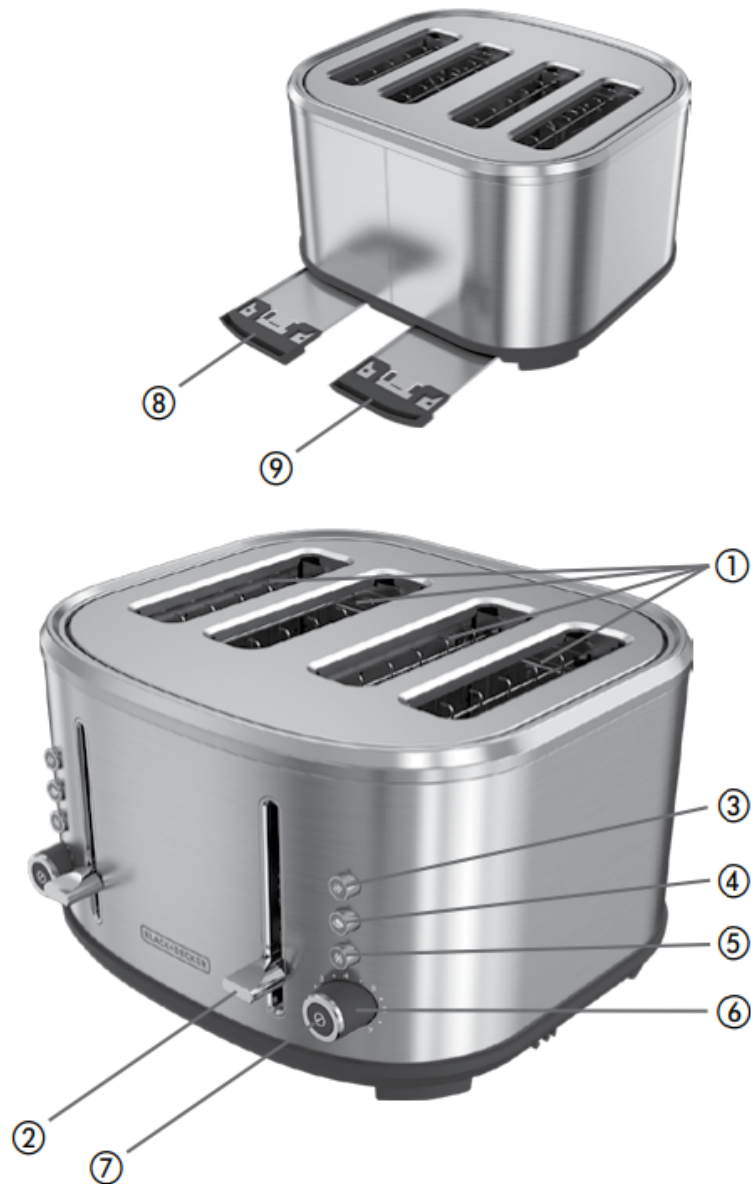

Product may vary slightly from what is illustrated.

1. Extra-wide slots with automatic adjusting guides
2. Toast lever
3. REHEAT button
4. BAGEL button
5. FROZEN button

6. Toast shade selector dial
7. CANCEL button (Off)
- † 8. Removable slide-out crumb tray, Left (Part# TR4300-01)
- † 9. Removable slide-out crumb tray, Right (Part# TR4300-02)
10. Cord wrap (under unit)

Note: † indicates consumer replaceable/removable parts

HOW TO USE

This product is for household use only.

GETTING STARTED

- Unpack the unit. Remove all packing material, any stickers, and the plastic band around the power plug.
- Please go to prodprotect website to register your appliance.
- Wipe the outside of the toaster with a damp cloth and dry thoroughly.
- Insert slide-out crumb tray in place.
- Plug the power cord into a standard wall outlet.

TOASTING

Your toaster features two sets of independent slots, each with individual buttons for: toast shade selection, bagel, frozen, reheat, and cancel. Be sure to adjust each side individually so that you can toast two different kinds of foods at once using different settings (for example, waffles on one side, bagels on the other).

1. Adjust the toast shade selector to the desired setting (1 to 7). For first use, set the dial to setting 4. Adjust as desired to suit your taste.


Tip: Toast thin slices on lower settings.

2. Place bread slices or other foods in the center of the slots and press down the toast lever until it locks in place.
 - The bread guides will automatically adjust to hold thick or thin slices in place.
 - When toasting is done, the toast lever goes up and the unit shuts off.

Tip: If needed, lift the toast lever upward to raise the toast above the slots.

3. If food becomes jammed, the built-in auto off function automatically shuts off the power.
4. Unplug the cord and move the toast lever up and down a few times to raise jammed food.

- Do not touch the metal area around the slots as it may be hot.
- Never use metal utensils to free food.

5. To interrupt toasting at any time, press the  CANCEL button.


REHEAT FUNCTION

Use to warm foods that have been toasted and may have cooled. The toaster will operate for 30 seconds on this setting.

1. Insert previously toasted food into slots.

Note: Do not reheat foods that have any toppings or spreads on them.

2. Press toast control lever until it locks into the down position.


3. Press the  REHEAT button. The button will illuminate until reheating is complete. When the reheating is complete, the toast control lever goes up and the unit shuts off.


4. Unplug the toaster when not in use.

BAGEL FUNCTION

1. Insert cut bagel into the slots with cut side toward the inside of the toaster.

2. Adjust the toast shade selector to the desired setting (1 to 7).

3. Press down the toast lever until it locks in place then press the  BAGEL button.

The button illuminates until toasting is complete or you press the  CANCEL button.

Important: You must press down the toast lever before selecting a function. If not, the function will not be activated.

4. If food becomes jammed, the built-in auto off function automatically shuts off the power.

5. Unplug the cord and move the toast lever up and down a few times to raise jammed food.


- Do not touch the metal area around the slots as it may be hot.
- Never use metal utensils to free food.


6. To interrupt toasting at any time, press the CANCEL button.


FROZEN FUNCTION

1. Place food into the toaster slots.


2. Adjust the toast shade selector to the desired setting (1 to 7).

3. Press down the toast lever until it locks into place, then press the  FROZEN button.

The button illuminates until toasting is complete or you press the  CANCEL button

Important: If you select the wrong button, you must press the  CANCEL button and then select the button you want after you press down the toast lever. HELPFUL TIPS

4. If food becomes jammed, unplug the cord and move the toast lever up and down a few times to raise jammed food.

5. To interrupt toasting at any time, press the  CANCEL button.

CARE AND CLEANING

This product contains no user-serviceable parts. Refer service to qualified service personnel.

CLEANING

Always unplug the cord from the electrical outlet and allow the toaster to cool before cleaning. Do not immerse the toaster in water.

Note: Do not allow debris to build up in the crumb trays.

CRUMB TRAYS

1. Grasp the handles at the back of the toaster and slide out the crumb trays.
2. Dispose of crumbs and wash the tray with water and mild dish detergent. The trays are not dishwasher safe. Remove stubborn spots using a nylon mesh pad.
3. Dry trays thoroughly before sliding back into the toaster.

CLEANING OUTSIDE SURFACES

Unit gets hot. Allow the toaster to cool completely before cleaning.

- Wipe the exterior with a damp cloth or sponge and dry with a paper towel.
- Do not use strong cleaners or abrasives that may scratch surfaces and never spray cleaners directly onto the toaster.

STORAGE

Use the cord wrap on the bottom of the toaster to minimize clutter on your counter and for easy storage.

POLARIZED PLUG (120V MODELS ONLY)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way

ELECTRICAL CORD


- a) A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- b) Extension cords are available and may be used if care is exercised in their use.
- c) If an extension cord is used:
 - 1) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord; and
 - 3) The cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

Note: If the power cord is damaged, please contact the warranty department listed in these instructions.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact Consumer Support.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, push  CANCEL button, then remove plug from wall outlet.
- Do not use this appliance for other than intended use.
- Oversized foods, metal foil packages, or utensils must not be inserted in a toaster, as they may create a risk of fire or electric shock.
- A fire may occur if the toaster is covered or touching flammable material, including curtains, draperies, walls and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.
- When heating toaster pastries, always use the lightest toast color setting.
- Warning: To prevent electrical shock, unplug before cleaning.
- Warning: To reduce the risk of fire or electric shock, operate with crumb tray in place.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.